

**Autodesk®**

Lustre® 2009 Extension 1

A Discreet® Systems product

# Installation and Configuration Guide for Linux® Workstations



**Autodesk®**

© 2009 Autodesk, Inc. All rights reserved. Except as otherwise permitted by Autodesk, Inc., this publication, or parts thereof, may not be reproduced in any form, by any method, for any purpose.

Certain materials included in this publication are reprinted with the permission of the copyright holder.

### Trademarks

The following are registered trademarks or trademarks of Autodesk, Inc., in the USA and other countries: 3DEC (design/logo), 3December, 3December.com, 3ds Max, ADI, Algor, Alias, Alias (swirl design/logo), AliasStudio, AliasWavefront (design/logo), ATC, AUGI, AutoCAD, AutoCAD Learning Assistance, AutoCAD LT, AutoCAD Simulator, AutoCAD SQL Extension, AutoCAD SQL Interface, Autodesk, Autodesk Envision, Autodesk Intent, Autodesk Inventor, Autodesk Map, Autodesk MapGuide, Autodesk Streamline, AutoLISP, AutoSnap, AutoSketch, AutoTrack, Backdraft, Built with ObjectARX (logo), Burn, Buzzsaw, CAiCE, Can You Imagine, Character Studio, Cinestream, Civil 3D, Cleaner, Cleaner Central, ClearScale, Colour Warper, Combustion, Communication Specification, Constructware, Content Explorer, Create>what's>Next> (design/logo), Dancing Baby (image), DesignCenter, Design Doctor, Designer's Toolkit, DesignKids, DesignProf, DesignServer, DesignStudio, Design!Studio (design/logo), Design Web Format, Discreet, DWF, DWG, DWG (logo), DWG Extreme, DWG TrueConvert, DWG TrueView, DXF, Ecotect, Exposure, Extending the Design Team, Face Robot, FBX, Fempro, Filmbox, Fire, Flame, Flint, FMDesktop, Freewheel, Frost, GDX Driver, Gmax, Green Building Studio, Heads-up Design, Heidi, HumanIK, IDEA Server, i-drop, ImageModeler, iMOUT, Incinerator, Inferno, Inventor, Inventor LT, Kaydara, Kaydara (design/logo), Kynapse, Kynogon, LandXplorer, Lustre, Matchmover, Maya, Mechanical Desktop, Moldflow, Moonbox, MotionBuilder, Movimento, MPA, MPA (design/logo), Moldflow Plastics Advisers, MPI, Moldflow Plastics Insight, MPX, MPX (design/logo), Moldflow Plastics Xpert, Mudbox, NavisWorks, ObjectARX, ObjectDBX, Open Reality, Opticore, Opticore Opus, Pipeplus, PolarSnap, PortfolioWall, Powered with Autodesk Technology, Productstream, ProjectPoint, ProMaterials, RasterDWG, Reactor, RealDWG, Real-time Roto, REALVIZ, Recognize, Render Queue, Retimer, Reveal, Revit, Showcase, ShowMotion, SketchBook, Smoke, Softimage, Softimage!XSI (design/logo), SteeringWheels, Stitcher, Stone, StudioTools, Topobase, Toxik, TrustedDWG, ViewCube, Visual, Visual Construction, Visual Drainage, Visual Landscape, Visual Survey, Visual Toolbox, Visual LISP, Voice Reality, Volo, Vtour, Wire, Wiretap, WiretapCentral, XSI, and XSI (design/logo).

The following are registered trademarks or trademarks of Autodesk Canada Co. in the USA and/or Canada and other countries: Backburner, Multi-Master Editing, River, and Sparks.

All other brand names, product names or trademarks belong to their respective holders.

### Disclaimer

THIS PUBLICATION AND THE INFORMATION CONTAINED HEREIN IS MADE AVAILABLE BY AUTODESK, INC. "AS IS." AUTODESK, INC. DISCLAIMS ALL WARRANTIES, EITHER EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE REGARDING THESE MATERIALS.

Published by: Autodesk, Inc.  
111 McInnis Parkway  
San Rafael, CA 94903, USA

Title: Autodesk Lustre 2009 Extension 1 Installation and Configuration Guide for Linux Workstations  
Document Version: 4  
Date: August 5, 2009

# Contents

<b>Chapter 1</b>	<b>Introduction</b> . . . . .	<b>1</b>
	About This Guide . . . . .	1
	Intended Audience . . . . .	1
	Related Documentation . . . . .	2
	Notation Conventions . . . . .	2
	Contacting Customer Support . . . . .	2
	Safety Guidelines . . . . .	2
<b>Chapter 2</b>	<b>Installation Workflows</b> . . . . .	<b>5</b>
	Overview . . . . .	5
	Workflow for Upgrading the Software . . . . .	6
	Workflow for Reinstalling from Scratch or Upgrading Linux . . . . .	6
	Workflow for Connecting New Stone Direct Storage . . . . .	8
<b>Chapter 3</b>	<b>Setting Up Your Workstation Hardware</b> . . . . .	<b>9</b>
	Overview . . . . .	9
	Power and Air Conditioning Requirements . . . . .	10
	Rack Mount Requirements . . . . .	10
	Lustre Hardware and Software Components . . . . .	11
	Lustre Workstations . . . . .	11
	Other Components . . . . .	12
	Connecting Peripherals . . . . .	14
	Connecting the Autodesk Control Surface . . . . .	15
	Connecting Video Components . . . . .	16
	Connecting Audio Components . . . . .	17
	Connecting Media Storage . . . . .	18
	Connecting the Slave Renderer . . . . .	23
	Configuring your System BIOS . . . . .	25
	HP Z800 BIOS Settings . . . . .	25
	Restoring BIOS to Default Factory Settings . . . . .	26
	Updating your System BIOS . . . . .	26

<b>Chapter 4</b>	<b>Installing Red Hat Enterprise Linux</b> . . . . .	<b>29</b>
	Do I Need to Reinstall Linux? . . . . .	29
	Linux Installation Workflow . . . . .	30
	Linux Post-Installation Tasks . . . . .	32
<b>Chapter 5</b>	<b>Installing the DKU and the AJA OEM-2K Firmware</b> . . . . .	<b>33</b>
	Installing the DKU . . . . .	33
	Upgrading the AJA OEM-2K Firmware . . . . .	34
<b>Chapter 6</b>	<b>Configuring Storage</b> . . . . .	<b>37</b>
	Overview . . . . .	37
	Do I Need to Perform these Procedures? . . . . .	37
	Connecting to the RAID Controller for the First Time . . . . .	38
	Powering Up Your Storage . . . . .	38
	Connecting to the RAID Controllers . . . . .	38
	Creating Hardware LUNs . . . . .	39
	Rescanning New LUNs from the Host Operating System . . . . .	40
	Partitioning Disks or LUN devices as LVM-type Primary Partitions . . . . .	41
	Assembling the Disk or LUN Devices into a Logical Volume . . . . .	42
	Creating the XFS Filesystem on the LVM device . . . . .	44
	Creating a Mount Point and Mounting the Storage . . . . .	45
<b>Chapter 7</b>	<b>Installing Lustre on the Linux Workstation</b> . . . . .	<b>47</b>
	Overview . . . . .	47
	Installation Requirements Checklist . . . . .	47
	Installing Lustre . . . . .	48
<b>Chapter 8</b>	<b>Licensing and Starting the Application</b> . . . . .	<b>49</b>
	Licensing Workflow . . . . .	49
	Determining the Licenses You Require . . . . .	50
	Obtaining the Host ID . . . . .	50
	Requesting License Codes . . . . .	51
	Entering License Codes . . . . .	51
	Starting the Application for the First Time . . . . .	52
<b>Chapter 9</b>	<b>Configuring Slave Rendering</b> . . . . .	<b>53</b>
	Workflow for Configuring Slave Rendering . . . . .	53
	Configuring the Network Addresses . . . . .	54
	Installing the Slave Renderer Software and License . . . . .	55
	Configuring Read/Write Access to Storage from the Slave Renderer . . . . .	55
	Mounting the Storage on the Slave Renderer . . . . .	56
	Setting Up Lustre Projects to Use Slave Rendering . . . . .	57
<b>Chapter 10</b>	<b>Configuring Background Rendering</b> . . . . .	<b>59</b>
	About Background Rendering . . . . .	59
	Background Rendering Components . . . . .	60
	Workflow for Setting Up Background Rendering . . . . .	61
	Sharing the Storage for Read/Write Access from Background Render Nodes . . . . .	61
	Installing Backburner Manager and Backburner Web Monitor . . . . .	62
	Configuring Lustre to Detect Backburner Manager . . . . .	63
	Setting Up Render Nodes . . . . .	63
	Render Node Hardware and Software Requirements . . . . .	63
	Installing Linux on Render Nodes . . . . .	64
	Mounting the Storage on the Render Nodes . . . . .	65
	Installing and Configuring Burn for Lustre . . . . .	66

	Specifying the Background Rendering Path in Lustre . . . . .	69
<b>Chapter 11</b>	<b>Configuring BrowseD . . . . .</b>	<b>71</b>
	About BrowseD . . . . .	71
	Workflow for Configuring BrowseD . . . . .	72
	Starting and Stopping the BrowseD Service . . . . .	72
	Configuring Workstations to Use the BrowseD Server . . . . .	72
	Making BrowseD Directories Accessible from the Lustre Browser . . . . .	73
	Using BrowseD for Rendering with Burn for Lustre . . . . .	74
<b>Appendix A</b>	<b>Uninstalling the Application . . . . .</b>	<b>75</b>
	Using rmsoft to Uninstall your Application . . . . .	75
<b>Appendix B</b>	<b>Software, Project, and User Configuration Files . . . . .</b>	<b>77</b>
	Configuration File Overview . . . . .	77
	System Settings . . . . .	78
	<b>Index . . . . .</b>	<b>83</b>



# Introduction

# 1

## Topics in this chapter:

- [About This Guide](#) on page 1
- [Intended Audience](#) on page 1
- [Related Documentation](#) on page 2
- [Notation Conventions](#) on page 2
- [Contacting Customer Support](#) on page 2
- [Safety Guidelines](#) on page 2

## About This Guide

This guide provides information about installing Autodesk® Lustre® 2009 Extension 1 application software on the hardware components in your Lustre system. Use this guide in conjunction with the *Hardware Setup Guide* for your platform to install and configure the hardware and software components of your Lustre system.

---

**NOTE** In most cases, both hardware setup and application installation is done on delivery by an authorized technician, so you may not need to perform all of the procedures in these guides.

---

## Intended Audience

This guide assumes you have knowledge of the Linux® operating system, preferably a distribution from Red Hat® Linux. It also assumes familiarity with Linux networking terms, tools, and procedures.

If you plan to reconfigure your workstation or your storage, knowledge of computer hardware, storage and networking in a professional video/film production environment is recommended.

Do not attempt to carry out the procedures in this guide if you are not familiar with the concepts they present. Contact Autodesk Media and Entertainment Customer Support if you require further assistance.

If you are upgrading an existing workstation without reinstalling Linux, this document assumes you have *root* access to your system. If you do not have root access, contact your system administrator. The default root account password on an Autodesk workstation is *password*.

## Related Documentation

The complete documentation set is available in PDF (Portable Document Format). You can access the PDF files from the *Documentation* folder of the Lustre software disc, or from <http://www.autodesk.com/lustre-documentation>.

---

**NOTE** For the best results viewing and printing PDF files, use Adobe® Acrobat® Reader™ 6 or later. You can download a free copy of Acrobat Reader from the Adobe Web site (<http://www.adobe.com>).

---

## Notation Conventions

A number of style conventions are used throughout your documentation. These conventions and examples of their use are shown as follows.

Convention	Example
Text that you enter in a command line or shell appears in Courier bold. Press the Enter key after each command.	<b>install rpm -qa</b>
Variable names appear in Courier, enclosed in angle brackets.	<filename>
Feedback from the command line or shell appears in Courier.	limit coredumpsize
Directory names, filenames, URLs, and command line utilities appear in italics.	<i>/usr/discreet</i>

## Contacting Customer Support

For Autodesk Media and Entertainment Customer Support, visit <http://www.autodesk.com/support>.

Customer support is also available through your Autodesk reseller. To find a reseller near you, consult the reseller look-up database at <http://www.autodesk.com/resellers>.

## Safety Guidelines

Consider the following environmental and safety guidelines when working with hardware components:

- When you receive your shipment, check all the boxes for dents or other markings that may indicate damage during transport. If you suspect a component is damaged, carefully inspect it before setting up the system. If you receive a damaged component, call Customer Support.

---

**NOTE** Use the enclosed packing checklist to ensure that you received all of the parts.

---

- Place all components in an air-conditioned environment. All hardware components generate heat and must be kept cool.

- Make sure the rack on which hardware components are mounted is open or well ventilated. Follow the ventilation specifications that apply to your system.
- Keep all hardware components in a clean, dust-free location.
- Minimize vibration and humidity.
- Do not block the vents on the component housing.
- Do not drape anything, such as a jacket or a blanket, over hardware components.
- Make sure power is turned off on the components you are working on. It is a good idea to unplug components until all other connections are configured.
- Read and observe warning labels on hardware components, enclosures and drives.
- Always wear a grounded static wrist strap. Attach the strap's alligator clip to any grounded metal surface on the component's chassis that you are working on. Place the wristband around your wrist. It is also recommended to wear a heel strap or boot strap.
- Do not handle any components unnecessarily, particularly cards that slide in and out of PCI slots on their parent hardware components.
- Properly ground your audio components. Otherwise, you may have ground loops, or humming in the system. To ensure audio components are properly grounded, use the XLR-3 cables shipped with your system. Using any other cables may cause humming in the system.
- Minimize electromagnetic noise by separating digital data and power cables from analog audio cables and running them in different cable ducts.



# Installation Workflows

# 2

## Topics in this chapter:

- [Overview](#) on page 5
- [Workflow for Upgrading the Software](#) on page 6
- [Workflow for Reinstalling from Scratch or Upgrading Linux](#) on page 6
- [Workflow for Connecting New Stone Direct Storage](#) on page 8

## Overview

Your system is shipped with the operating system and the software already installed.

This chapter highlights three common installation workflows that you may need to perform, and lists the documentation relevant to each.

---

**NOTE** You should always identify and download the relevant documentation and software installation packages before proceeding with any installation procedures. Links to the software installation packages are provided in the release announcement you received from Autodesk.

---

- [Workflow for Upgrading the Software](#) on page 6
- [Workflow for Reinstalling from Scratch or Upgrading Linux](#) on page 6
- [Workflow for Connecting New Stone Direct Storage](#) on page 8

---

**NOTE** Each step in these workflows points to a section in this document for detailed instructions. The sections are in sequence, so once you finish performing the steps in one section, you do not need to come back to the high-level workflow, you can just continue to the next section for further instructions.

---

For details on the workstation hardware setup, it is recommended that you visit [www.autodesk.com/lustre-documentation](http://www.autodesk.com/lustre-documentation), select your application and version, and download the *Hardware Setup Guide* for your workstation model.

## Workflow for Upgrading the Software

Follow this workflow to to upgrade your software to a new version, service pack, or extension without reconfiguring your hardware or upgrading your operating system.

To determine whether you need to upgrade Linux for a new software version or hardware platform, see [Do I Need to Reinstall Linux?](#) on page 29. If you do need to upgrade Linux, follow the steps in the [Workflow for Reinstalling from Scratch or Upgrading Linux](#) on page 6 rather than this workflow.

### To upgrade the software:

- 1 Gather the necessary materials and documentation for your installation.

---

**NOTE** Make sure you read the Release Notes for the software version or service pack you plan to install. The Release Notes contain important procedures that you might need to perform **before** upgrading your software, as well as information on supported hardware, required system memory, BIOS version, Linux distribution, DKU version and AJA OEM-2K firmware version.

---

To download the latest Release Notes, go to [www.autodesk.com/lustre-documentation](http://www.autodesk.com/lustre-documentation), then select the version or service pack you plan to install.

- 2 Make sure the hardware meets all the system requirements for the new software version or service pack, as specified in the Release Notes for the version you plan to install.
- 3 Upgrade the Discreet® Kernel Utilities (DKU) to the required version. Refer to the latest Release Notes for the required firmware version and for update instructions. DKU update instructions are also available in [Installing the DKU](#) on page 33.
- 4 Update the AJA OEM-2K card firmware if necessary. Refer to the latest Release Notes for the required firmware version and for update instructions. Firmware update instructions are also available in [Upgrading the AJA OEM-2K Firmware](#) on page 34.
- 5 Install the software. See [Installing Lustre on the Linux Workstation](#) on page 47.
- 6 License your software, and start it for the first time. See [Licensing and Starting the Application](#) on page 49.

---

**NOTE** Re-licensing is not necessary if you are upgrading to a service pack of the same software version or extension.

---

## Workflow for Reinstalling from Scratch or Upgrading Linux

Follow this workflow when you need to completely rebuild your system: from cross-connecting the hardware peripherals and storage arrays, to installing the operating system, and installing, licensing, and configuring the software components.

Most of this workflow also applies when you need to upgrade the operating system without changing your hardware or storage setup. A new distribution of Linux may sometimes be required for a new version or service pack of the software, or for newer hardware platforms. To determine whether you need to upgrade Linux for a new application version or hardware platform, see [Do I Need to Reinstall Linux?](#) on page 29.

## To reinstall your system from scratch or upgrade Linux:

- 1 Gather the necessary materials and documentation for your installation.

---

**NOTE** Make sure you read the Release Notes for the version or service pack you plan to install. The Release Notes contain important procedures that you might need to perform **before** upgrading your software, as well as information on supported hardware, required system memory, BIOS version, Linux distribution, DKU version and AJA OEM-2K firmware version.

---

To download the latest Release Notes for your application version, go to [www.autodesk.com/lustre-documentation](http://www.autodesk.com/lustre-documentation), then select the version or service pack you plan to install.

- 2 Make sure the hardware meets all the system requirements specified in the Release Notes for the version you plan to install.
- 3 If you are reinstalling your hardware perform the following tasks:

---

**NOTE** Instructions and wiring diagrams for each of these steps can be found in [Setting Up Your Workstation Hardware](#) on page 9.

---

- Verify your hardware shipment, and make sure your facility meets the documented power and air conditioning requirements for the hardware components.
  - Connect all peripherals (mouse, keyboard, , graphics monitor, house network) to the proper ports on the workstation.
  - Connect the Control Surface to the proper ethernet and USB ports on the workstation.
  - Connect a VTR and a broadcast monitor to your workstation.
  - Connect and configure the audio hardware for your workstation.
  - Connect your storage arrays to the workstation, but **DO NOT** power them on before having installed Linux, to prevent the Linux installer from attempting to format the arrays and use them as system drives.
- 4 If necessary, update and configure the BIOS of your workstation. See [Configuring your System BIOS](#) on page 25.

---

**NOTE** The BIOS settings must be properly configured **before** installing Linux.

---

- 5 Install the required Autodesk distribution of Red Hat Enterprise Linux. See [Installing Red Hat Enterprise Linux](#) on page 29.
- 6 Install the required version of the Discreet Kernel Utility (DKU). Refer to the latest Release Notes for the required version and for update instructions. DKU update instructions are also available in [Installing the DKU](#) on page 33.
- 7 Update the AJA OEM-2K card firmware on your workstation if necessary. Refer to the latest Release Notes for the required firmware version and for update instructions. Firmware update instructions are also available in [Upgrading the AJA OEM-2K Firmware](#) on page 34.
- 8 If you are using a new Stone® Direct storage array, configure the RAID volumes, mount the storage, and format it. See [Configuring Storage](#) on page 37 for LUN creation instructions and XFS filesystem creation instructions.
- 9 Install the software. See [Installing Lustre on the Linux Workstation](#) on page 47.
- 10 License your software, and start it for the first time. See [Licensing and Starting the Application](#) on page 49.

---

**NOTE** Re-licensing is not necessary if you are upgrading to a service pack of the same software version or extension.

---

## Workflow for Connecting New Stone Direct Storage

Follow this workflow when you need to rebuild your Stone Direct storage array. For instance, this may be required when you purchase supplementary storage enclosures to expand available disk space.

---

**NOTE** You do not need to reinstall or re-license the software after changing your storage configuration.

---

**To connect new or expanded Stone Direct storage:**

- 1 Connect your storage enclosures to the workstation. See [Connecting Media Storage](#) on page 18.
- 2 Configure the RAID volumes and mount the storage. See [Configuring Storage](#) on page 37 for instructions.
- 3 Your new storage is now ready to use.

# Setting Up Your Workstation Hardware

# 3

## Topics in this chapter:

- [Overview](#) on page 9
- [Lustre Hardware and Software Components](#) on page 11
- [Connecting Peripherals](#) on page 14
- [Connecting the Autodesk Control Surface](#) on page 15
- [Connecting Video Components](#) on page 16
- [Connecting Audio Components](#) on page 17
- [Connecting Media Storage](#) on page 18
- [Connecting the Slave Renderer](#) on page 23
- [Configuring your System BIOS](#) on page 25

## Overview

This section contains peripherals, video, and storage wiring diagrams, as well as BIOS settings for the HP Z800 workstation.

---

**NOTE** This section does not contain information and diagrams for the older workstations supported in this version. For detailed information about setting up each workstation, see the Hardware Setup Guide for the respective workstation.

---

If you are only upgrading an existing application, you do not need to reconfigure your workstation. In most cases, hardware integration and application installation were done on delivery by an authorized technician.

Still, it is a good idea to familiarize yourself with the configuration procedures for the following reasons:

- To make sure your workstation BIOS settings correspond to the recommended settings.

- Many suspected problems with your system may be due to loosened connections or improperly configured devices.
- If you need to call Customer Support, familiarity with the hardware setup helps you assist in diagnosing problems.
- If you want to move your system at any time, or upgrade certain components, this chapter contains crucial information.

## Power and Air Conditioning Requirements

The values for power consumption and heat output were recorded on an Autodesk certified system with all of the required peripherals and certified components.

The following table summarizes the peak (at startup) power consumed by the HP Z800 system and the heat it generates under the maximum processing load produced by a Visual Effects, Finishing, and Colour Grading application.

Component	Quantity	Startup Amps (120V / 240V)	Cont. Amps (120V / 240V)	Watts	Heat (BTUs)
HP Z800 (with cards)	1	4.0 / 2.0	3.8 / 1.9	456	1556
Lucid ADA 88192	1	0.5 / 0.25	0.5 / 0.25	60	205
Stone® Direct XR storage chassis	1	3.8 / 1.9	2.78 / 1.39	334	1140
Stone Direct XE expansion chassis	1	3.75 / 1.88	2.3 / 1.15	276	942
Stone Direct XR + Stone Direct XE	1	6.41 / 3.2	5.2 / 2.6	624	2130

You must be able to meet the startup power requirement and have a climate control system with the capacity to maintain the temperature of these components under the maximum processing load. For each Watt of power consumed by the system, you must provide 3.413 BTU of air conditioning.

## Rack Mount Requirements

You can rack mount your system. Plan for sufficient space in your rack mount chassis to install the following components:

- The workstation (required rack space: 5U)
- An AJA OEM-2K breakout box (required rack space: 1U)
- A Stone® Direct storage chassis (XR model) (required rack space: 5U)
- Additional Stone Direct expansion chassis (XE model), as required (required rack space: 5U each)

# Lustre Hardware and Software Components

A Lustre system consists of a number of different hardware and software components. This section describes each of the hardware components in a Lustre installation, and the software associated with each component. You may or may not have all of the components listed here in your Lustre installation. The type of workgroup, as well as the feature set you purchase for each of the workstations in that workgroup, determine the components in your installation.

## Lustre Workstations

There are three kinds of Lustre workstations: the Master Station, the HD Station, and the Lustre Station. Every Lustre installation is built around either a Master Station or an HD Station. The optional Lustre Station offers a way to improve the efficiency and cost-effectiveness of a pipeline by offloading tasks that do not require the full feature set of the Master Station or HD Station.

### Master Station

The Master Station is designed for GPU-accelerated sessions where the colorist works together with the cinematographer. It includes an extensive creative toolset for elaborate visual design and grading, using up to 4K resolution and 16-bit files and for completing tasks like dust busting, conforming, rotoscoping, and capture/payout. It also includes SD and HD I/O, dual link and HSDL video formats, and the DI Pack, which consists of infrared channel dust removal and support for all standard input and output resolutions and bit-depths.

The Master Station can support up to three panels of the Autodesk Control Surface and, with an additional license, a Slave Renderer.

### HD Station

The HD Station is a cost-effective GPU workstation for conforming, preparing, grading, and mastering short-form and long-form HDTV projects, as well as HD film projects, and mastering to different formats. It does not include the DI Pack. File input is limited to 10-bit 2K resolution, and file output is limited to SD and 10-bit HD resolution.

The HD Station can support up to three panels of the Autodesk Control Surface and, with an additional license, a Slave Renderer. Dual link and HSDL video formats are available with the purchase of a separate video I/O license.

### Lustre Station

Tasks that do not require the direct intervention or supervision of the colorist can be efficiently handled by a Lustre Station. Multiple Lustre Stations can work in parallel to increase throughput and can be used for tasks such as dust-busting, preparatory work, fine-tuning creative sessions, conforming data from EDLs, updating editorial changes, and mastering to different formats using the real-time deliverables function. The Lustre Station includes the DI Pack, and the ability to create geometries and masks.

Primary colour grading on the Lustre Station requires a separate license. The following features also require an additional license: SD and HD I/O, dual link and HSDL video formats.

The Lustre Station does not support the Slave Renderer.

## Other Components

You can expand the features of your Lustre system and improve the efficiency of your workflow by adding any of the following components.

**Control Surface** The Autodesk Control Surface provides improved interactivity when colour grading film and video footage. You can perform many of the same tasks you do in the Lustre user interface using the Control Surface.

You connect the Autodesk Control Surface to a Master Station or HD Station, and configure the Control Surface on the workstation to which it is connected.

**Video I/O Card and Breakout Box** On the HP Z800 workstation, video I/O is provided by the AJA card. The video card consists of an HD/SD card and a breakout box. This configuration provides real-time SDI input and output of uncompressed 8- or 10-bit HD or SD video in both YUV (4:2:2) and RGB formats (4:4:4 or 4:2:2). For a list of supported video formats, see the *Autodesk Lustre User Guide*.

The drivers for the video card and breakout box are installed by the Discreet® Kernel Utility (DKU).


**Slave Renderer** The Slave Renderer is a rack-mounted server that is connected directly to the Lustre workstation. It frees system resources by automatically off-loading render tasks, thus ensuring real-time interaction on the Lustre system.

You install the Slave Renderer software package on the Slave Renderer.

**Background Renderer** Background rendering frees up Lustre workstations for colour grading. You can use up to eight background rendering machines to process your final frames.

You install background rendering software on each background render node.

The following illustration shows a typical Lustre workgroup configuration built around a Master Station. It includes a Lustre Station, and other optional components.

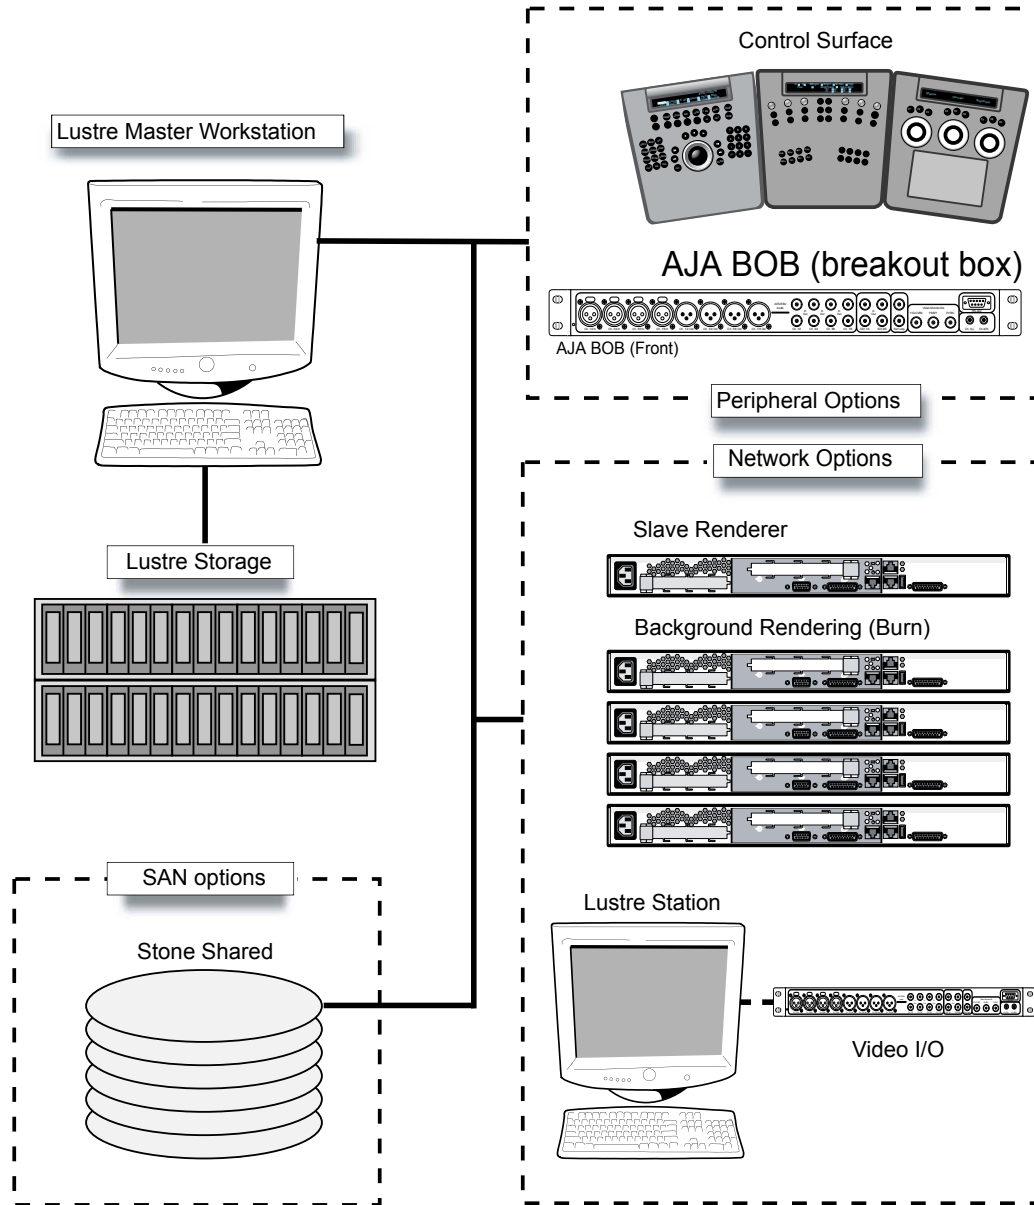


# Connecting Peripherals

The following diagram illustrates how to connect peripherals, such as the graphics monitor, keyboard, mouse, Autodesk Control Surface, and house network, to the HP Z800 workstation.

It is recommended you connect all hardware peripherals as instructed in this section before booting the workstation for the first time.


## HP Z800 Workstation

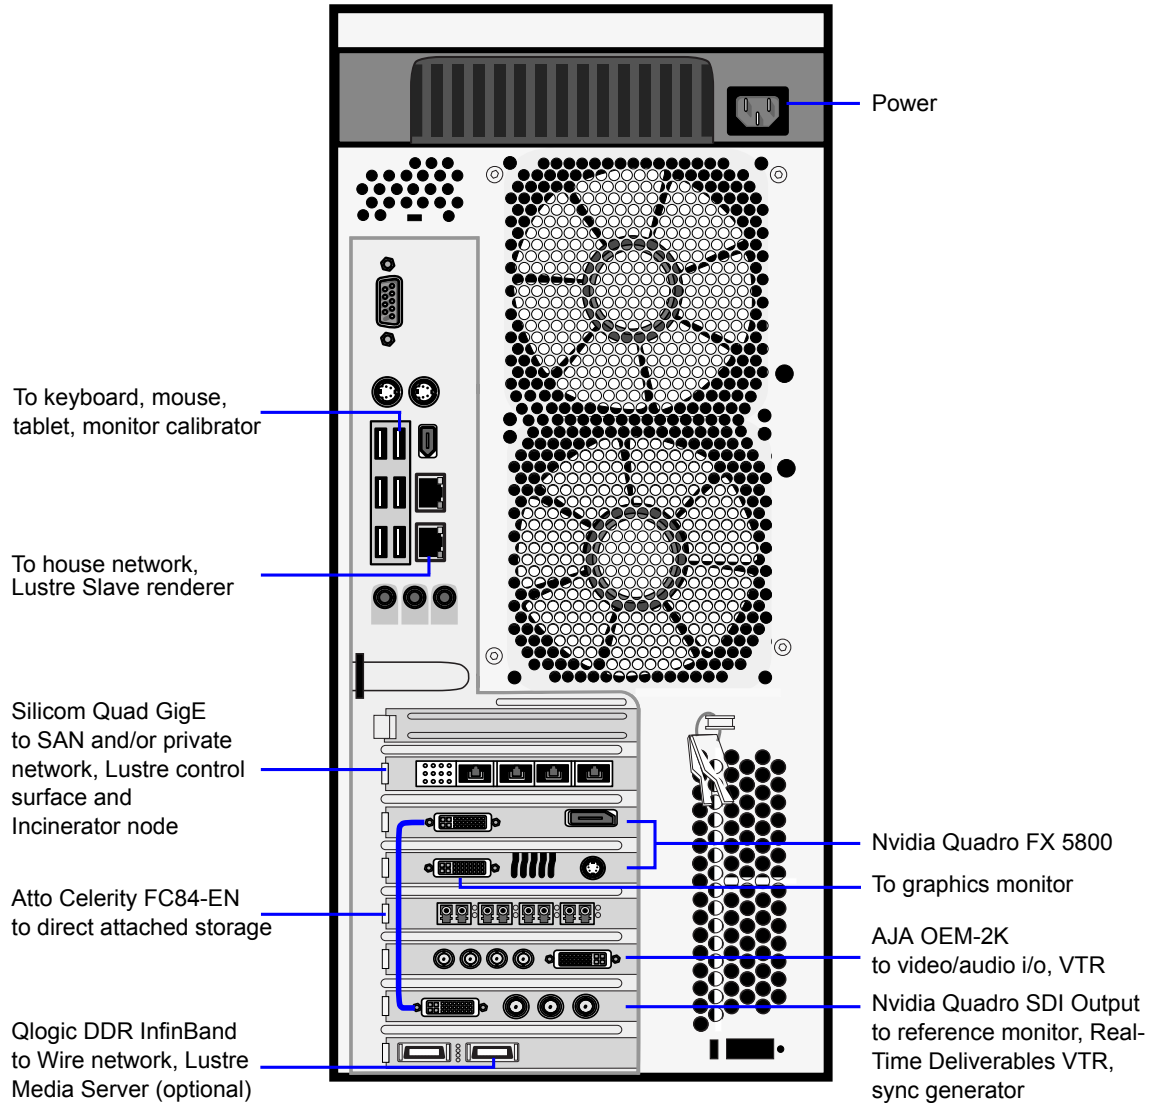

# Connecting the Autodesk Control Surface

The following diagram illustrates the physical connections needed to operate the Autodesk Control Surface.

The Autodesk Control Surface consists of three panels connected to the workstation Quad GigE adapter card by way of the supplied network switch. The central panel requires an additional connection to the remote unit of the USB extender kit.

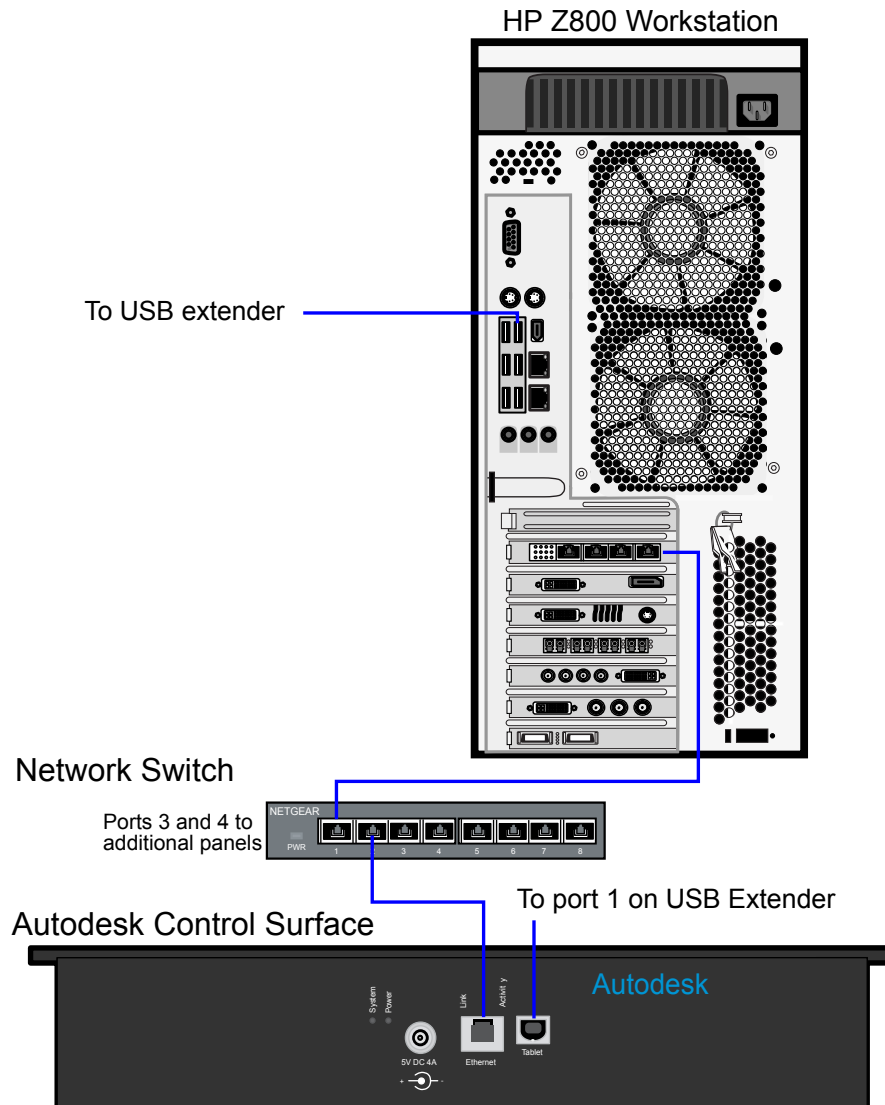


# Connecting Video Components

The following diagram illustrates how to set up video I/O by connecting the hardware components included in your shipment. The only video hardware you must provide are a sync generator, VTR, HD/SDI-ready broadcast monitor and patch panel (if desired).

**NOTE** Do not use an SD (NTSC or PAL) sync generator for HD projects. Always use a tri-level sync generator for HD projects. Using the wrong sync generator for a project may impact the stability of your workstation.

## HP Z800 Video I/O

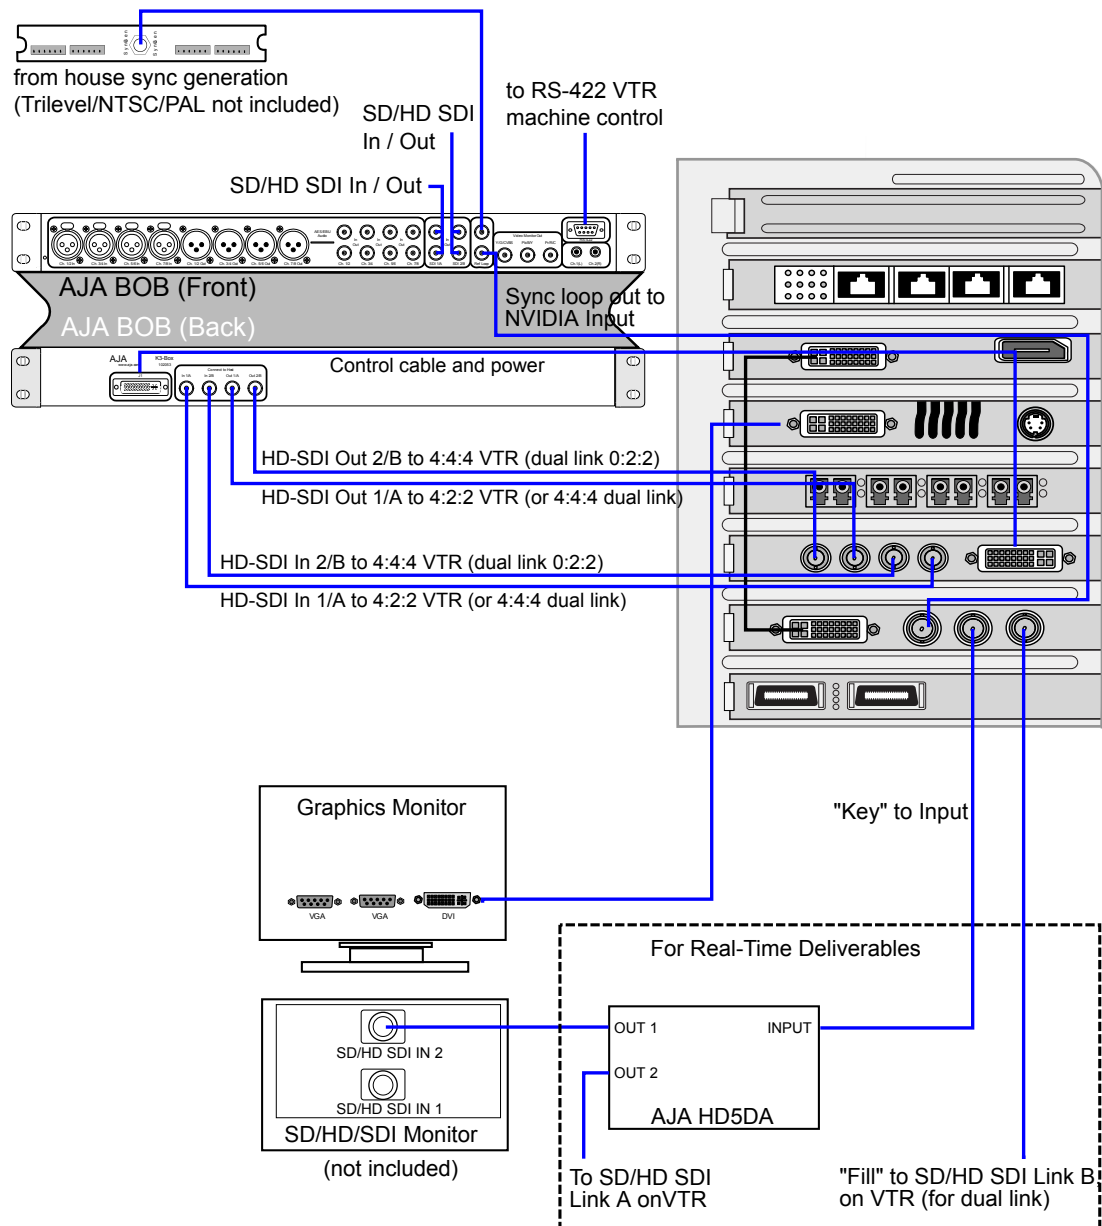

# Connecting Audio Components


Your application uses the Discreet Native Audio subsystem. Discreet Native Audio uses the following hardware components:

**Lucid ADA 88192 Audio Converter** Converts signals between the workstation and all digital or analog audio I/O devices.

**NOTE** You can control the converter either locally or remotely through the audio preferences of the application (recommended).

**AJA Balanced Audio breakout box and AJA OEM-2K card** The Balanced Audio breakout box connects to the AJA OEM-2K card on your workstation. The card provides audio data at 24-bit and handles balanced AES/EBU audio signals from the breakout box. The card supports up to 8 tracks of embedded audio.

To connect the Discreet Native Audio hardware components to the AJA breakout box, refer to the following diagram.

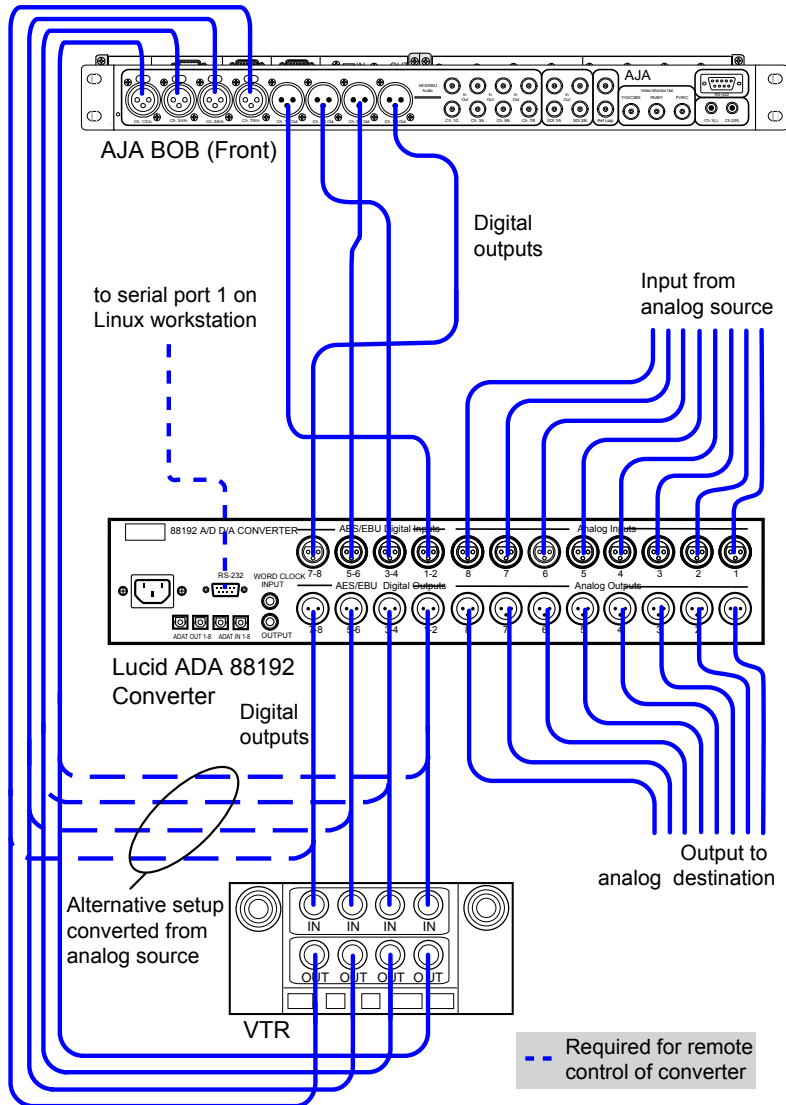

# Connecting Media Storage

The workstation can be connected to two types of media storage.

- **Stone Direct disk arrays** are Autodesk's high-performance direct-attached storage (DAS) devices designed to address the different real-time playback requirements of various workflows. Direct attached storage devices provide storage to individual workstations.

---


**NOTE** A Lustre workstation equipped with Incinerator does not use DAS storage. Incinerator storage is attached to the Lustre Media Server, accessed by way of the InfiniBand network.

---

- **A SAN** is a storage infrastructure that allows multiple workstations to share simultaneous access to a central storage enclosure.

Connections to both types of media storage are made using the Atto Celerity FC84-EN fibre channel adapter, located in slot five (top to bottom).

The fibre channel adapter is equipped with four ports, called *loops*. You can connect your storage enclosure to the fibre channel cards using either 2 loops or 4 loops. A 2-loop device can be connected to either the inner pair of ports or the outer pair of ports. A 4-loop device requires both the inner pair and the outer pair. The following diagram illustrates this important point.

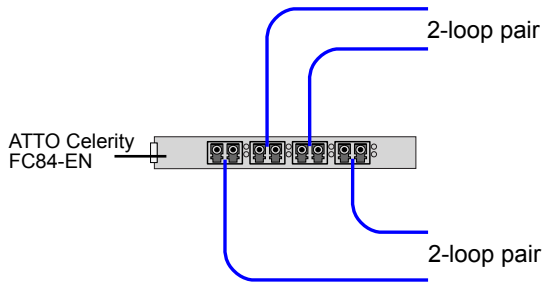


---

**NOTE** If you are not using all the ports of a fibre channel adapter, terminate the two unused ports with the FC loopback couplers that shipped with your system. Terminating these ports significantly decreases the time required to boot the system.

---

The following diagram illustrates the fibre channel storage connections to the workstation.

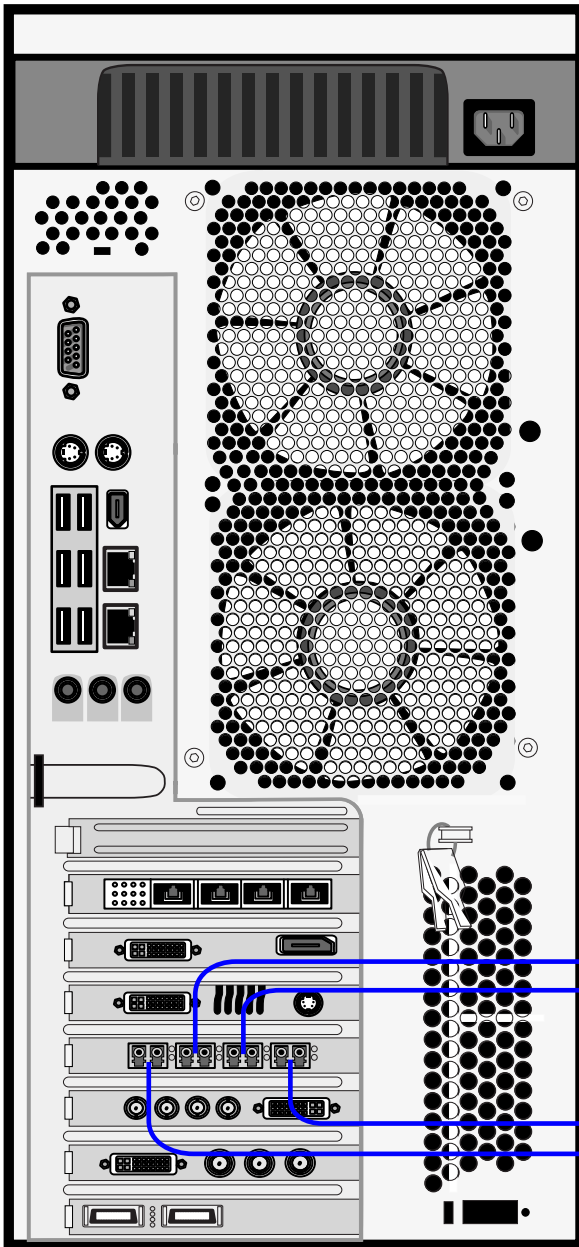

FC loop 2 } To storage assembly  
 FC loop 3 }

FC loop 4 } (Optional) To storage (4 loop),  
 FC loop 1 } archiving device or SAN

Autodesk Stone Direct XR-series disk arrays provide two types of enclosures: a RAID enclosure (also called an XR enclosure), and an EBOD enclosure (also called an XE enclosure). Each disk array contains twelve 146 GB, 300 GB, or 450GB hard drives. Autodesk Stone Direct uses hardware RAID to provide high performance, reliability, and protection against data loss.

Hardware RAID storage configurations require either one RAID enclosure (for 2-loop) or up to two RAID enclosures (for 4-loop). These configurations may include additional XE expansion enclosures. You can increase storage capacity by adding disk arrays.


A number of Stone Direct configurations will ensure optimal playback of the most demanding formats:

Storage Configuration	Loops	Expected Performance
Stone Direct XR	One 2-loop connection	<ul style="list-style-type: none"> <li>■ One stream SD/HD 10-bit (32 channel/8-bits per channel audio), or</li> <li>■ One stream 2K 12-bit unpacked (8 channel/8-bits per channel audio)</li> </ul>
Stone Direct XR plus Stone Direct XE	Two 2-loop connections (if permitted by chassis) – or – One 2-loop connection	<ul style="list-style-type: none"> <li>■ Two streams SD/HD 10-bit (32 channel/8-bits per channel audio), or</li> <li>■ One stream 2K 12-bit unpacked (8 channel/8-bits per channel audio)</li> </ul>
2 x Stone Direct XR	Two 2-loop connections (one per enclosure)	<ul style="list-style-type: none"> <li>■ Two streams SD/HD 10-bit (32 channel/8-bits per channel audio), or</li> <li>■ One stream 2K 12-bit unpacked (8 channel/8-bits per channel audio)</li> </ul>

The following three diagrams illustrate how to cable XR-series hardware RAID storage enclosures. It is important to cable exactly as illustrated in the diagrams to ensure storage functions properly.

**WARNING** Do not power on your storage before installing Linux, otherwise the Red Hat installer might attempt to format the storage array and use it as the system disk.

The following diagram illustrates a 2-loop hardware RAID storage configuration. Dotted lines represent cabling for additional EBOD enclosures. The F6412E RAID controller supports a maximum of seven expansion enclosures.

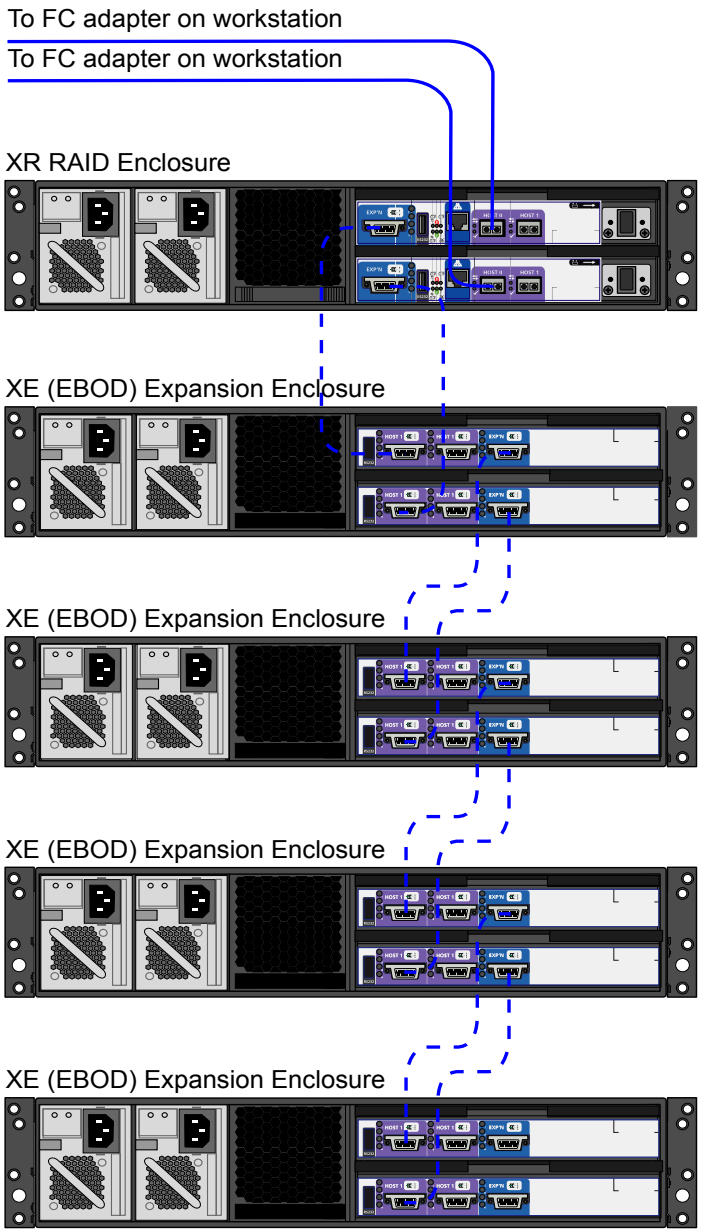


--- Cabling for additional enclosures

The following diagram illustrates a 4-loop hardware RAID storage configuration with a single XR RAID enclosure. Dotted lines represent cabling for additional enclosures. For 4-loop configurations, you need a minimum of one XE expansion enclosure attached to the XR RAID enclosure.


---

**NOTE** A 4-loop configuration supports a maximum of two expansion enclosures per RAID controller.

---

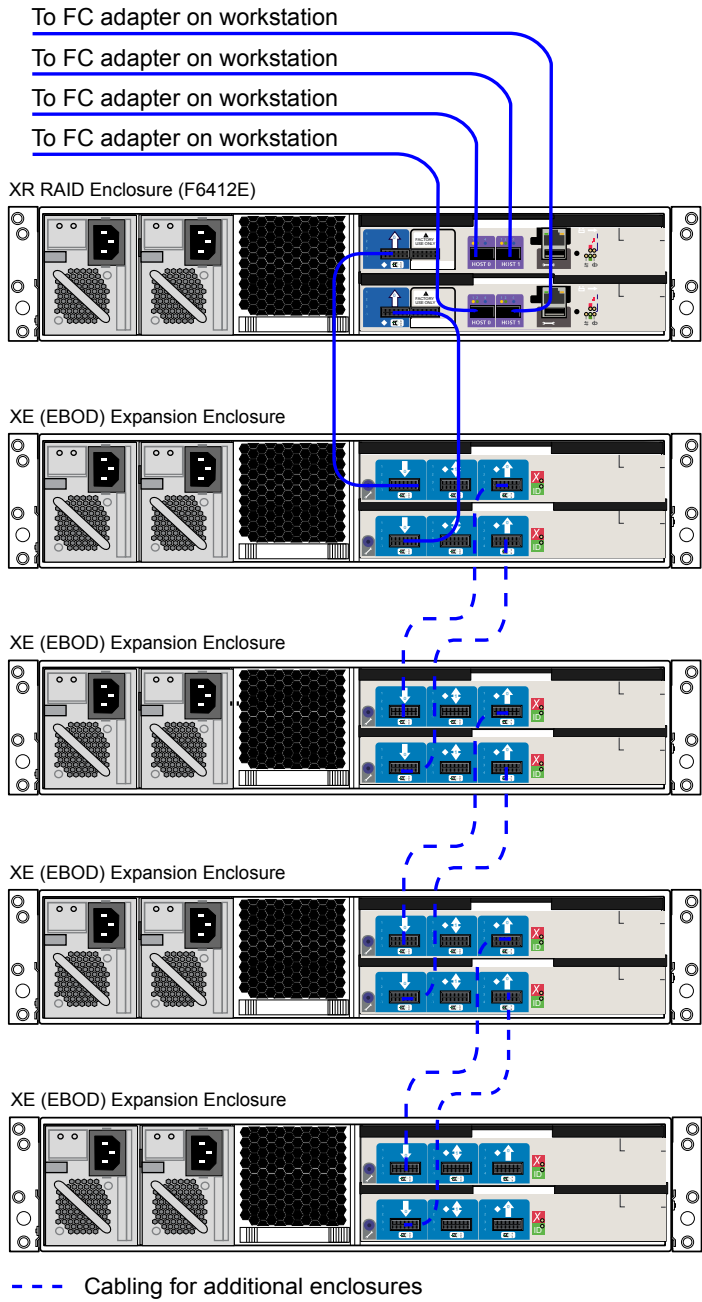

The following diagram illustrates a 4-loop hardware RAID storage configuration with two XR RAID enclosures. Dotted lines represent cabling for additional enclosures. When using two XR RAID enclosures, you are not required to have XE expansion enclosures.

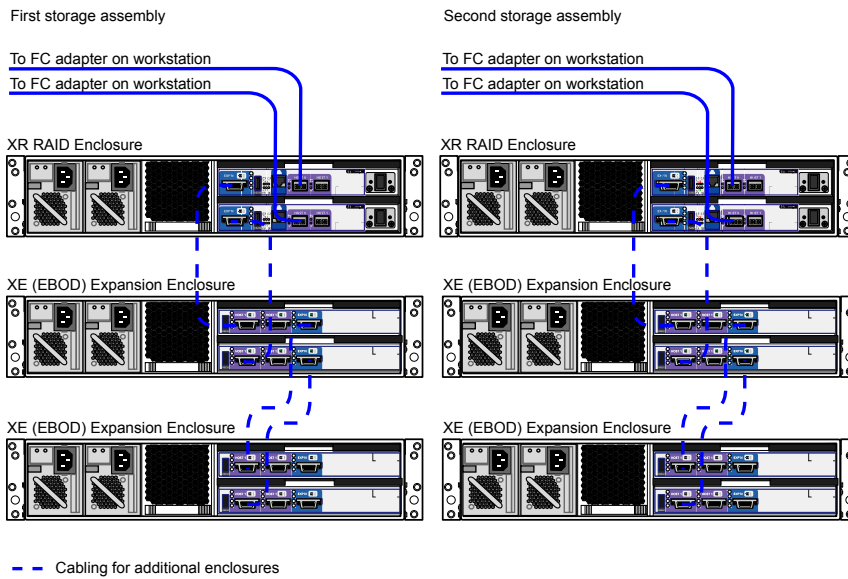

## Connecting the Slave Renderer

The Lustre Slave Renderer is a single render node that provides automatic background rendering on a shot-by-shot basis. It is available for the Lustre Master Station, and the HD Station.


The following diagram illustrates how to connect a slave renderer to a Lustre station.

---


**NOTE** Although the Lustre Slave Renderer uses a standard GigE network connection, it requires a higher-bandwidth Cat-6 cable to accommodate the increased data that is transmitted. Note also that the connection is made through a straight cable, not a crossover one.

---

HP Z800 Workstation

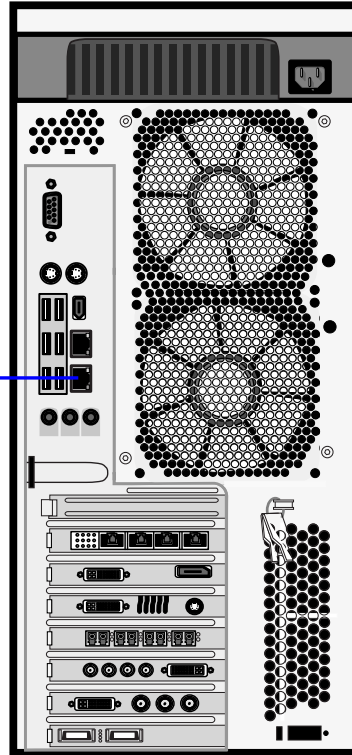

Slave Renderer (e.g. HP DL 160)

 

# Configuring your System BIOS

## HP Z800 BIOS Settings

After wiring the workstation and **before** installing Linux, turn the workstation on and check the BIOS version and BIOS settings.

---

**WARNING** If BIOS settings are not set up correctly before installing Linux, you will need to reinstall the OS.

---

The certified BIOS version for your workstation is **1.06**.

Make sure the BIOS version number that appears on screen while booting the workstation matches the certified version. If the versions do not match, update the BIOS to the certified version, after configuring BIOS settings. BIOS update instructions are at the end of this chapter.

To adjust system BIOS settings, press **F10** while booting the workstation.

The following table lists the Autodesk certified BIOS settings. Items not listed are set to their default factory settings. See [Restoring BIOS to Default Factory Settings](#) on page 26 for instructions on restoring your BIOS settings to factory defaults.

BIOS Menu	Submenu	Item	Value	
Storage	Storage Options	SATA Emulation	RAID+AHCI	
		Boot Order	<hard drive model>	
			Integrated SATA	
			Optical Drive	
			USB Device	
Power	OS Power Management	Runtime Power Management	Disable	
		Idle Power Saving	Normal	
		NWAIT Aware OS	Disable	
		ACPI S3 Hard Disk Reset	Disable	
	Hardware Power Management	SATA Power Management	Disable	
		Intel Turbo Boost Technology	Disable	
Advanced	Processors	Hyper-Threading	Enable	
	Chipset/Memory	Memory Node Interleave	Enable	
			NUMA Split Mode	Disable
		Device Options	S5 Wake on LAN	Disable
		Internal Speaker	Disable	
		NIC PXE Option ROM Download	Disable	

BIOS Menu	Submenu	Item	Value
	Slot 1 PCIe2 x8(4)	Option ROM Download	Disable
	Slot 3 PCIe2 x8(4)	Option ROM Download	Disable
	Slot 4 PCIe2 x16(8)	Option ROM Download	Disable
	Slot 6 PCI32	Option ROM Download	Disable

## Restoring BIOS to Default Factory Settings

If necessary, perform the following procedure to restore the BIOS settings to factory defaults.

**To restore default factory BIOS settings:**

- 1 Press **F10** while booting the workstation to enter the system BIOS.
- 2 In the File menu, select Default setup, then Restore Factory Settings as Default.
- 3 Press **F10** to accept the changes.
- 4 In the File menu, select Apply Defaults and Exit, then press **F10** to confirm.  
The factory system defaults are restored.
- 5 When the workstation reboots, press **F10** again to re-enter the BIOS, and configure the recommended Autodesk settings.

## Updating your System BIOS

The BIOS version installed on your system appears on the screen while booting the workstation. The following procedure describes how to update a workstation to the certified BIOS version required by your application.

**NOTE** Before attempting to update the system BIOS, make sure the SATA Emulation option is properly set, otherwise your optical drive is not detected.

**To update the BIOS on your workstation:**

- 1 Download the latest version of the DKU from Autodesk and extract the *tar* file into a temporary directory.
- 2 Go to the */Utils/BIOS* subdirectory of the DKU directory.  
In the *BIOS* directory there is a subdirectory for each platform supported by the current version of your Visual Effects, Finishing, and Colour Grading application.
- 3 Go to the directory that corresponds to your hardware platform.  
The directory contains an *.iso* disc image file for each supported BIOS version, as well as a *README* text file that describes each file, and provides information on updating the BIOS.
- 4 Burn the correct *.iso* file to a CD and place it in the DVD-ROM drive on the workstation.
- 5 Reboot your workstation and press **F10** to enter the system BIOS.
- 6 Optional: Press **F8** to select a language.
- 7 In the Storage menu, select Storage Options, and set SATA Emulation to IDE. This option allows the BIOS to be updated from a CD.
- 8 Press **F10** to confirm the change.

- 9 In the File menu, select Save Changes and Exit.

The workstation reboots.

- 10 Press **F10** to enter the BIOS again.

- 11 In the File menu, select Flash System ROM.

A dialog box prompts you to select between USB and CD-ROM.

---

**NOTE** If the CD-ROM option does not appear, SATA emulation was not set correctly. Reboot your machine and redo this procedure from step 4.

---

- 12 Select CD-ROM and press **F10** to confirm.

- 13 Select the *.bin* file.

A confirmation dialog box appears.

- 14 Press **F10** to confirm.

- 15 Press any key.

A message stating that the system ROM flash was successful appears.

- 16 In the Storage menu, select Storage Options and set SATA Emulation back to the value documented in the previous table. This setting is required for Linux to work properly.

- 17 Press **F10** to confirm the change.

- 18 Verify all the BIOS settings again to make sure they correspond to the recommended settings.

- 19 In the File menu, select Save Changes and Exit.

The workstation reboots.



# Installing Red Hat Enterprise Linux

# 4

## Topics in this chapter:

- [Do I Need to Reinstall Linux?](#) on page 29
- [Linux Installation Workflow](#) on page 30
- [Linux Post-Installation Tasks](#) on page 32

## Do I Need to Reinstall Linux?

Sometimes, when upgrading to a new version or service pack of your software, you might need to also upgrade the operating system.

Use the following table to determine the correct version of Red Hat Enterprise Linux required for your hardware platform for the current version.

Hardware Platform	Linux Version
HP Z800	Red Hat Enterprise Linux Desktop 5.3 With Workstation Option
HP xw8400, HP xw8600	Red Hat Enterprise Linux WS 4, Update 3

To determine the version of Red Hat Enterprise Linux your system is currently running, open a terminal and type:

```
cat /etc/redhat-release
```

The Red Hat Enterprise Linux version appears. For example:

```
Red Hat Enterprise Linux WS release 4 (Nahant Update 3)
```

If your system is not currently running the correct version of Red Hat Enterprise Linux, upgrade your operating system to the required version.

## Linux Installation Workflow

Perform the following procedure to prepare your system and install the customized Autodesk distribution of Red Hat Enterprise Linux.

### To install the Autodesk distribution of Linux:

**1** Locate the installation media.

The DVD containing the customized Autodesk distribution of Red Hat Enterprise Linux is included with your shipment. The customized Autodesk distribution installs certain Linux packages that are required by Autodesk applications but are not installed by the commercial distribution of Red Hat Enterprise Linux.

---

**WARNING** Even though your shipment may also include the disc set for the commercial distribution of Red Hat Enterprise Linux, **DO NOT** install the commercial distribution. Autodesk Visual Effects, Finishing and Colour Grading software only works on the custom Autodesk distribution of Red Hat Enterprise Linux.

---

**2** Power off all storage enclosures connected to the system, to prevent the Red Hat installer from attempting to reformat them as part of the installation process.

---

**WARNING** Do not skip this step. Failure to power off or disconnect your storage before installing Linux may result in data loss.

---

---

**NOTE** Turn off the XR RAID controllers first, then the XE expansion enclosures.

---

**3** Back up all user settings, project settings, and media from the system to another system or to a removable drive. The Linux installation erases and formats the system disk so this information is lost if it is not backed up. In addition, back up the following files:

- **/usr/autodesk** (for software setup and configuration files)
- **/etc** (for Linux configuration files, networking, etc)
- **/usr/lib/DPS** (for fonts)
- **/usr/local/flexlm/licenses** (for the license file)

**4** Make sure your system is in the following state:

- Mouse, keyboard and graphics monitor are connected and the graphics monitor is powered on.
- Other peripherals, such as the tablet and video breakout box are connected and powered on.
- If you are using a KVM switch, it is switched to the system on which you want to install Linux.
- The storage array is powered off.
- The Lustre control surface is disconnected from the workstation.

**5** Insert the DVD of the Autodesk distribution of Red Hat Enterprise Linux in the DVD-ROM drive, and power off the system.

---

**WARNING** If your system is equipped with internal media storage, after turning the system off, open the side panel and disconnect the main connector for the internal storage drives. Make sure you do not disconnect the system drive!

---

- 6 Power on your system.
- 7 When the system starts to boot, press **F10** to enter the BIOS and make sure the BIOS settings reflect the recommended values in [Setting Up Your Workstation Hardware](#) on page 9. The BIOS must be correctly configured **before** installing Linux.

---

**NOTE** If the keyboard is connected to the system through a KVM switch, you may have to press **F10** repeatedly or hold it down to enter the BIOS.

---

- 8 Save the correct BIOS settings and reboot the system.
- 9 When the system reboots, press **F9** to enter the boot menu, and select Optical Drive to boot from the Red Hat Enterprise Linux installation DVD.
- 10 When the Red Hat Linux installation screen appears, press **F8** to display the Autodesk Red Hat Linux installation menu.
- 11 At the boot prompt in the Red Hat Linux installation menu, type one of the following commands and then press **Enter** to launch the Linux installation.

Type:	To install on:
<b>lustrews</b>	A Lustre workstation.
<b>lustreslave</b>	A Lustre Slave Renderer.
<b>burnlustre</b>	A Burn for Lustre node using the Autodesk custom DVD or Red Hat Enterprise Linux
<b>linux ks=cdrom</b>	A Burn for Lustre node using the commercial CD/DVD of Red Hat Enterprise Linux with the Autodesk kickstart file

---

**NOTE** The system spends several minutes loading drivers.

---

- 12 If you replaced your system disk with an uninitialised disk, when prompted, confirm initialisation of the disk.
- 13 If you are installing Linux using a centralized install process and receive an error that “The directory could not be mounted from the server”, the default IP address for the Lustre Media Server is not working. Click OK and when prompted, enter the following information, then press **Enter**.

In the field:	Type:
NFS server name	The IP address of the Lustre Media Server. For example, if you are using the default IP address for the Lustre Media Server, enter <b>10.10.10.1</b>
Red Hat Enterprise Linux directory	<b>/root/iso/rh4u3_64</b> or <b>/root/iso/rh5u3_64</b>

---

**NOTE** If this error occurs when the IP address *is* correct, the problem may be due to hardware connections. Verify all hardware connections between the component and the Lustre Media Server are properly seated, then reboot the machine and restart the Linux installation.

---

- 14 The remainder of the installation process is automated.  
When the installation completes, you are prompted with “Congratulations, the installation is complete”.

---

**NOTE** If the installation drops into text mode or to a blank screen just before completing, press **CTRL+ALT+F6** to return to graphical mode. At this point, the installation should be finished, and you should see the “Congratulations...” message and the Reboot button.

---

- 15 Eject the DVD and click Reboot to reboot the system.

---

**NOTE** After the system reboots, you may be prompted by the Kudzu hardware setup utility to set up new hardware detected for your system. You can ignore these prompts and allow the utility's count-down to expire since the hardware for the system is unchanged.

---

## Linux Post-Installation Tasks

After booting into your new Linux installation, perform the following post-installation tasks:

- Change the default root password to secure the system. The customized Autodesk installation sets the password for the root account on your workstation to *password*.
- Configure the time zone for your geographic location. The workstation is set to North American Eastern Standard Time (EST) by default. If necessary, consult the Red Hat online documentation to configure this setting.
- Configure the network settings for your workstation to match the ones used in your facility. The Linux installation sets a default IP address for your workstation. Edit the following files to change network settings.

Networking Configuration File	Description
<code>/etc/hosts</code>	Contains IP/host name pairs for host name resolution.
<code>/etc/sysconfig/network</code>	Contains global networking settings.
<code>/etc/sysconfig/network-scripts/ifcfg-<code>&lt;xxx&gt;</code></code> , where <code>&lt;xxx&gt;</code> specifies your ethernet adapter	Contains interface-specific configuration.
<code>/etc/resolv.conf</code>	Contains DNS server information.

- Enable multicasting if you are planning to access the system from a remote workstation. To enable multicasting, open the `/etc/sysconfig/network` file in a text editor, add a `GATEWAY` keyword, and specify the gateway IP address. Obtain the necessary information from your network administrator.

---

**NOTE** If you do not define a gateway in `/etc/sysconfig/network`, you must define default routes associated with specific interfaces in `/etc/sysconfig/network-scripts/ifcfg-<xxx>`, where `<xxx>` specifies your ethernet adapter. Note that a default route specified in the `network` file overrides any `ifcfg-<xxx>` routes. Contact your system administrator to determine the best way to enable multicasting for your network.

---

# Installing the DKU and the AJA OEM-2K Firmware

# 5

## Topics in this chapter:

- [Installing the DKU](#) on page 33
- [Upgrading the AJA OEM-2K Firmware](#) on page 34

## Installing the DKU

Before installing your software, you must install the required version of the DKU . See the Release Notes for the required DKU version for this version.

For major releases, the DKU is available on optical media or as a download from Autodesk. For extensions and service packs, the DKU is only available for download. The download link is provided in the release announcement you received from Autodesk.

### To install the DKU:

- 1 Open a terminal and log in as root.
- 2 If you are upgrading an existing application, check the currently installed DKU version by typing:  
**head -n1 /etc/DKUversion**  
If the DKU version output by the command does not match the version required for the new application version, perform the remaining steps in this procedure.
- 3 Access your DKU installation package:
  - If you are installing from an application disc, insert and mount the disc using the command:  
**mount /dev/cdrom**

The disc mounts on the `/mnt/cdrom` directory. The DKU installation directory is located at the top level directory of the disc.

- Otherwise, download the latest DKU *tar* file from the download link provided in the release announcement, then go to the directory where the *tar* file was downloaded, and unpack it by typing:  
**tar -zxvf DKU\_<version\_number>.tar.gz**

The DKU *tar* file is unpacked into a new directory.

- 4 Go to the DKU installation directory and launch the DKU installation script:  
**./INSTALL\_DKU**

---

**WARNING** If you attempt to install the DKU on an unsupported platform, the installation script only installs a generic configuration. Such a configuration can render your operating system unusable. Never attempt to install the current version of the DKU on unsupported platforms, including older Visual Effects and Finishing or Colour Grading systems that are no longer supported in the current version.

---

When the DKU installation script completes, a warning to update the AJA card firmware may appear and you are returned to the command prompt. See the following section for information on updating your AJA card firmware.

- 5 If you installed from a disc, return to the root directory, and eject the disc by typing:  
**eject**

- 6 Before rebooting the system, do the following:

- If storage devices (external disk arrays or internal storage) were previously disconnected or turned off as part of an operating system installation, reconnect them and power them up.

---

**NOTE** Power on the XE expansion enclosures first and the XR RAID controller units last. This ensures the RAID controllers detect the other units in the Stone Direct storage.

---

Wait for all the disks in the storage devices to power up before rebooting the system. The green light for each disk stops flashing once it is fully powered up

- 7 Reboot the system. Type:  
**reboot**

## Upgrading the AJA OEM-2K Firmware

The firmware on your AJA OEM-2K card must correspond to the certified version required by your application version. Refer to the Release Notes for the required AJA OEM-2K firmware version.

The AJA firmware update utilities required to check your firmware version are included with the DKU version for your application.

The following procedure describes how to verify and update the firmware version of the AJA OEM-2K card.

**To verify and upgrade the AJA OEM-2K firmware:**

- 1 Open a terminal and type:  
**cat /proc/driver/aja**

If the `PCI version` line in the output lists a different version than the required one, perform the following steps to upgrade the firmware.

---

**NOTE** Before upgrading the AJA firmware, make sure you have upgraded the DKU, and that you have restarted the system.

---

- 2 Go to the `/usr/discreet/DKU/current/Utils/AJA_firmwareUpdate` directory.
- 3 Run the `AJAfw_update` utility to scan the AJA current firmware and, if required, update to the latest firmware version. Type:  
`./AJAfw_update`  
If the utility detects that the firmware and drivers need to be updated, it prompts you to start the update.
- 4 Start the firmware update by typing **Y** and then pressing **Enter**.  
While the AJA firmware and drivers are being updated, your workstation appears to be frozen and your mouse and keyboard do not work. This is normal and indicates that the firmware is being updated. Once the firmware update is complete, you are returned to the terminal.
- 5 Shut down your workstation by typing:  
`shutdown -g0`  
If your workstation does not prompt you to power down, press the power button for 10 seconds to force a power down.
- 6 Disconnect the power cord.
- 7 Wait 10 seconds, reconnect the power cord, then restart your workstation.

---

**NOTE** For more details about the AJA firmware procedures, consult the *README* file located in the current directory.

---



# Configuring Storage

# 6

## Topics in this chapter:

- [Overview](#) on page 37
- [Connecting to the RAID Controller for the First Time](#) on page 38
- [Creating Hardware LUNs](#) on page 39
- [Partitioning Disks or LUN devices as LVM-type Primary Partitions](#) on page 41
- [Assembling the Disk or LUN Devices into a Logical Volume](#) on page 42
- [Creating the XFS Filesystem on the LVM device](#) on page 44
- [Creating a Mount Point and Mounting the Storage](#) on page 45

## Overview

This chapter describes how to connect a direct-attached storage to the workstation and configure it to provide access to all frames and proxies.

If you are also configuring a Storage Area Network (SAN), it is recommended that you configure the SAN prior to configuring a direct-attached storage.

---

**NOTE** Before you can configure the storage, the workstation must be up and running the custom Autodesk distribution of Red Hat Enterprise Linux, as well as the version of the DKU required for your application version.

---

## Do I Need to Perform these Procedures?

If you are reinstalling your system from scratch, or adding new storage devices, refer to the procedures in this section for information on partitioning the storage and setting up the XFS filesystem.

If you are only upgrading an existing application installation without adding new storage, skip to the next chapter for instructions on installing the software.

# Connecting to the RAID Controller for the First Time

## Powering Up Your Storage

Powering your system and storage up or down should be done in a proper sequence. This will ensure that the system functions properly.

---

**WARNING** An incorrect power up sequence can mean your system does not recognize all drives.

---

**To power up your system:**

- 1 Make sure your workstation is shut down.
- 2 Power up the storage expansion enclosures.
- 3 Power up the storage RAID controller units.
- 4 Wait about 90 seconds for all the drives to spin up. Their lights are solid green when they are spun up.
- 5 Power up your workstation.


To power down your system, shut down your workstation first, then the RAID controller units, and finally the expansion enclosures.

## Connecting to the RAID Controllers


Each of the two RAID controllers in an XR RAID enclosure has its own IP address; you can configure LUNs by connecting to either of the two. The factory default IP address of RAID controller 0 (the bottom controller) is 10.1.1.5. For RAID controller 1 (the top controller) the factory default IP address is 10.1.1.6.

**To connect to the controller and set its IP address:**

- 1 Connect the second Ethernet port on your workstation to the Ethernet port of RAID controller 0.
- 2 Set the second Ethernet interface on your workstation to 10.1.1.100. As root, open a terminal and type:  
`ifconfig eth1 10.1.1.100 netmask 255.255.255.0`
- 3 Launch the Stone Storage Manager RAID management utility by pointing a Web browser from your workstation at the IP address of the RAID controller. For example, `http://10.1.1.5:9292`
- 4 When prompted to enter a user name and password, enter the user name *admin* and the password *password*.
- 5 Optional: perform the following steps to change the RAID controller IP address to one that is consistent with your local network.
  - In the Stone Storage Manager, click Settings.

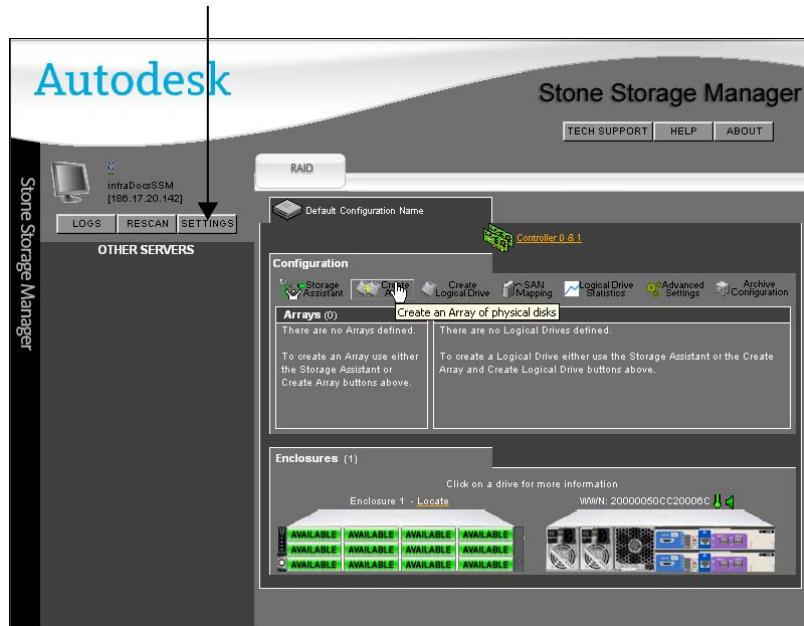

- Select the Preferences tab.

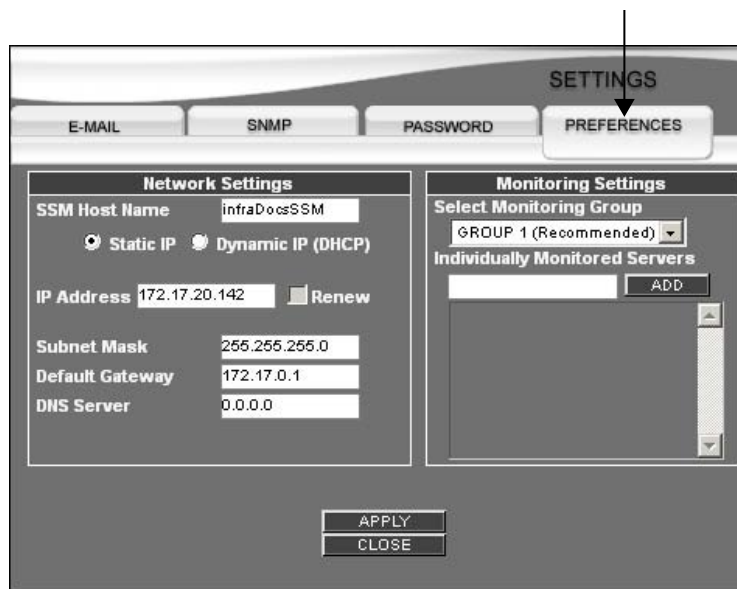

- Enter hostname and IP information and click APPLY.

## Creating Hardware LUNs

LUNs, also referred to as Logical Units or Logical Drives, are groups of disk drives that are striped together to provide optimal performance and RAID protection. Once configured, LUNs are seen by the Linux operating system as if they were single disk drives.

To create the LUNs on your XR-series storage, use the *XR Configurator* utility supplied by Autodesk. This utility is installed with the DKU and automates the LUN creation process.

---

**NOTE** For systems having 2XR or 2XR + 2XE, you have to configure one XR at a time with the XR Configuration Utility. Connect the first XR and use the utility to configure. When done, disconnect the first XR and connect the second XR. When the second XR is configured re-connect the two XRs.

---

**To configure LUNs on XR-series storage:**

- 1 Open a terminal and log in as root.
- 2 Go to the directory `/usr/discreet/DKU/current/Utils/Storage/current/`, and run the XR configuration utility by typing:  

```
./XR_config.pl
```

The script detects whether a LUN configuration exists on the storage attached to that workstation.
- 3 If a LUN configuration already exists on the storage, you are prompted for confirmation to overwrite that configuration.

---

**WARNING** LUN configuration is destructive. Make sure you want to overwrite an existing configuration before you confirm.

---

- 4 After the script detects the number of enclosures and drives, it prompts you to indicate the filesystem your storage uses.  
Type **2**
- 5 When asked if you have a 2-loop or a 4-loop configuration, select the option that applies to your storage. The XR configuration utility configures your storage.

---

**NOTE** You can monitor the LUN creation process by accessing the Stone Storage Manager utility on the RAID controllers through a Web browser. However, it is not necessary to launch SSM for LUN configuration.

---

- 6 Type **x** to exit the configuration utility.

The XR configuration utility exits without configuring your storage if any of the following issues are detected:

- An incorrect number of disks. The total number of disks must be a multiple of 12.
- One or more of the enclosures do not have the correct firmware.
- In a dual RAID enclosure environment, the number of expansion chassis on each RAID enclosure is not the same.

## Rescanning New LUNs from the Host Operating System

Newly-created LUNs must be rescanned by the host operating system to associate the proper disk devices with each LUN.

**To rescan LUNs:**

- 1 Reboot the system.
- 2 To verify the new LUNs were detected, examine the content of the file `/proc/scsi/scsi`.
- 3 You can also see the current configuration by going to the `/usr/discreet/DKU/current/Utils/Storage/current/` directory, and typing:  

```
XR_config.pl -status
```

# Partitioning Disks or LUN devices as LVM-type Primary Partitions

To achieve optimal performance, each disk or LUN in the DAS array should be partitioned as a single primary partition of type “Linux LVM”.

---

**NOTE** If your storage arrays use 450GB drives, skip this section and continue with [Assembling the Disk or LUN Devices into a Logical Volume](#) on page 42.

---

**To re-partition disk or LUN devices as LVM-type primary partitions:**

- 1 Open a terminal and log in as root.
- 2 Reload the drivers for the fibre channel card.
  - For HP Z800 systems using the ATTO Celerity FC-84EN card type:

```
rmmod celerity8fc  
modprobe celerity8fc
```
  - For older HP systems using the ATTO Celerity FC-44ES card type:

```
rmmod celerityfc  
modprobe celerityfc
```
- 3 View a list of disks or LUNs devices detected by the operating system, using the following command:

```
fdisk -l | grep dev
```

Identify the disk or LUN devices that are part of the DAS that will be configured with a standard filesystem. These devices will be re-partitioned.

---

**NOTE** Make sure you do not re-partition the system drive or any other disks that you want to preserve as they are. Partitioning destroys all data on the disks.

---

- 4 Use the *fdisk* command to re-partition each disk device identified in the previous step. Start the *fdisk* utility for the LUN. Type:

```
fdisk <disk name>
```

where <disk name> is a disk device name without a partition number, such as */dev/sdf*. The *fdisk* utility starts, checks the disk device, and then displays its prompt.

---

**NOTE** When *fdisk* starts, a warning about the number of disk cylinders may appear. You can disregard this warning.

---

- 5 Type **n** to display the New partition creation menu.  
*fdisk* displays the type of partitions you can create (primary or extended).
- 6 Create a primary partition on the disk device by typing **p** at the prompt.
- 7 When prompted to enter a partition number, type **1** to make the primary partition the first one on the LUN.

---

**NOTE** You may have to delete pre-existing partition by entering **d** when prompted, and repeating step 3.

---

- 8 When prompted to set the starting cylinder number, press **Enter** twice to accept the default, that is, the first and last cylinder on the device.  
The *fdisk* prompt reappears.

- 9 Type **t** to set the partition type.  
You are prompted to enter the hexadecimal code of the partition type to be created on the LUN.
- 10 Type **8e** to set the partition type to Linux LVM.  
*fdisk* sets the partition as Linux LVM and the following output appears:  
Changed system type of partition 1 to 8e (Linux LVM)
- 11 Type **w** to save the new partition table.
- 12 Repeat steps 2 through 9 for each disk or LUN device identified in step 1.

## Assembling the Disk or LUN Devices into a Logical Volume

After you have formatted each disk or LUN device as a Linux LVM partition, you must assemble the LUNs into a single LVM logical volume on which you create the XFS filesystem.

This procedure does not cover creating fault-tolerance and assumes that the LUNs are RAID-protected, as is the case with Stone Direct XR-series arrays.

---

**NOTE** It is not recommended to create an LVM volume using the *md* RAID driver, as it has been found to provide poor performance with XFS.

---

### To assemble an LVM logical volume:

- 1 Verify that the disk or LUN devices are detected by the operating system. Type:

```
fdisk -l | grep dev
```

All devices appear in a list similar to the following example (your values may vary):

- For arrays with 450GB drives:  
Disk /dev/sdb: 2227.7 GB, 2227760529408 bytes  
Disk /dev/sdc: 2227.7 GB, 2227760529408 bytes  
Disk /dev/sdd: 2227.7 GB, 2227760529408 bytes  
Disk /dev/sde: 2227.7 GB, 2227760529408 bytes
- For arrays with smaller capacity drives:  
Disk /dev/sdf: 726.2 GB, 726247931904 bytes  
/dev/sdg1 1 88294 709221523+8eLinux LVM  
Disk /dev/sdg: 726.2 GB, 726247931904 bytes  
/dev/sdh1 1 88294 709221523+8eLinux LVM

---

**NOTE** Other devices of different types may be listed before and after the LVM devices.

---

- 2 Create a physical volume on each of the devices using the following command:

```
pvcreate <list of devices>
```

where *<list of devices>* is a list of all LVM devices. For example, if you have four devices, ranging from */dev/sdb* to */dev/sde*, you would type:

- For arrays with 450GB drives:  
**pvcreate /dev/sdb /dev/sdc /dev/sdd /dev/sde**
- For smaller capacity drives:  
**pvcreate /dev/sdb1 /dev/sdc1 /dev/sdd1 /dev/sde1**

The physical volumes are created, and the command output should be similar to the following example:

```
Physical volume "/dev/sdb" successfully created
Physical volume "/dev/sdc" successfully created
Physical volume "/dev/sdd" successfully created
Physical volume "/dev/sde" successfully created
```

---

**TIP** You can use the command `pvremove` to delete any erroneously entered devices.

---

- 3 Verify that the physical volumes were initialized correctly. Type:

```
pvscan -v
```

A list of all of the physical volumes you created appears. Each volume should contain “lvm2”. The following sample output is for the previous example of 4 LVM physical volumes created on devices `/dev/sdb` through `/dev/sde`:

```
Wiping cache of LVM-capable devices
Wiping internal VG cache
Walking through all physical volumes
PV /dev/sdb lvm2 [2.03 TB / 2.03 TB free]
PV /dev/sdc lvm2 [2.03 TB / 2.03 TB free]
PV /dev/sdd lvm2 [2.03 TB / 2.03 TB free]
PV /dev/sde lvm2 [2.03 TB / 2.03 TB free]
Total: 4 [8.10 TB] / in use: 0 [0 ] / in no VG: 4 [8.10 TB]
```

- 4 Create the volume group “vg00” from the physical volumes you created in the preceding step, using the following command:

```
vgcreate vg00 <list of volumes>
```

where <list of volumes> is the list of physical volumes you created in the preceding step. For example:

- For arrays with 450GB drives:

```
vgcreate vg00 /dev/sdb /dev/sdc /dev/sdd /dev/sde
```

- For smaller capacity drives:

```
vgcreate vg00 /dev/sdb1 /dev/sdc1 /dev/sdd1 /dev/sde1
```

---

**TIP** You can use the command `vgremove` to delete any erroneously entered volume.

---

- 5 Verify the volume was created and obtain the value of the “Free PE / Size” field. Type:

```
vgdisplay -v
```

In the output, find the line that contains the “Free PE / Size” field and write down the value of the “Free PE”. For example, in the following example output the “Free PE” value is 2124556.

```
Free PE / Size 2124556 / 8.10 TB
```

- 6 Create a new logical volume on “vg00”, using the following command:

```
lvcreate -l <Free_PE_value> -i <#_of_physical_volumes> -I 32 -n lvol1  
vg00
```

where <Free\_PE\_value> is the “Free PE” value you noted in the preceding step and <#\_of\_physical\_volumes> is the number of physical volumes. If we continue with the example used in the previous steps, you would type:

```
lvcreate -l 2124556 -i 4 -I 32 -n lvol1 vg00
```

The output confirms the creation of the logical volume:

Logical volume "lv011" created

---

**NOTE** If the command outputs several lines about a file descriptor leaked on `lvdisplay` invocation, ignore them.

---

- 7 Check if the `adsk_lvm` startup script has been installed by the DKU to enable automatic LVM reassembly upon reboot:

```
chkconfig --list | grep adsk_lvm
```

if the script is properly configured, the command output is the following:

```
adsk_lvm 0:off 1:off 2:on 3:on 4:on 5:on 6:off
```

If the command output is different, enable the script by typing:

```
chkconfig --add adsk_lvm
```

```
chkconfig adsk_lvm on
```

## Creating the XFS Filesystem on the LVM device

After having created the LVM logical volume, you are now ready to create and mount the XFS filesystem.

**To create and mount an XFS filesystem:**

- 1 Identify the optimal `agsize` value for your array by running the `mkfs.xfs` command. Type:

```
mkfs.xfs -d agcount=128 -f /dev/vg00/lv011
```

This command displays diagnostics information similar to the following (your values may differ):

```
meta-data=/dev/vg00/lv011 agcount=128, agsize=1066667 blks
          =                sectsz=512 attr=0
data      =                bsize=4096 blocks=134400000, imaxpct=25
          =                sunit=16   swidth=64 blks, unwritten=1...
```

- 2 From the diagnostic information printed in the previous step, note the following values:
  - `agsize` on the first line
  - `sunit` and `swidth` on the fourth line
- 3 Depending on the values of `sunit` and `swidth`, calculate a new `agsize` value using one of the following three methods:
  - If the values of `sunit` and `swidth` are both equal to 0, multiply the `agsize` value by 4096. For example (your values will differ):  
 $1066667 * 4096 = 4369068032$   
Proceed to step 4 using the value calculated above as the new `agsize` value.
  - If the command displays a warning message about the `agsize` being a multiple of the stripe width, multiply the `agsize` value by 4096, and subtract the `sunit` value multiplied by 4096. For example (your values will differ):  
 $1066667 * 4096 = 4369068032$   
 $16 * 4096 = 65536$   
 $4369068032 - 65536 = 4369002496$   
Proceed to step 4 using the value calculated above as the new `agsize` value.
  - If the values of `sunit` and `swidth` are not equal to 0, and no warning message appears, proceed to step 4 using the `agsize` value displayed by the `mkfs.xfs` command in step 1.

- 4 Run the `mkfs.xfs` command again to create the XFS filesystem on the device `/dev/vg00/lvol1` using the value calculated in one of the previous steps. Type:

```
mkfs.xfs -d agsize=<new agsize> -f /dev/vg00/lvol1
```

For example (your values will vary):

```
mkfs.xfs -d agsize=4369068032 -f /dev/vg00/lvol1
```

The filesystem is created on the storage array.

---

**NOTE** If the command fails, redo your calculations starting from step 1.

---

- 5 Verify that the storage can be mounted by typing one of the following commands:

- For HP Z800 systems: **mount /mnt/StorageMedia**

- For older systems: **mount /mnt/stoneMedia**

The storage should mount, as the DKU installation script should have created the mount point directory for your storage (`/mnt/StorageMedia` on HP Z800 workstations, or `/mnt/stoneMedia` on older workstations), as well as the corresponding entry in the `/etc/fstab` file.

If you receive an error message and the storage does not mount, follow the instructions in the next section to manually mount the storage.

## Creating a Mount Point and Mounting the Storage

If the mount point directory for your storage was not created automatically by the DKU, or if the storage does not mount, perform the following procedure to create the mount point and mount the storage manually.

**To create a mount point and mount the storage:**

- 1 Create the directory that will serve as the mount point for the filesystem, if it does not exist. For example:

```
mkdir /mnt/StorageMedia
```

- 2 Mount the XFS filesystem from the logical volume `/dev/vg00/lvol1` on the directory you created in the previous step. For example:

```
mount -av -t xfs -o rw,noatime,inode64 /dev/vg00/lvol1 /mnt/StorageMedia
```

The filesystem is mounted as `/mnt/StorageMedia`.

- 3 Confirm that the storage is now mounted. Type:

```
df -h
```

The output should list `/dev/mapper/vg00-lvol1` mounted on your mount point directory. For example:

```
/dev/mapper/vg00-lvol1
```

```
814G 547G 267G 68% /mnt/StorageMedia
```

- 4 Using a text editor, add an entry in the `/etc/fstab` file so that the filesystem gets mounted automatically at startup. For example:

```
/dev/vg00/lvol1 /mnt/StorageMedia xfs rw,noatime,inode64
```

- 5 Optional: confirm that the filesystem can mount automatically by rebooting the workstation and using the command `df -h` again.



# Installing Lustre on the Linux Workstation

# 7

## Topics in this chapter:

- [Overview](#) on page 47
- [Installation Requirements Checklist](#) on page 47
- [Installing Lustre](#) on page 48

## Overview

This chapter describes the Lustre software installation process. If you received a new system with this release, the software is already installed, and you do not have to perform the procedures in this chapter. Use these procedures if you are upgrading from the previous release of Lustre, or if you must reinstall the software at any point.

## Installation Requirements Checklist

Before you install or upgrade Lustre, you must ensure your system meets the following installation requirements.

**Hardware** It is a fully integrated system with all the appropriate hardware properly installed. See the *Hardware Setup Guide* for your platform.

**Operating System** It is running the correct version of Red Hat Enterprise Linux, and the correct version of the Discreet Kernel Utilities (DKU). See [Do I Need to Reinstall Linux?](#) on page 29 for information on the required Red Hat Linux distribution, and the latest Release Notes for the required DKU version.

---

**NOTE** To guarantee optimal performance, it is mandatory that only Autodesk Visual Effects, Finishing and Colour Grading applications, and the required Red Hat Enterprise Linux packages be installed on the workstation.

---

**Permissions** You have *root* access to your system. Many hardware and software configuration and installation procedures require *root* access to your Linux workstation. If you cannot log in as *root*, contact your system administrator. The default *root* account password on Linux workstations with Autodesk software installed is *password*.

**Installation Media** You have downloaded the Lustre installation package from the Autodesk FTP site. The download links are provided in the release announcement you received from Autodesk.

## Installing Lustre

Use the following procedure to install Lustre.

### To install Lustre:

- 1 As *root*, open a Linux terminal.
- 2 If you are not installing from an application disc, download the application *tar* file from Autodesk. The download link is provided in the release announcement you received from Autodesk.

---

**TIP** After downloading the *tar* file, verify the its integrity using the Linux md5 checksum provided. In the directory where you saved the *tar* file and the checksum file, type **md5sum** <filename.tar.gz>, and make sure the checksum displayed matches the Linux md5sum listed in the checksum file.

---

- 3 If you need to change your system date or time, do it **before** installing the application.
- 4 Access your installation package:
  - If you are installing from an application disc, mount the disc, then go to the root directory of the mounted disc:

```
mount /mnt/cdrom
cd /mnt/cdrom
```
  - If you are installing from a downloaded application *tar* file, unpack the *tar* file:

```
tar -zxvf <filename.tar.gz>
```

The file is uncompressed and an installation directory is created on your system.

- 5 Navigate to the installation directory and start the installer by typing:

```
./INSTALL_LUSTRE_<version_number>
```

- 6 If prompted with a message asking if you would like to automatically run Backburner Server on this machine, click Yes.

The Lustre package is installed. A new user account is created for the version of Lustre you just installed. Read the following chapter for information on licensing and starting your application for the first time.

---

**NOTE** If you are upgrading to a service pack of the same release or extension, you do not need to re-license your software.

---

# Licensing and Starting the Application

# 8

## Topics in this chapter:

- [Licensing Workflow](#) on page 49
- [Determining the Licenses You Require](#) on page 50
- [Obtaining the Host ID](#) on page 50
- [Requesting License Codes](#) on page 51
- [Entering License Codes](#) on page 51
- [Starting the Application for the First Time](#) on page 52

## Licensing Workflow

If you have purchased subscription and are upgrading to a new release, your new license is sent to you by the Autodesk Media and Entertainment department. After receiving your license, perform the following tasks:

- 1 Install the new license. See [Entering License Codes](#) on page 51.
- 2 Start the application and accept the license agreement. See [Starting the Application for the First Time](#) on page 52.

If you are installing the application for the first time, use the following steps to obtain and install license codes.

### To obtain and install license codes for the application:

- 1 Determine which license codes you require. See [Determining the Licenses You Require](#) on page 50.
- 2 Obtain the host ID of the workstation. See [Obtaining the Host ID](#) on page 50.

- 3 Request temporary license codes. See [Requesting License Codes](#) on page 51.
- 4 Install the temporary license codes. See [Entering License Codes](#) on page 51.
- 5 Start the application and accept the license agreement. See [Starting the Application for the First Time](#) on page 52.
- 6 When you receive permanent license codes, install those codes. See [Entering License Codes](#) on page 51.

## Determining the Licenses You Require

There are two license type categories: main components and optional components.

The main component license types are as follows:

- Master Station
- Lustre Station with Primary Grading
- Lustre Station without Primary Grading
- Slave Renderer
- Background Renderer

The optional component license types are as follows:

- HD Video I/O
- HD Dual Link Video I/O

License codes must be requested for each main and optional Lustre component.

## Obtaining the Host ID

To request a license code, you must provide the unique host ID of your workstation. The host ID is used to authenticate your registration.

**To obtain the host ID:**

- 1 Open a terminal and run the `dlhostid` script by typing:

```
dlhostid
```

A message similar to the following one appears, containing the host ID:

```
dlhostid – Copyright © 2005 by Autodesk, Inc./Autodesk Canada Co. All rights reserved.
```

```
The lmhost ID of this machine is "00110910DA2E" (eth0)
```

```
The Discreet host ID of this machine is  
"DLHOST01=25231AEF83AD9D5E9B2FA270DF4F20B1"
```

- 2 Send the Discreet host ID to the Autodesk Licensing Department to receive your application license code. When you record the Discreet host ID, make sure you include the `DLHOST01=` string as well as the code; for example, `DLHOST01=25231AEF83AD9D5E9B2FA270DF4F20B1`

---

**NOTE** Make sure you obtain a host ID for each workstation on which you install the application.

---

# Requesting License Codes

You can obtain application license codes by registering the application with the Autodesk Media and Entertainment Licensing Department by e-mail or telephone.

---

**NOTE** For emergencies, you can acquire an immediate temporary license code by going to the Autodesk Registration Web page at [www.autodesk.com](http://www.autodesk.com), clicking the Services & Support link, selecting your product, then clicking Request a Short-term License, and following the step-by-step instructions. A 4-day license code is e-mailed to the address you provide.

---

## To obtain license codes by e-mail:

- 1 Gather the following information:
  - Company name
  - Contact name (with e-mail and phone contact information)
  - *dlhostid* for every workstation on which Lustre is installed
  - Required license type for every workstation (see [Determining the Licenses You Require](#) on page 50)
  - Requested term
- 2 Send the form by e-mail to [me.support@autodesk.com](mailto:me.support@autodesk.com).  
You will receive your temporary license code within eight business hours.

## To obtain license codes by telephone:

- Speak to a licensing representative by calling the Autodesk Licensing Department toll-free in North America at 1-800-925-6442 between 8 AM and 8 PM eastern standard time (EST). Outside of North America, call 1-514-954-7199.

# Entering License Codes

Once you receive a license code, it needs to be installed and recognized by Lustre.

## To install a license:

- 1 If the directory `/usr/local/flexlm/licenses/` does not already exist, create it. Type:  

```
mkdir -p /usr/local/flexlm/licenses/
```
- 2 Create a file called `DL_license.dat` in the `/usr/local/flexlm/licenses/` and open it in a text editor, such as `nedit`:  

```
nedit /usr/local/flexlm/licenses/DL_license.dat
```

---

**NOTE** The license directory and filename are case-sensitive and must be created and named exactly as specified.

---

- 3 Copy the license code you received from Autodesk into the `DL_license.dat` file.

## Starting the Application for the First Time

Once you have installed Lustre and obtained your license codes, you are ready to start the software.

- To start a Lustre Master Station or HD Station, log into the application's Linux user account and double-click the Lustre icon on the KDE desktop.
- To start a Lustre Station, log into the application's Linux user account, open a terminal and type:  
**assistant**

When the Lustre UI appears, you can begin working. For a new project, this includes:

- Creating the project and setting its parameters (such as logarithmic or linear colour space)
- Specifying the location of footage
- Setting up user profiles

---

**NOTE** For information on creating projects and users, see the chapter "Project Management" in the *Lustre User Guide*.

---

# Configuring Slave Rendering

# 9

## Topics in this chapter:

- [Workflow for Configuring Slave Rendering](#) on page 53
- [Configuring the Network Addresses](#) on page 54
- [Installing the Slave Renderer Software and License](#) on page 55
- [Configuring Read/Write Access to Storage from the Slave Renderer](#) on page 55
- [Mounting the Storage on the Slave Renderer](#) on page 56
- [Setting Up Lustre Projects to Use Slave Rendering](#) on page 57

## Workflow for Configuring Slave Rendering

The Slave Renderer renders modified frames when the artist moves to the next shot on the timeline from the Master Station or HD Station. With slave rendering, playback is enabled without compromising the interactivity of the Master Station or HD Station during creative sessions.

See the following table for a summary of the steps necessary to configure slave rendering.

Step:	Refer to:
1. Install Linux and the Discreet Kernel Utility (DKU) on the Slave Renderer.	<a href="#">Installing Red Hat Enterprise Linux and Installing the DKU</a> on page 33
2. Connect the Slave Renderer to the Master or HD Station.	The Slave Renderer wiring diagram for your workstation in <a href="#">Setting Up Your Workstation Hardware</a> on page 9
3. Configure the network addresses that the Slave Renderer and Master or HD Station use to communicate.	<a href="#">Configuring the Network Addresses</a> on page 54.

Step:	Refer to:
4. Install the slave rendering software and license.	<a href="#">Installing the Slave Renderer Software and License</a> on page 55.
5. Configure read/write access to storage attached to the Master or HD Station from the Slave Renderer.	<a href="#">Configuring Read/Write Access to Storage from the Slave Renderer</a> on page 55.
6. Mount the storage attached to the Master or HD Station on the Slave Renderer.	<a href="#">Mounting the Storage on the Slave Renderer</a> on page 56.
<b>NOTE</b> Skip this step if you are using the BrowseD service.	
7. Set up the configuration file so that Lustre projects can use slave rendering.	<a href="#">Setting Up Lustre Projects to Use Slave Rendering</a> on page 57.
8. Render shots as you work.	<i>The Autodesk Lustre User Guide.</i>

## Configuring the Network Addresses

After you physically connect the Slave Renderer to the Master or HD Station, you must assign an IP address to each of the two ports of the physical connection (one port on the Slave Renderer, and one on the Master or HD Station).

The addresses you choose must not conflict with any of the other IP addresses on the network.

In a Lustre installation in which you have not altered any of the IP addresses used by default, you can use the following IP addresses.

Master Station or HD Station	193.1.1.1
Slave Renderer	193.1.1.2

### To configure the network addresses:

- 1 Start the Slave Renderer and log in as *root*.
- 2 Assign an IP address to the port that connects the Slave Renderer to the Master or HD Station.

**TIP** Typically, your Linux workstation's TCP/IP settings are configured in the file `/etc/sysconfig/network-scripts/ifcfg-eth<port#>`, where `<port#>` is the port used to connect the Slave Renderer to the Master or HD Station. For example, if the connection is on port 0 of the onboard network card, the file you would edit would be `/etc/sysconfig/network-scripts/ifcfg-eth0`.

- 3 Log in to the Master or HD Station as *root*.
- 4 Assign an IP address to the port that connects the Master or HD Station to the Slave Renderer.

**TIP** Typically, your Linux workstation's TCP/IP settings are configured in the file `/etc/sysconfig/network-scripts/ifcfg-eth<port#>`, where `<port#>` is the port used to connect the Master or HD Station to the Slave Renderer. For example, if the connection is on port 0 of the onboard network card, the file you would edit would be `/etc/sysconfig/network-scripts/ifcfg-eth0`.

# Installing the Slave Renderer Software and License

Use the following procedures to install the Slave Renderer software and license.

## To install the Slave Renderer software:

- 1 Start the Slave Renderer and log in as *root*.
- 2 Navigate to the directory where you unpacked the Lustre installation package.
- 3 Check the contents of the directory by typing:

```
ls
```

Verify that the directory contents include the installation script file `INSTALL_LUSTRE_<version_number>_SLAVE`.

- 4 Start the installation script by typing:  
`./INSTALL_LUSTRE_<version_number>_SLAVE`  
The Slave Renderer is installed.

## To install the Slave Renderer license:

- 1 If you have not already done so, obtain a license for the Slave Renderer. You will need the *dlhostid* of the Slave Renderer. Refer to [Obtaining the Host ID](#) on page 50 and [Requesting License Codes](#) on page 51.
- 2 Log in to the Slave Renderer as *root*.

- 3 Create the directory for the license file. Type:  
`mkdir -p /usr/local/flexlm/licenses/`

- 4 Create a file called `DL_license.dat` using a text editor such as *nedit*, and save it to the new directory. Type:  
`nedit /usr/local/flexlm/licenses/DL_license.dat`

---

**NOTE** The license directory and filename are case-sensitive and must be created and named exactly as specified.

---

- 5 Copy the license code you received for the Slave Renderer from Autodesk to the `DL_license.dat` file.

# Configuring Read/Write Access to Storage from the Slave Renderer

The storage must be exported from the Master or HD Station in order to allow read/write access. This, in turn, makes it possible for the Slave Renderer to remotely mount the storage system.

## To export the storage attached to the Master or HD Station:

- 1 Log in to the Master Station as *root*. The storage filesystem is mounted as `/mnt/StorageMedia` (for HP Z800 stations), or `/mnt/md0` (for older systems).
- 2 Open the `/etc/exports` file in *vi* by typing:  
`vi /etc/exports`  
The contents of the `exports` file appears, listing the available network shares (filesystems mountable over the network). Next, add a new line for the mount point of the storage filesystem.
- 3 Scroll to the end of the `exports` file using the arrow keys.

- 4 Press **Insert** to enter insert mode.
- 5 Add a new line for the mount point. For example:  

```
/mnt/StorageMedia *(rw,no_subtree_check,async)
```

 or  

```
/mnt/md0 *(rw,no_subtree_check,async)
```

 This line creates a network share for the mount point for the storage filesystem. Other users on the network will access the storage devices by mounting its network share.
- 6 Press **Esc** to enter command mode.
- 7 Save and close the file by pressing **Esc** to enter command mode, then **Shift + zz**.  
The file is saved and you are returned to the command prompt.
- 8 Activate the new network share for the storage device. Type:  

```
exportfs -a
```

 The list of network shares is refreshed from the *exports* file.
- 9 Confirm the storage devices are available to be mounted by typing:  

```
exportfs
```

 The network shares of the Lustre Frame server appears in a list similar to the following:  

```
/mnt/StorageMedia <world>
```

```
...
```

## Mounting the Storage on the Slave Renderer

After you configure read and write access on the storage filesystem, you create a mount point on the Slave Renderer and configure the Slave Renderer to automatically mount that filesystem.

**To create a mount point on the Slave Renderer:**

- 1 On the Slave Renderer, log in as *root*.
- 2 To go to the top level directory, in a terminal, type:  

```
cd /
```
- 3 Create a directory for the mount point. For example, type:  

```
mkdir /mnt/StorageMedia
```
- 4 Change the permissions on this folder to allow read/write access. For example, type:  

```
chmod 666 /mnt/StorageMedia
```
- 5 Mount the storage exported from the Master Station. For example, if the storage on the Master Station is mounted under */mnt/StorageMedia* type:  

```
mount <Master Station>:/mnt/StorageMedia/ /mnt/StorageMedia
```

**To configure the Slave Renderer to automatically mount the storage filesystem:**

- 1 In a terminal, type:  

```
vi /etc/fstab
```
- 2 Press **Insert** on the keyboard, and then add a line for the mount point you just created:

```
<IP address>:/<exported filesystem> /<mount point> nfs rw,bg,hard,intr  
0 0
```

For example, type:

```
172.16.60.226:/mnt/StorageMedia /mnt/StorageMedia nfs rw,bg,hard,intr 0  
0
```

---

**NOTE** Both examples are single lines.

---

- 3 Save and close the file by pressing **Esc** to enter command mode, then **Shift + zz**.  
The file is saved and you are returned to the command prompt.
- 4 Restart the Slave Renderer machine.  
When you restart your system, the storage filesystem mounts automatically.

## Setting Up Lustre Projects to Use Slave Rendering

After you have configured the Master or HD Station and the slave rendering machine to communicate, you must:

- Configure the “HostName string=” keyword with the slave rendering machine IP address in the Slave Renderer section of the *init.config* file. See [Software, Project, and User Configuration Files](#) on page 77.
- Enable slave rendering for the project. See the Project Management chapter in the user guide.



# Configuring Background Rendering

# 10

## Topics in this chapter:

- [About Background Rendering](#) on page 59
- [Background Rendering Components](#) on page 60
- [Workflow for Setting Up Background Rendering](#) on page 61
- [Sharing the Storage for Read/Write Access from Background Render Nodes](#) on page 61
- [Installing Backburner Manager and Backburner Web Monitor](#) on page 62
- [Configuring Lustre to Detect Backburner Manager](#) on page 63
- [Setting Up Render Nodes](#) on page 63
- [Specifying the Background Rendering Path in Lustre](#) on page 69

## About Background Rendering


During background rendering, a shot on the timeline is rendered by a background rendering network. This is different from the Slave Renderer, which renders shots on a shot-by-shot basis as they are colour graded to enable playback performance.

Background rendering in Lustre is performed using Burn™ for Lustre, also known as the Lustre Background Renderer. This application is specific to Lustre and provides asynchronous background processing of Lustre render jobs. By off-loading rendering activities to remote Linux® servers, Lustre stations are freed up for interactive colour grading, while background rendering is sped up by splitting the task among multiple hosts.

# Background Rendering Components

The components of the basic background rendering package include Lustre, a background management and monitoring application (such as Backburner Web Monitor, or the Backburner Monitor in WiretapCentral), and several render nodes running on Linux servers. The Lustre system and all background rendering nodes are connected through NFS mount points over a dedicated background TCP/IP network.

The background rendering components are illustrated as follows.

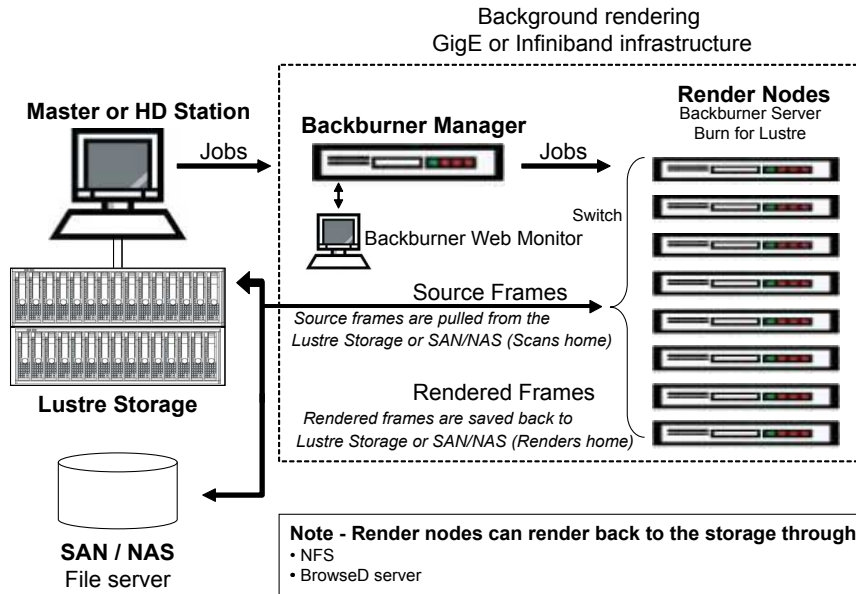

---

**NOTE** You can have up to eight render nodes on the background rendering network.

---

For faster access to remote locations for footage and metadata, BrowseD can be used instead of NFS or SMBFS mount points. BrowseD is covered in detail in [Configuring BrowseD](#) on page 71. The other background rendering components are described as follows.

**Lustre application** This is the client application. Running on a Linux workstation, Lustre rendering jobs are submitted for background rendering through the Render | Backburner menu.

**Backburner Manager** This is the hub of the background rendering workgroup. Backburner Manager can reside on a Master Station or Lustre station, or can be installed on a dedicated machine in your network. When jobs are submitted from Lustre to Backburner Manager, Backburner Manager breaks each submitted job into tasks and distributes the tasks to the rendering servers on the network. To view the progress of the tasks, use Backburner Web Monitor.

**Backburner Web Monitor** This is the user interface for the Backburner rendering network. It allows you to view and control jobs currently being processed. You can stop, restart, reorder or remove jobs completely using the Monitor. You also use Backburner Web Monitor to identify any render nodes that are not working and check the overall status of the rendering network.

Backburner Web Monitor can be accessed through a Web browser from any workstation on the network.

**Backburner Server** This is a server that runs on render nodes. Backburner Server accepts commands from Backburner Manager to start and stop rendering tasks. Backburner Server communicates through a plug-in to execute rendering tasks.

---

**NOTE** Consult the latest *Autodesk Backburner Installation Guide* and *Autodesk Backburner User Guide* for detailed information on Backburner. Use the guides to obtain Backburner information that does not relate directly to Lustre background rendering, such as details on setting up Web monitoring and troubleshooting tips.

---

**Burn for Lustre** This is the Linux rendering engine that renders one or more frames from Lustre render jobs.

**Shared storage mount point** This is the mount point on each Linux server that allows Burn for Lustre to transfer rendered frames/files to the Lustre storage system.

---

**NOTE** The storage does not have to be mounted on the render nodes if you are using BrowseD for background rendering. See [Using BrowseD for Rendering with Burn for Lustre](#) on page 74 .

---

## Workflow for Setting Up Background Rendering

The following table outlines the general workflow for installing and configuring background rendering.

Step:	Refer to:
1. Enable sharing on the system storing the Lustre project and render files.	<a href="#">Sharing the Storage for Read/Write Access from Background Render Nodes</a> on page 61.
2. Install and configure Backburner Manager and Backburner Web Monitor.	<a href="#">Installing Backburner Manager and Backburner Web Monitor</a> on page 62.
3. Configure the Lustre workstation to connect to Backburner Manager so that it can send background render requests to Backburner Manager.	<a href="#">Configuring Lustre to Detect Backburner Manager</a> on page 63.
4. Set up the background rendering components of the nodes.	<a href="#">Setting Up Render Nodes</a> on page 63.
5. Specify the mount point of the background rendering nodes in the Lustre application.	<a href="#">Specifying the Background Rendering Path in Lustre</a> on page 69.

## Sharing the Storage for Read/Write Access from Background Render Nodes

In order to allow read and write access, the storage must be exported from the system to which it is connected. This makes it possible for the background rendering components on the network to remotely mount the storage system.

**To make the storage system visible over the network:**

- 1 Login to the Lustre system (or the central storage system) as *root*. The storage filesystem is mounted as */mnt/StorageMedia*(on HP Z800 workstations) or */mnt/md0*(on older workstations).
- 2 Open the */etc/exports* file in a text editor, such as *vi*.  
The contents of the *exports* file appears, listing the available network shares (filesystems mountable over the network).
- 3 At the end of the file, add a new line for the mount point of the storage filesystem:  

```
/mnt/StorageMedia *(rw,no_subtree_check,async)
```

or  

```
/mnt/md0 *(rw,no_subtree_check,async)
```

This line creates a network share for the mount point of the storage filesystem. Other users on the network will access the storage devices by mounting its network share.
- 4 Save and close the file.
- 5 Activate the new network share for the storage device. Type:

```
exportfs -a
```

The list of network shares is refreshed from the *exports* file.

- 6 Verify the storage devices are available to be mounted by typing:

```
exportfs
```

Make sure the storage filesystem mount points are listed in the command output.

## Installing Backburner Manager and Backburner Web Monitor

On Lustre stations, Backburner components are automatically installed with the Lustre software. The installer asks you if you want to run Backburner components on the station.

To avoid performance degradation, it is recommended to avoid running Backburner components on your Lustre stations, and to relocate Backburner Manager on a dedicated Linux machine in your network. Render jobs handled by Backburner can be viewed and managed in Backburner Web Monitor from any workstation on the network.

### To install Backburner Manager and Backburner Web Monitor on a Linux system:

- 1 Open a terminal and log in as root.
- 2 Access the Autodesk Lustre software installation package (from a downloaded *tar* file or on CD).
- 3 Install Backburner by typing:

```
rpm -Uvh backburner*
```

The Backburner components (Server, Manager and Web Monitor) are installed on the system.

- 4 If the system on which you are installing Backburner runs Linux in graphical mode, you are asked if you want to automatically run Backburner Manager and Backburner Server on the machine. Answer Yes to the question about the Manager, and No to the question about the Server.
- 5 Run the Backburner Web Monitor configuration script:

```
/usr/discreet/backburner/backburnerConfigWeb
```

The script automatically configures Backburner Web Monitor.

### To verify that Backburner components are running properly:

- 1 On the system on which you installed Backburner Manager, as root, type:

```
ps -ef | grep -i backburner
```

The output of the command should include a line containing the path to the Backburner Manager application, similar to the following:

```
root 14989 10 Nov29 ? 00:02:36  
/usr/discreet/backburner/backburnerManager
```

---

**NOTE** If Backburner Manager is not running, the Backburner log file */usr/discreet/backburner/Network/backburner.log* may be a useful source of information for troubleshooting.

---

- 2 To test that Backburner Web Monitor is installed and configured properly, open a Web browser on the Manager machine and point it to *http://localhost/backburner*.  
Backburner Web Monitor opens. If you are asked for a user name and password, use *backburner* for both.

Refer to the *Autodesk Backburner Installation Guide* for detailed information on configuring Backburner.

## Configuring Lustre to Detect Backburner Manager

For Backburner Manager to receive render jobs, you must set up the Lustre application to connect to the system on which Backburner Manager is running.

To configure new projects to use background rendering, you must set the IP address of the Backburner Manager workstation in the *init.config* file. This value will be copied to the configuration of all subsequently created projects.

### To configure the Lustre application to detect Backburner Manager:

- 1 Locate the `Backburner` keyword.
- 2 In the `HostName` line, set the `string` parameter to the IP address of the system where Backburner Manager is installed. For example:

```
<HostName string="172.19.23.161" />
```

---

**NOTE** Do not forget the quotes.

---

- 3 Save and close the configuration file.

For more information on the configuration file keywords, see *Software, Project, and User Configuration Files*.

## Setting Up Render Nodes

You can set up as many as eight render nodes for background rendering with Lustre. On each system intended for background rendering, you must do the following.

Step:	Refer to:
1. Verify that the render nodes meet the minimum system requirements.	<a href="#">Render Node Hardware and Software Requirements</a> on page 63.
2. Install the appropriate Red Hat operating system.	<a href="#">Installing Linux on Render Nodes</a> on page 64
3. Configure each node to mount the storage that contains the project render files.	<a href="#">Mounting the Storage on the Render Nodes</a> on page 65.
4. Install Burn for Lustre.	<a href="#">Installing Burn for Lustre</a> on page 66.
5. Connect the render nodes to Backburner Manager.	<a href="#">Configuring Backburner Server to Detect Backburner Manager</a> on page 67.
6. Start the Backburner Server on each render node.	<a href="#">Starting Backburner Server</a> on page 67.

## Render Node Hardware and Software Requirements

Render nodes purchased from Autodesk come with all the necessary hardware and software components preinstalled.

To use Burn for Lustre on nodes that were not purchased from Autodesk, the nodes must meet the minimum hardware and OS requirements listed in the following table.

Processor:	1 or 2 Xeon® Intel® Processor DP
Memory:	2 GB
Hard drive:	20 GB
Ethernet:	100/1000 Mbps
OS:	Red Hat Enterprise Linux 5.3 with Workstation option, customized with the Autodesk kickstart file.

## Installing Linux on Render Nodes

Autodesk Burn for Lustre runs under the custom 64-bit Autodesk distribution of Red Hat Enterprise Linux. Render nodes purchased from Autodesk ship with the correct Autodesk distribution of Red Hat Enterprise Linux on DVD.

If you did not purchase your render node from Autodesk, you must get your own 64-bit distribution of Red Hat Enterprise Linux Desktop 5.3 with Workstation option, and customize it using the Autodesk kickstart file.

The kickstart is used to automatically install the packages required for Burn, some of which are not installed as part of a general installation.

This file is available in Lustre installation directory. You must copy it to the DVD of your Linux distribution.

---

**TIP** The kickstart file can be used to automate the Linux installation process for multiple render nodes.

---

### To copy the Autodesk kickstart file to the DVD of your Linux distribution:

- 1 On a computer running Linux and with a DVD burner, log in as root.
- 2 Insert the DVD of your Linux distribution into the drive. You do not need to mount it at this time.
- 3 In a terminal, extract an ISO image of the disc by typing:  

```
dd if=/dev/<optical_disc_device> of=/<destination path for the extracted ISO image>
```

For example:  

```
dd if=/dev/cdrom of=/tmp/RHEL5.3.iso
```

Depending on the speed of your disc drive, this command may take several minutes to complete.
- 4 Eject the disc.
- 5 Access the *dist* subdirectory of the Lustre installation package.  
The directory contains a kickstart file, *ks\_centos5\_rh5.cfg*, as well as a script that adds the kickstart file to an ISO image.
- 6 Run the *build\_kickstart\_cd* script to add the kickstart file to the ISO image of your Linux distribution DVD:  

```
./build_kickstart_cd ks_centos5_rh5.cfg <original ISO image name> <new ISO image name>
```

For example, if the ISO image you created is called */tmp/RHEL5.3.iso* and you want the new ISO image to be called */tmp/RHEL5.3\_KS.iso*, type:

```
./build_kickstart_cd ks_centos5_rh5.cfg /tmp/RHEL5.3.iso  
/tmp/RHEL5.3_KS.iso
```

- 7 Once the new ISO image of the Linux distribution DVD is created, burn it to a blank disc using a tool such as **cdrecord**.

---

**NOTE** Type **man cdrecord** for information about this utility.

---

The new disc that you burn contains the Autodesk kickstart file and replaces the DVD in the Linux distribution.

You are now ready to install Linux on the render node. See [Linux Installation Workflow](#) on page 30 for instructions on installing Linux.

## Mounting the Storage on the Render Nodes

After Red Hat Linux is installed, you must mount the media storage on each render node using an NFS mount point. This involves identifying the IP address of the system that manages the storage and setting a mount point on each render node that points to the correct path on the storage. Also, for this mount point to be available when you restart the system, you must add an entry in the *fstab* file.

If the system that stores the render files is different from the system that stores the Project Home directories, you need two (or more) mount points. For example, if, in the Project Setup menu, the Project Home path is **/mnt/md0/SCENES** and the Renders Full Home path is *Sanserver:/RENDERS* located on a central storage system, you must define a mount point for each path.

The *BrowseD* service can also be used to allow background render nodes to access the workstation's storage. BrowseD allows for fast access and requires a separate license. If you are using BrowseD for background rendering, you do not have to mount the storage on the render nodes. See [Configuring BrowseD](#) on page 71.

### To mount the storage on a render node:

- 1 Determine the IP address of the computer that manages the storage.  
If you are using direct attached storage only, this is the IP address of the Lustre Master Station or Lustre HD Station. You must also determine the IP address of your centralized file server if you are also using a server area network (SAN) or network attached storage (NAS).
- 2 On the render node, log in as *root*.
- 3 Go to the root directory. In a terminal, type:  
**cd /**
- 4 Create a directory for the mount point. For example, type:  
**mkdir /mnt/md0**

---

**NOTE** The directory name must be the same for the mount point on each node. Also, the directory should not be created in the */root* directory, but in the */mnt* directory.

---

- 5 Change the permissions on this folder to allow read/write access. For example, type:  
**chmod 666 /mnt/md0**
- 6 Set up the mount point to access the Lustre system storage or the central system storage. You must use the mount point as defined in the *Project\_home* setting in the Lustre Project Setup menu. For example, if the Project Home is */mnt/md0/SCENES*, and the Linux mount point directory is named */mnt/md0*, the mount command will be:

```
mount <hostname>:/mnt/md0/SCENES /mnt/md0
```

To add an entry in the *fstab* file:

- 1 Open the file */etc/fstab* in a text editor and then add a line for your new mount point:

```
<IP address>:/<exported filesystem> /<mount point> nfs  
rw,bg,hard,intr,nfsvers=3 0 0
```

For example, type:

```
172.16.60.226:/mnt/md0 /mnt/md0 nfs rw,bg,hard,intr,nfsvers=3 0 0
```

---

**NOTE** The example is a single line.

---

- 2 Save and close the file.  
The file is saved and you are returned to the command prompt.
- 3 Restart the render node.  
When you restart your system, this remote location will mount automatically.

## Installing and Configuring Burn for Lustre

Install and configure Burn for Lustre on each render node. To install and configure Burn for Lustre, you must:

- Install Burn for Lustre.
- Add the IP address of the machine where Backburner Manager is installed to the *manager.host* file on each render node.
- Start the Backburner Server on each render node.
- License Burn for Lustre.

### Installing Burn for Lustre

Perform the following procedure to install the Burn for Lustre software on each node.

---

**NOTE** When you install Burn for Lustre, the necessary Backburner components are also installed on the render node.

---

To install Burn for Lustre:

- 1 Open a terminal and log in as *root*.
- 2 Access your Autodesk Lustre installation package (from a downloaded *tar* file or on CD).
- 3 Start the Burn installation script by typing:

```
./INSTALL_LUSTRE_<application_version>_BURN
```

The Burn for Lustre package is installed. For instructions on obtaining and installing a Burn license, see [Licensing Burn for Lustre](#) on page 68.

- 4 Repeat this procedure on all render nodes.

## Configuring Backburner Server to Detect Backburner Manager

Backburner Server needs to be able to detect the location of Backburner Manager in order to provide status information concerning the render jobs. Set the IP address of the Backburner Manager machine in the `/usr/discreet/backburner/cfg/manager.host` configuration file on each render node.

---

**NOTE** You can also use the hostname of the Backburner Manager machine, if it has been properly defined in the `/etc/hosts` file.

---

### To configure Backburner Server to detect Backburner Manager:

- 1 On the Backburner Manager system, open a terminal and log in as root.
- 2 Determine which IP address the Backburner Manager workstation uses to connect to the network. Type:  
**ifconfig**  
Information about all the network adapters is displayed. The second line of the output for each adapter contains the IP address (listed as “inet addr”). For example:  
`inet addr:172.16.129.152 Bcast:172.16.135.255 Mask:255.255.248.0`  
Write down the IP address of the network adapter. If the machine has several network adapters, make sure you write down the address of the one connected to your render network.
- 3 On each render node, open a terminal and log in as *root*.
- 4 Type:  
**cd /usr/discreet/backburner/cfg**
- 5 Use a text editor to edit the *manager.host* file.
- 6 Enter the IP address of the Backburner Manager machine. For example:  
**10.10.10.1**
- 7 Save and close the file.  
The file is saved and you are returned to the command prompt.

## Starting Backburner Server

You must start the Backburner Server daemon on each Linux system for the first time. Once it is started the first time, the daemon will start automatically.

### To start Backburner Server:

- 1 Log in to your Linux system as *root*.
- 2 In a terminal, type:  
**service backburner\_server start**
- 3 You can verify that Backburner Server is properly configured by checking the log file `usr/discreet/backburner/Network/backburnerServer.log`. Type:  
**tail -f /usr/discreet/backburner/Network/backburnerServer.log**  
The file should contain lines similar to the following:  
`<INF>: Loading plugin: Lustre renderer plugin`
- 4 To stop viewing the file, press **Ctrl+C**.
- 5 Repeat these steps to start Backburner Server on each node in the background rendering network.  
If you cannot start the Backburner Server, contact Autodesk Customer Support.

---

**NOTE** If you need to stop or restart Backburner Server, use one of these commands:

```
/etc/init.d/backburner_server stop
/etc/init.d/backburner_server restart
```

---

### Licensing Burn for Lustre

You need a license for your render nodes. Burn uses a floating license scheme, which means that licenses are centralized on a license server.

The license server automatically provides a license to all registered machines.

The license server can be any of the render nodes on the rendering network.

To obtain a license code for background rendering, contact the Licensing Department with the *dlhostid* and host name of the license server .

#### To obtain the network license:

- 1 Open a terminal on the license server and run the *dlhostid* utility to obtain the unique host ID of the machine. Type:  
**dlhostid**  
A message appears that includes a line indicating the *dlhostid* of the machine. For example:  
The Discreet host ID of this machine is  
"DLHOST01=25231AEF83AD9D5E9B2FA270DF4F20B1"
- 2 Write down the *dlhostid* (including the "DLHOST01=" part).
- 3 Request license codes for background rendering from the Autodesk Media and Entertainment Licensing Department. See [Requesting License Codes](#) on page 51.

#### To install the license server:

- 1 Log in to the license server as *root*.
- 2 Access your Autodesk Lustre installation package (from a downloaded *tar* file or from a CD), and browse to the directory containing the license server installation script. Type:  
**cd Lustre\_<version>\_Renderer\_license\_daemon**
- 3 Check the contents of the directory by typing:  
**ls**
- 4 Verify that the directory contents include the installation script file *INSTALL\_LINUX*.
- 5 Start the installation script by typing:  
**./INSTALL\_LINUX**

#### To add the license to the license server:

- 1 Log in to the license server as *root*.
- 2 Go to the *licenses* directory by typing:  
**cd /usr/discreet/licserv/licenses/**
- 3 In a text editor such as *vi*, create a file called *DL\_license.dat* by typing:  
**vi DL\_license.dat**

- 4 In this file, enter all the information submitted to you by the Licensing Department upon your registration.
- 5 Save and close the file.
- 6 Start the license server by running the following command:  

```
/etc/init.d/license_server start
```

---

**NOTE** The license server starts/stops automatically when the machine is booted/shut down. You can stop and restart the server manually by running one of the following commands:

```
/etc/init.d/license_server stop  
/etc/init.d/license_server start
```

---

**To enable the render nodes to contact the license server:**

- 1 Log in to each render node as root.
- 2 Navigate to the license directory. Type:  

```
cd /usr/local/flexlm/licenses/
```
- 3 Open the *DL\_license.dat* file in a Linux text editor such as *vi*.
- 4 In this file, copy the first three lines of the information submitted to you by the Autodesk Licensing Department upon your registration. For example:  

```
SERVER burn-01 DLHOST01=25231AEF83AD9D5E9B2FA270DF4F20B1  
VENDOR lustre  
USE_SERVER
```
- 5 Save and close the file.

---

**NOTE** Each render node must be able to contact the license server. Use *ping* from each node to the license server to confirm that the machines can communicate.

---

## Specifying the Background Rendering Path in Lustre

The last step in setting up background rendering is to specify the correct mount points in the settings of each project that uses background rendering.

**To add the storage path in Lustre:**

- 1 Start Lustre.
- 2 In the Setup menu, click Settings.
- 3 Select your project in the Project drop-down list, and click Edit.  
The Project Settings menu appears.
- 4 Click Network Rendering, then click Backburner in the Configuration section.
- 5 Type the location of the Project Home, Scans Full Home, Scans Half Home, Renders Full Home and Renders Half Home as seen from the Linux render nodes. You only need to enter those locations that are defined for the project in the local project setup, located in the Setup | Project menu.  
The path required in these fields is comprised of the directory defined for the mount point and the actual storage folder. For example, if the Project Home is */mnt/md0/SCENES* in the Project Setup menu,

and the Linux mount point directory is named *Lustre\_storage*, the Project Home path to enter in this menu is:

*/mnt/Lustre\_storage/SCENES*

**6** Press **Enter**.

**7** To verify that you have entered the proper path for each project, look at the project configuration file in */usr/autodesk/lustre<application\_version>/project/<project name>/project.config*. The value in the *burn\_project\_home* line is sent to the render node. This value must match a mount point on the background render nodes.

For help setting up and managing projects, refer to the Lustre Help.

# Configuring BrowseD

# 11

## Topics in this chapter:

- [About BrowseD](#) on page 71
- [Workflow for Configuring BrowseD](#) on page 72
- [Starting and Stopping the BrowseD Service](#) on page 72
- [Configuring Workstations to Use the BrowseD Server](#) on page 72
- [Making BrowseD Directories Accessible from the Lustre Browser](#) on page 73
- [Using BrowseD for Rendering with Burn for Lustre](#) on page 74

## About BrowseD

BrowseD is a Lustre file server with its own high level protocols that optimize network transfers. BrowseD provides Lustre workstations, Slave Renderers, and background render nodes with high-speed access to centralized storage.

Consider using BrowseD if your facility uses a storage area network (SAN), network attached storage (NAS), or a network file server. In these configurations, you install and configure BrowseD on the computer that is connected to the centralized storage and configure all workstations to use the BrowseD server to access Lustre project files.

The recommended Lustre configuration in a digital film or high-resolution workflow is to store the full-resolution images on a SAN, NAS, or file server, and the proxies locally. For information on configuring your projects, see the *Autodesk Lustre User Guide*.

---

**NOTE** You can run BrowseD on the Lustre Master Station or Lustre HD Station to provide render nodes or Slave Renderers high-speed access to local storage for background rendering. However, this is not recommended. The BrowseD process requires extra bandwidth from the storage and adds extra load on the host system's CPU. Real-time functionality cannot be guaranteed with this setup—2K playback speed and video input and output will not function correctly.

---

# Workflow for Configuring BrowseD

See the following table for a summary of the steps necessary to configure BrowseD.

Step:	Refer to:
1. Install and license BrowseD on the computer that is connected to the storage.	<a href="#">Installing Lustre on the Linux Workstation</a> on page 47.
2. Start the BrowseD server.	<a href="#">Starting and Stopping the BrowseD Service</a> on page 72.
3. On all machines (like the Lustre Master Station, the Lustre HD Station, and background render nodes), configure the <i>init.config</i> file to connect to the BrowseD server.	<a href="#">Configuring Workstations to Use the BrowseD Server</a> on page 72.
4. Make the remote storage accessible from the file browser on the Lustre workstations.	<a href="#">Making BrowseD Directories Accessible from the Lustre Browser</a> on page 73.
5. Configure background rendering to use the BrowseD server.	<a href="#">Using BrowseD for Rendering with Burn for Lustre</a> on page 74.

## Starting and Stopping the BrowseD Service

The BrowseD service starts automatically after you install it. You can manually start the service using the command line interface. The service starts automatically whenever the computer running BrowseD restarts.

For instructions on installing and licensing BrowseD, see [Installing Lustre on the Linux Workstation](#) on page 47.

To start or stop BrowseD:

- In a terminal, type one of the following.

Command	Description
<code>/etc/init.d/browseD_&lt;version&gt; stop</code>	Stops BrowseD.
<code>/etc/init.d/browseD_&lt;version&gt; start</code>	Starts BrowseD.
<code>/etc/init.d/browseD_&lt;version&gt; restart</code>	Restarts BrowseD if it is not currently running.
<code>/etc/init.d/browseD_&lt;version&gt; condrestart</code>	Restarts BrowseD if it is already running.

## Configuring Workstations to Use the BrowseD Server

You must configure the *init.config* file for all workstations, such as Burn render nodes or Lustre workstations, that will use the BrowseD server to access centralized storage.

Use a text editor to edit the *init.config* file, located at `/usr/autodesk/<version>`.

Use the following table as a reference when configuring the *init.config* file.


Keyword	Required values
Username	Enter the administrative user on the BrowseD server, for example, <i>root</i> on Linux.

Keyword	Required values
Password	Enter the password for the administrative user as defined above.
Port	All computers on the BrowseD network must use the same port to communicate. Set to 1055, the default. If configuring a render node or a workstation running on a GigE network, set this as 1044. If configuring a render node or a workstation running on a high-speed InfiniBand network with the Lustre Media Server (i.e. Incinerator), set this as 1055.
BrowsedServer	Defines the IP address or DNS host name for a specific BrowseD Server.
UseInfi	Select if the networking protocol to use with BrowseD is InfiniBand.

## Making BrowseD Directories Accessible from the Lustre Browser

When using centralized storage, you must make the directories on the BrowseD server accessible to all Lustre workstations through the browser. You do this by configuring the `BrowsedServerGroup` keyword in the `init.config` file.

The mapped directory will appear in the Lustre browser.

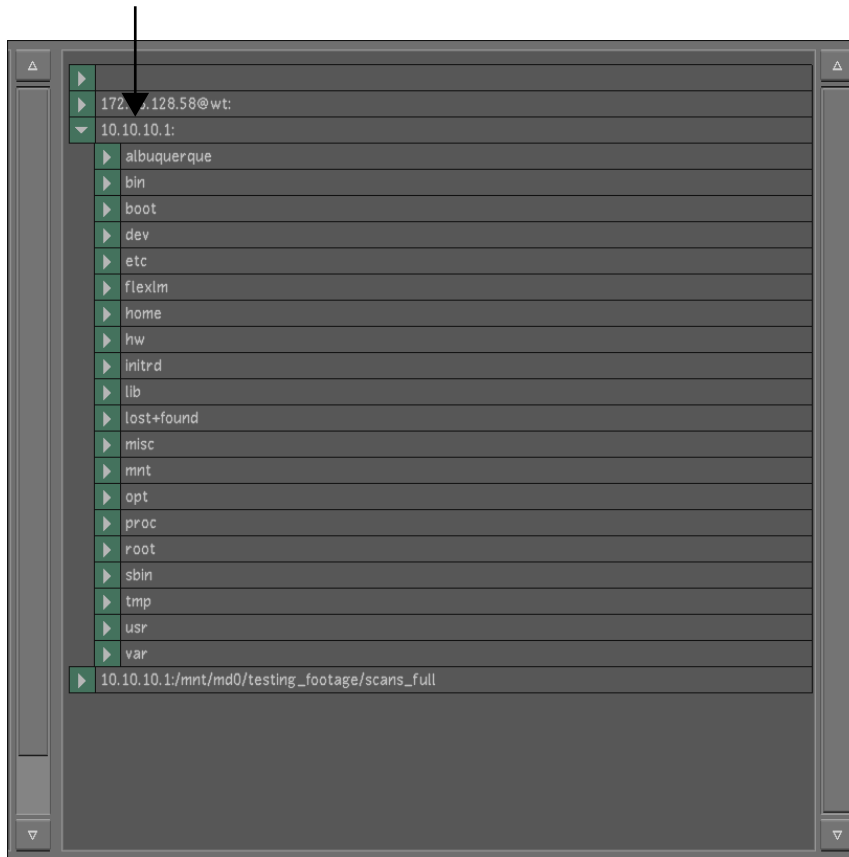

# Using BrowseD for Rendering with Burn for Lustre

You must configure the Lustre Render Backburner paths with the IP address of the BrowseD server to use BrowseD to render with Burn for Lustre.

For information on configuring background rendering for Lustre, see [Configuring Background Rendering](#) on page 59.

## To use BrowseD for rendering with Burn for Lustre:

- 1 In Lustre, set the local project paths in the Setup Project menu. For information on configuring your projects, see the *Autodesk Lustre User Guide*.
- 2 Open the Network Rendering menu and add the IP address of the BrowseD server to each path.

For example, if your Project\_Home is set to the *bernice* directory on mount point */mnt/StorageMedia* of a station that has an IP address of *172.17.20.146*, the Project\_Home path in the Render > Backburner menu should read *172.17.20.146:/mnt/StorageMedia/project/bernice*.

---

**NOTE** These path examples are specific to the Linux environment, and imply that the media frames are located on either a Lustre workstation, or on a file server which is running the Linux operating system. If you are configuring the BrowseD path to connect to a Windows system, the paths are be different.

---

# Uninstalling the Application



## Topics in this chapter:

- [Using `rmsoft` to Uninstall your Application](#) on page 75

## Using `rmsoft` to Uninstall your Application


The `rmsoft` utility enables you to easily uninstall Autodesk Visual Effects and Finishing or Colour Grading applications from your workstation.

 
### To uninstall your application using `rmsoft`:

- 1 If you are logged in as the application user in KDE, log out and log back into KDE as root.
- 2 As root, open a terminal, and type:

```
rmsoft
```

The `rmsoft` user interface appears.

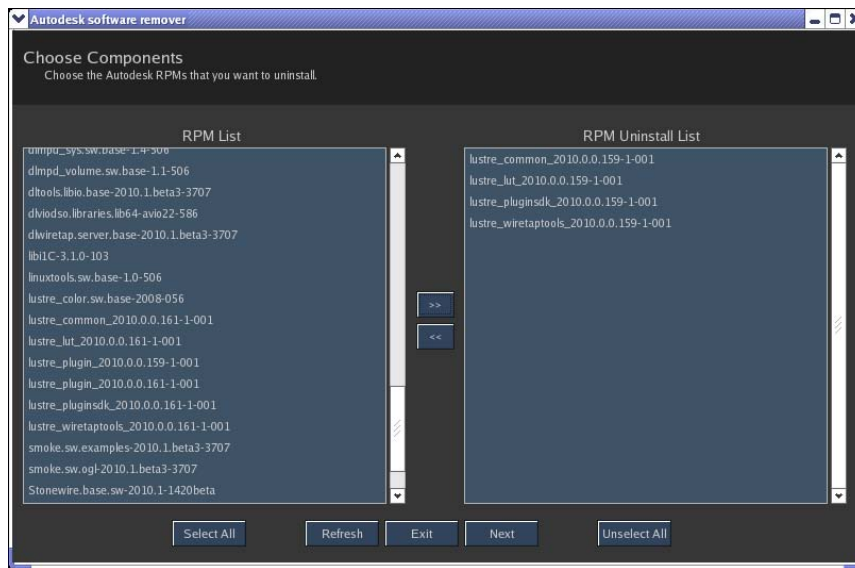

- 3 Select the RPM packages you want to uninstall in the RPM list on the left (click Select All to select all the packages), then click  to move them to the RPM uninstall list on the right.
- 4 Click Next.
- 5 Click Uninstall & Remove to confirm the removal of the selected packages and directories. The uninstallation starts and *rmsoft* displays details on the process.
- 6 When the operation completes, click Exit to close *rmsoft*.
- 7 Optional: You can also delete the log files associated with a given application version in the `/var/log/` directory.

# Software, Project, and User Configuration Files

# B

## Topics in this chapter:

- [Configuration File Overview](#) on page 77
- [System Settings](#) on page 78

## Configuration File Overview

The configuration files define all the necessary settings Lustre needs to recognize various hardware and software settings on the Master Station or Lustre HD Station, and on the dedicated render station.

Before doing any colour correction in Lustre, you must first log into a project with a valid user profile. See the “Project Management” chapter in the *Autodesk Lustre User Guide*. When you create a user profile and project in Lustre, you are indirectly creating the *user.config*, *project.config*, and *<user>Context.config* files. However, aside from the initial system configuration in the *init.config* file that you must set before you begin working, there is no need for you to manually create or modify any of the other configuration files. All of the configuration settings are set within Lustre's user interface (refer to “System Settings” in the “Project Management” chapter of the *Lustre User Guide*).

When you log into a particular project in Lustre for the first time, Lustre creates the *<user>Context.config* file, where *<user>* represents the user name associated with the user profile. The context file is found in the *.../projects/<project>/* directory . The context keywords include some attributes not defined in the Project or User configuration settings. They are saved and reloaded each time the context (same user and project) applies. The context settings include:

- Last scene
- Last shot
- Resolution

- Crop value
- Assemble frame rate / drop frame mode
- State of the surface control
- Audio file

The following is a list of the Lustre configuration files.

Configuration file	Default Location	Description
<i>init.config</i>	<i>/usr/autodesk/lustre2009/</i>	This file stores system settings as well as Wiretap servers, Slave Renderer settings, and film stock information.
<i>login.config</i>	<i>/usr/autodesk/lustre2009/</i>	This file records the last user and last project used so at the next session, the user and project login defaults will reflect these values.
<i>project.config</i>	<i>/usr/autodesk/projects/&lt;project&gt;/project.config</i>	This file stores project-level information including project settings, calibration, rendering, engineering, and BackBurner and Wiretap settings specific to the project.
<i>user.config</i>	<i>/usr/autodesk/users/&lt;user&gt;/user.config</i>	This file stores user settings specific to a particular user, such as Autosave, printer light, GUI background/gain/gamma.
<i>&lt;user&gt;Context.config</i>	<i>/usr/autodesk/projects/&lt;project&gt;/&lt;user&gt;Context.config</i>	This file stores several settings relevant to the context of a particular user working on a particular project. The purpose of storing context-specific information is that there are some parameter settings that, by their nature, are more likely to be needed in the next session, but that are not configurable in the Project Management pages.

## System Settings

Before you first log into Lustre, you must configure the system settings in the *init.config* file (refer to “Configuring System Settings” in the “Project Management” chapter of the *Autodesk Lustre User Guide*). If these system settings are not configured, Lustre uses the default system settings. The following table describes the relevant system settings that should be configured before the first login.

**NOTE** All keyword values are case-sensitive.

Parameter	Data type	Default	Function
<Locations>			
<MainProjectHome>	String		Location of the Project configuration settings folder.
<MainUserHome>	String		Location of the User configuration settings folder.

Parameter	Data type	Default	Function
<b>&lt;Wiretap&gt;</b>			
<ServerAuto>	State	On	Specifies whether Lustre automatically scans for Wiretap servers.
<WiretapServer> (within <WiretapServer Group>)	String	0.0.0.0	The IP address or DNS host name for a specific Wiretap server. If one or more <WiretapServer> keywords are set to valid Wiretap server addresses, Lustre lists the content of these servers in the browser before the results of the auto scan. If <ServerAuto> is set to OFF, only the specified Wiretap servers are listed in the browser.
<b>&lt;MonitoringAndCalibration&gt;</b>			
<DisplayType>	Enumerated (abstract data)	LCD	Specifies the monitor display type (e.g., LCD or CRT).
<Calibration_Steps>	Integer	10	Specifies the number of monitor calibration steps performed.
<b>&lt;ControlSurface&gt;</b>			
<AutodeskPanels>	State	On	When ON, this keyword enables the Autodesk Control Surface (ACS). When OFF, Lustre enables the Tangent CP100 control surface (if applicable). You must also set the path for the control surface rules file in the Panel Setup File field (refer to "System & Menu Settings" in the "Project Management" chapter of the <i>Autodesk Lustre User Guide</i> ).
<PanelIDs>		function="0" grading="0" navigation="0"	The ID numbers for the Function, Navigation, and Grading panels of the ACS. You must manually configure these keywords. If your control surface is a Tangent CP100, Lustre does not use these keywords.
<PanelPTags>		function="101" grading="100" navigation="102"	
<b>&lt;BrowseD&gt;</b>			
<Port>	Integer	1055	All computers on the BrowseD network must use the same port to communicate.
<Username>	String	root	Administrative user on the BrowseD server.
<Password>	String	xxx	Password for the administrative user.

Parameter	Data type	Default	Function
<UseInfi>	State	Off	Switch to ON if the networking protocol to use with BrowseD is the InfiniBand.
<ReadCacheBuffer Num>	Integer	0	
<ReadCacheThread Num>	Integer	0	
<BrowsedServer> (within <BrowsedServer Group>)	String	0.0.0.0	Defines the IP address or DNS host name for a specific BrowseD server.
<SlaveRenderer>			
<HostName>	String		The IP address or DNS host name for a specific Slave Renderer machine.
<Timeout>	Integer	5000	Sets the timeout duration (in milliseconds) of the automatic Slave Renderer detection.
<Backburner>			
<Hostname>	String		The IP address or DNS host name for a specific Backburner Manager machine.
<MatchCustomGroup>			
<MatchCustom>	Name	"AliasName" type="s"	Specifies the XML metadata field to be used by the Custom match option selected from the Browse menu. "s" represents string.
<MatchCustom>	Name	"DPXTimeCode" type="tc"	"tc" represents timecode.
<MatchCustom>	Name	"DPXkeycode" type="kk"	"kk" represents keycode.
<MatchCustom>	Name	"DPXTapeNAME" type="s"	"s" represents string.
<MatchCustom>	Name	"EDLReelName" type="s"	"s" represents string.
<MatchCustom>	Name	"DL_EDLClip_name" type="s"	"s" represents string.
<MatchCustom>	Name	"DL_edlFrameID" type="i"	"i" represents integer.
<MatchCustom>	Name	"DLEDL_startTC" type="tc"	"tc" represents timecode.
<AVIO>			
<PlayoutHighSpeed>	State	Off	When OFF, it refreshes the Player as you are performing a playout. When ON, the Player is no longer refreshed and therefore the performance of the playout improves. If you are using an IBM 6223

Parameter	Data type	Default	Function
			workstation, you must set this keyword to ON.
<WTTFirstSDLeadIn Correction>	Integer	1	Sets the delay for the SD first lead-in.
<WTTSubsequentSD LeadInCorrection>	Integer	2	Delays all the lead-ins following the SD first shot.
<WTTSDLeadIn Increment>	Integer	0	Corrects the delay after the SD third shot.
<WTTFirstHDLeadIn Correction>	Integer	0	Sets the delay for the HD first lead-in.
<WTTSubsequentHD LeadInCorrection>	Integer	0	Delays all the lead-ins following the HD first shot.
<WTTHDLeadIn Increment>	Integer	0	Corrects the delay after the HD third shot.
<Miscellaneous>			
<DisablePanScan Frame>	State	On	
<NVidiaSDISync>	State	Off	
<NVidiaPlayoutDelay>	Integer	0	
<BlockSize>	Integer	2048	
<AudioResyncTime>	Float	-1	
<LoadingSetup>	Integer	0	
<EnableKeykode Sending>	Enumerated (abstract data)	Off	
<LoginGUIGain>	Float	1.0	
<LoginGUILGamma>	Float	1.0	
<ClusterPlayDelay>	Integer	0	Available for Incinerator only.
<ClusterSmooth Playback>	State	Off	Available for Incinerator only.
<Debug>			
<DumpDLEDLPath>	String		Path to place the contents of a DLEDL when it is loaded in the timeline or Shot bin.
<DumpWiretapCreate Clip>	State	Off	When ON, the attributes of a Wiretap clip are placed into a log file each time a clip is created on a Wiretap server. The file <i>WiretapClipDump.log</i> is located in the Lustre home folder. Use this keyword for debugging only.
<FilmTypeGroup>			

---

<b>Parameter</b>	<b>Data type</b>	<b>Default</b>	<b>Function</b>
<FilmType>	Name		Various film types for AGFA, Kodak™, Eastman, and Fuji emulsions. It defines the relationship between the DPX film emulsion code and the DPX film code number.

---

# Index

## A

- air conditioning requirements 10
- application
  - licensing 49
  - uninstalling 75
- audio
  - Discreet Native Audio 17
  - hardware components 17
- audio converter 17

## B

- Backburner Manager
  - configuring 62
  - detecting in Lustre 63
  - detecting with Backburner Server 67
  - installing 62
  - overview 60
- Backburner Monitor
  - installing 62
  - overview 60
- Backburner Server
  - detecting Backburner Manager 67
  - overview 60
  - starting 67
- background rendering
  - components 60
  - configuring in Lustre 69
  - overview 59
  - setting up render nodes 63
  - setup, workflow 61
  - storage, mounting 65
  - with BrowseD 74
- BrowseD
  - accessing directories from Lustre 73
  - configuring, workflow 72
  - overview 71
  - remote rendering 74
  - starting and stopping 72
  - using 72
- browsed.config
  - configuring 72
- Burn for Lustre
  - hardware and software requirements 64
  - installing and configuring 66
  - license 68
  - overview 61

## C

- configuration file
  - overview 77
- configuring
  - Backburner Manager 62
  - browsed.config 72
  - Burn for Lustre 66
- customer support
  - contacting 2

## D

- Discreet Kernel Utility version 33
- Discreet Native Audio 17
- DKU version 33
- documentation
  - about this guide 1
  - conventions 2

## E

- EBOD enclosures 20

## F

- floating licenses
  - background rendering 68

## H

- hardware
  - requirements, Burn for Lustre 64
- hardware configuration guidelines 9
- host ID, obtaining 50

## I

- installation
  - overview 11
- installation requirements 47
- installing
  - Backburner Manager 62
  - Backburner Monitor 62
  - Burn for Lustre 66
  - Lustre (Linux) 48

## L

- license
  - background rendering, floating 68
  - Burn for Lustre 68
- license codes
  - requesting 51
- license server
  - background rendering 68
- Linux version 29
- logging in as root 48
- Lucid ADA 88192. See audio converter
- Lustre
  - accessing BrowseD directories 73
  - detecting Backburner Manager 63
  - installing (Linux) 48
  - starting 52

## M

- mount points
  - overview 61
- multicasting
  - Linux 32

## N

- NAS
  - using BrowseD 71
- networking
  - multicasting, Linux 32

## O

- operating system requirements 29

## P

- PDF documentation, accessing 2
- power requirements 10
- powering on or off, sequence for 38
- projects
  - setting up slave rendering 57

## R

- RAID
  - enclosures 20
- Red Hat Linux version 29
- render nodes
  - setting up 63
- rendering
  - with BrowseD 74
- requirements
  - DKU 33
  - operating system 29
  - Red Hat Linux version 29
- root login 48

## S

- SAN
  - using BrowseD 71
- shutdown sequence 38
- slave rendering
  - configuring, workflow 53
  - setting up Lustre projects 57
- software
  - requirements for Burn for Lustre 64
- storage
  - workflow for configuring 37
- support
  - contacting 2

## T

- tar file, uncompressing 48

## U

- uninstalling the application 75

## W

- workflow
  - configuring BrowseD 72
  - configuring slave rendering 53
  - licensing 49
  - setting up background rendering 61
  - storage configuration 37
- workflow, hardware setup and software installation 26