

Autodesk
Control Surface

User Guide

© 2008 Autodesk, Inc. All rights reserved. Except as otherwise permitted by Autodesk, Inc., this publication, or parts thereof, may not be reproduced in any form, by any method, for any purpose.

Certain materials included in this publication are reprinted with the permission of the copyright holder.

Portions relating to ADOdb Copyright © 2000, 2001, 2002, 2003, 2004 John Lim. All rights reserved. Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met: Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution. Neither the name of the John Lim nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission. **DISCLAIMER: THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL JOHN LIM OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.**

Portions relating to GetOpt Copyright © 1987, 1993, 1994. The Regents of the University of California. All rights reserved. Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met: 1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer. 2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution. 3. All advertising materials mentioning features or use of this software must display the following acknowledgement: This product includes software developed by the University of California, Berkeley and its contributors. 4. Neither the name of the University nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission. **THIS SOFTWARE IS PROVIDED BY THE REGENTS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE REGENTS OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.**

Portions relating to GetOpt Copyright © 1999, 2000 Politecnico di Torino. All rights reserved. Redistribution and use in source and binary forms, with or without modification, are permitted provided that: (1) source code distributions retain the above copyright notice and this paragraph in its entirety; (2) distributions including binary code include the above copyright notice and this paragraph in its entirety in the documentation or other materials provided with the distribution, and (3) all advertising materials mentioning features or use of this software display the following acknowledgement: "This product includes software developed by the Politecnico di Torino, and its contributors." Neither the name of the University nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission. **THIS SOFTWARE IS PROVIDED "AS IS" AND WITHOUT ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, WITHOUT LIMITATION, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.**

Portions relating to LibXML2 2.6.20 Copyright © 2005 Daniel Veillard. Permission is hereby granted, free of charge, to any person obtaining a copy of this software and associated documentation files (the "Software"), to deal in the Software without restriction, including without limitation the rights to use, copy, modify, merge, publish, distribute, sublicense, and/or sell copies of the Software, and to permit persons to whom the Software is furnished to do so, subject to the following conditions: The above copyright notice and this permission notice shall be included in all copies or substantial portions of the Software. **THE SOFTWARE IS PROVIDED "AS IS", WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT. IN NO EVENT SHALL THE AUTHORS OR COPYRIGHT HOLDERS BE LIABLE FOR ANY CLAIM, DAMAGES OR OTHER LIABILITY, WHETHER IN AN ACTION OF CONTRACT, TORT OR OTHERWISE, ARISING FROM, OUT OF OR IN CONNECTION WITH THE SOFTWARE OR THE USE OR OTHER DEALINGS IN THE SOFTWARE.**

The following are registered trademarks or trademarks of Autodesk, Inc., in the USA and other countries: 3DEC (design/logo), 3December, 3December.com, 3ds Max, ADI, Alias, Alias (swirl design/logo), AliasStudio, Alias|Wavefront (design/logo), ATC, AUGI, AutoCAD, AutoCAD Learning Assistance, AutoCAD LT, AutoCAD Simulator, AutoCAD SQL Extension, AutoCAD SQL Interface, Autodesk, Autodesk Envision, Autodesk Insight, Autodesk Intent, Autodesk Inventor, Autodesk Map, Autodesk MapGuide, Autodesk Streamline, AutoLISP, AutoSnap, AutoSketch, AutoTrack, Backdraft, Built with ObjectARX (logo), Burn, Buzzsaw, CAiCE, Can You Imagine, Character Studio, Cinestream, Civil 3D, Cleaner, Cleaner Central, BackScale, Colour Warper, Combustion, Communication Specification, Constructware, Content Explorer, Create>what's>Next> (design/logo), Dancing Baby (image), DesignCenter, Design Doctor, Designer's Toolkit, DesignKids, DesignProf, DesignServer, DesignStudio, Design[Studio] (design/logo), Design Web Format, DWF, DWG, DWG (logo), DWG Extreme, DWG TrueConvert, DWG TrueView, DXF, Ecotect, Exposure, Extending the Design Team, FBX, Filmbox, FMDesktop, Freewheel, GDX Driver, Gmax, Green Building Studio, Heads-up Design, Heidi, HumanIK, IDEA Server, i-drop, ImageModeler, iMOUT, Incinerator, Inventor, Inventor LT, Kaydara, Kaydara (design/logo), Kynapse, Kynogon, LocationLogic, Lustre, Matchmover, Maya, Mechanical Desktop, MotionBuilder, Movimento, Mudbox, NavisWorks, ObjectARX, ObjectDBX, Open Reality, Opticore, Opticore Opus, PolarSnap, PortfolioWall, Powered with Autodesk Technology, Productstream, ProjectPoint, ProMaterials, RasterDWG, Reactor, RealDWG, Real-time Roto, REALVIZ, Recognize, Render Queue, Retimer, Reveal, Revit, Showcase, ShowMotion, SketchBook, SteeringWheels, Stitcher, StudioTools, Topobase, Toxik, TrustedDWG, ViewCube, Visual, Visual Construction, Visual Drainage, Visual Landscape, Visual Survey, Visual Toolbox, Visual LISP, Voice Reality, Volo, Vtour, Wiretap, and WiretapCentral.

The following are registered trademarks or trademarks of Autodesk Canada Co. in the USA and/or Canada and other countries: Backburner, Discreet, Fire, Flame, Flint, Frost, Inferno, Multi-Master Editing, River, Smoke, Sparks, Stone, and Wire.

The following are registered trademarks or trademarks of Moldflow Corp. in the USA and/or other countries: Moldflow MPA, MPA (design/logo), Moldflow Plastics Advisers, MPI, MPI (design/logo), Moldflow Plastics Insight, MPX, MPX (design/logo), Moldflow Plastics Xpert.

All other brand names, product names or trademarks belong to their respective holders.

Disclaimer

THIS PUBLICATION AND THE INFORMATION CONTAINED HEREIN IS MADE AVAILABLE BY AUTODESK, INC. "AS IS." AUTODESK, INC. DISCLAIMS ALL WARRANTIES, EITHER EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE REGARDING THESE MATERIALS.

Title: Autodesk Control Surface User Guide

Document Version: 1

Date: October 9, 2008

contents

Contents

1	The Autodesk Control Surface	1
	Summary	1
	About the Autodesk Control Surface	2
	Control Surface Panel Descriptions	2
	Navigating the Storyboard	5
	Toggling Play Modes	8
	Activating Mouse Functionality	9
	Panning and Zooming the Image	9
	Customizing the View	10
	Customizing the Panel Sensitivity	13
	Selective Backlighting of Active and Available Buttons	15
	Toggling Playheads	16
	Using the Undo List	16
	Working with the Grade Bin	17
	Saving the Current Grade	19
	Adjusting Printer Lights	19
	Copying Grades	20
	Adding Keyframes	21
	Copying and Pasting Keyframes	22
	Selecting Menus	22
	Caching Memory	24
	Bypassing Functions	24
	Resetting Functions	24
	Repositioning Shots	25
	Performing Colour Grading	26
	Performing Curves Grading	36
	Generating Keys	39
	Creating and Grading Geometries	43

Cycling Among Geometries 47
Modifying the Appearance of the Autodesk Control Surface 48

2 The Tangent CP100 Control Surface 49

Summary 49
About the Tangent CP100 Control Surface 49
Customizing the View 51
Toggling Play Mode 52
Caching Memory 52
Navigating the Storyboard 53
Undo List 54
Resetting Parameters 56
Copying Grades 57
Adding and Moving Keyframes 58
Repositioning Shots 59
Primary Colour Grading 60
Modifying the Hue, Saturation, and Lightness Curves 63
Secondary Colour Grading 63

Index 71



The Autodesk Control Surface

Summary

About the Autodesk Control Surface	2
Control Surface Panel Descriptions	2
Navigating the Storyboard	5
Toggling Play Modes	8
Activating Mouse Functionality	9
Panning and Zooming the Image	9
Customizing the View	10
Customizing the Panel Sensitivity	13
Selective Backlighting of Active and Available Buttons	15
Toggling Playheads	16
Using the Undo List	16
Working with the Grade Bin	17
Saving the Current Grade	19
Adjusting Printer Lights	19
Copying Grades	20
Adding Keyframes	21
Copying and Pasting Keyframes	22
Selecting Menus	22
Caching Memory	24
Bypassing Functions	24
Resetting Functions	24
Repositioning Shots	25
Performing Colour Grading	26
Performing Curves Grading	36
Generating Keys	39
Creating and Grading Geometries	43
Cycling Among Geometries	47

[Modifying the Appearance of the Autodesk Control Surface](#) 48

About the Autodesk Control Surface

The Autodesk® control surface provides improved interactivity when colour grading film and video footage. You can perform many of the same tasks you do in the Autodesk Lustre® user interface using the control surface. The modular design of the control surface also allows you to work on different grading stages simultaneously. For example, you can perform curves grading while modifying the image lift.

The Autodesk control surface consists of three panels. Although licensed separately, they are designed to work together.

For information on connecting the control surface, refer to the *Autodesk Lustre Software Installation Guide* for your platform.

For technical information about the Autodesk control surface, see http://www.tangentdevices.co.uk/downloads_documents.asp.

Control Surface Panel Descriptions

Each of the three control surface panels are designed to perform different functions.

The following image shows the Navigation panel.



Use the Navigation panel to:

- Select menus. Pressing one of the menu buttons along the top of the panel activates a menu. For example, pressing the Grade button activates grading functionality.
- Reset or bypass the currently selected menu.
- Cache memory.
- Navigate the Storyboard.
- Pan and zoom the image.
- Copy grades.
- Activate mouse functionality.
- Add keyframes.
- Revert and compare grades.
- Toggle playback mode between Storyboard and clip loop.
- Switch playheads.
- Scroll shots.
- Undo and redo actions.
- Perform actions with the Grade bin.
- Adjust printer lights.




Use the Colour Grading panel for most grading functions. Colour grading functionality is split between the Colour Grading and the Function panels. The Colour Grading panel is always in grading mode. Depending on the colour space selected in the Setup Project menu, either Linear or Logarithmic functionality is available.

The Colour Grading panel also contains the tablet.

Navigating the Storyboard

You can use the Navigation panel to:

- Scrub the Storyboard.
- Scroll through the shots in the Storyboard.
- Toggle between the regular and large Storyboard viewing modes.
- Jump to a specified frame or timecode on the Storyboard.
- Jump ahead or back a frame at a time, or a shot at a time.
- Play forwards or backwards.

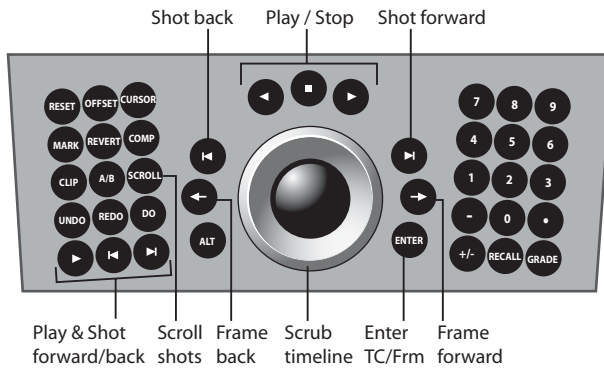

To scrub the Storyboard:


- Use the ring portion of the trackball.

To scroll through shots on the Storyboard:

1. Press the Scroll button.
2. Use the ring portion of the trackball.
3. Press the Scroll or Do button to confirm the move.


To switch between regular and large Storyboard viewing modes:

1. Press the top More button on the Navigation panel.

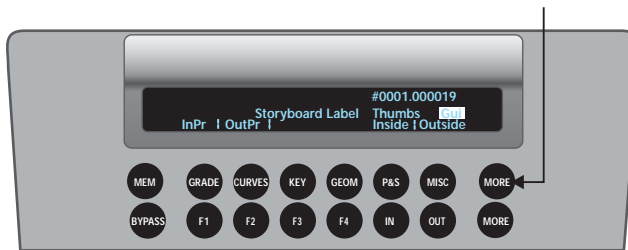

The Label, Tnails, and GUI options appear in the digital display at the top of the panel. The location of each option in the digital display reflects their button position on the panel.

2. If the Storyboard option does not appear, press the button for Thumbs (the P&S button) to display Storyboard thumbnails. This makes the Storyboard option appear in the digital display.

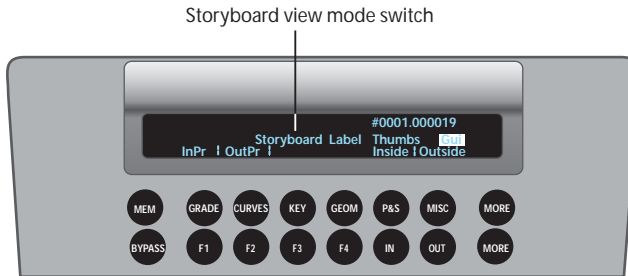

3. Press the button for Storyboard (the Key button). This switches Storyboard thumbnails to the large Storyboard option.

NOTE: This is equivalent to using the **Q** hot key.

To jump to a specified frame on the Storyboard:

1. Press the Enter button.
2. Do one of the following:
 - To jump ahead, enter the frame number using the numeric pad on the right side of the panel.
 - To jump back, press the +/- button on the numeric pad and then enter the frame number.
3. Press the Enter button to jump to the specified frame.

To jump to a specified timecode on the Storyboard:

1. Press the Enter button.
2. Enter a timecode using the numeric pad on the right side of the panel.
3. Press the Enter button to jump to the specified timecode.

To jump back or ahead a frame at a time:

1. To jump back a frame, do one of the following:
 - Press the Frame Back button (left arrow button to the left of the trackball).
 - Simultaneously press the Shot Back button (below the Redo button) and the Play button (below the Do button).

2. To jump ahead a frame, do one of the following:
 - Press the Frame Forward button (right arrow button to the right of the trackball).
 - Simultaneously press the Shot Forward button (below the Undo button) and the Play button (below the Do button).

To jump to the beginning or end of a shot:

1. To jump to the first frame of the shot, press either of the two Shot Back buttons. One button is located to the left of the trackball, and the other is below the Redo button.
2. To jump to the last frame of the shot, press either of the two Shot Forward buttons. One button is located to the right of the trackball, and the other is below the Do button.

To play forwards or backwards:

1. To play the Storyboard forward, do one of the following:
 - Press the Play Forward button (above the trackball).
 - Press the Spacebar-style Play button (below the Undo button). This button operates like the Spacebar on the keyboard, in that you use it both to start and stop playback.
2. To play the Storyboard backwards, press the Play Backwards button (above the trackball).
3. To stop playback, do one of the following:
 - Press the Stop button (above the trackball).
 - Press the Spacebar-style Play button.

Toggling Play Modes

You can toggle the playback mode between looping a shot or looping the entire Storyboard.

To toggle play modes:

- Press the Clip button on the Navigation panel.



This button corresponds to the Play Mode button in the user interface.

Activating Mouse Functionality

You can enable mouse functionality on the Navigation panel.

To activate mouse functionality:

1. Press the Cursor button on the Navigation panel.




2. Use the panel's features as follows.

Use the:	As the:
Trackball	Mouse.
Backward play button	Left mouse button.
Stop button	Middle mouse button.
Forward play button	Right mouse button.

Panning and Zooming the Image

You can use the Navigation panel to pan and zoom the image.

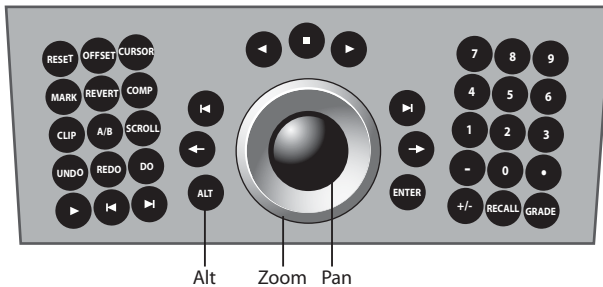

To zoom the image:

- Hold down the ALT button on the Navigation panel and use the ring on the trackball to zoom in and out.

To pan the image:


- Hold down the ALT button on the Navigation panel and use the jog ball on the trackball to pan the image.

Resetting Zoom and Pan

You can now reset the zoom and pan.

To reset the zoom and pan:

- Hold down the ALT button on the Navigation panel and press the Reset button.

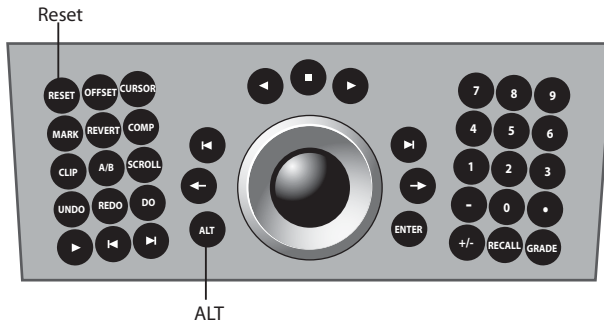

NOTE: The zoom and pan are always reset together.


Customizing the View

There are options for customizing the view on both the Navigation panel and the Function panel.

When working with secondaries, users can use the Function panel to view them in Saturated Mask view or Matte view. Saturated Mask view displays the range of colours you define through a greyscale image. The unselected colours remain grey. Matte view displays a black and white template indicating which parts of the image are transparent (black), and which are opaque and selected (white).

To access view options available on the Navigation panel:

1. Press the top MORE button on the Navigation panel.

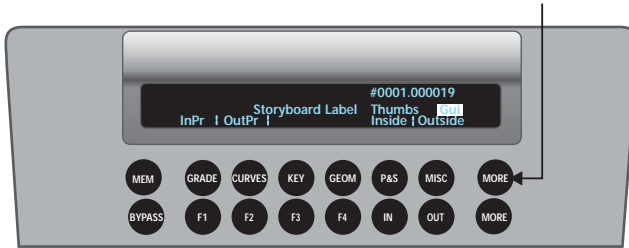


The Panel, Storyboard, Label, Thumbs, and GUI options appear in the digital display at the top of the panel. The location of each option in the digital display reflects their button position on the panel.

2. Select one of the following options.

Press:	To toggle the:
CURVES	Panel sensitivity.
KEY	Storyboard on or off.
GEOM	Shot name on or off the image.
P&S	Storyboard thumbnails on or off.
MISC	Full-screen Player on or off.

To access view options available on the Function panel:


- Use the viewport options to change the view as you work on your grades. For example, press PROXY to view a proxy version of your shot in the Player.

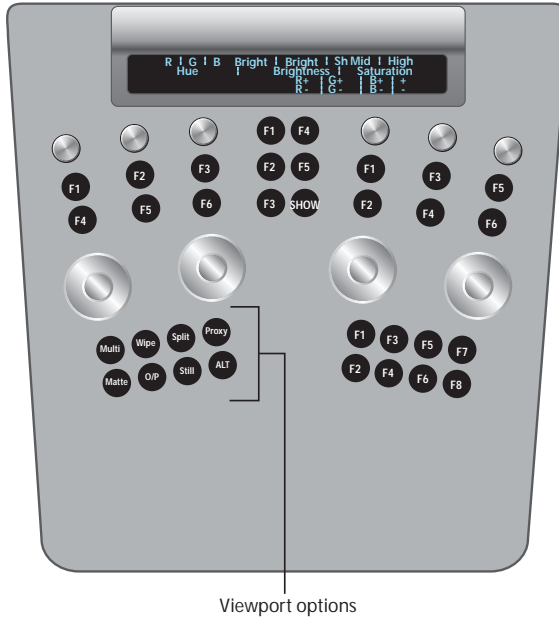

Viewport option	Description
MULTI	Toggles multi-shot display on and off in the Player. You can view up to 16 shots. In order for Multi to function, you must enable split-view first by pressing the Split button on the panel, or F5 on the keyboard.
WIPE	Toggles between horizontal and vertical split view in the Player. In order for Wipe to function, you must enable split-view first by pressing the Split button on the panel, or F5 on the keyboard.
SPLIT	Enables split-view in the Player, and the Multi and Wipe buttons.
PROXY	Toggles between the full-resolution and half-resolution (proxy) version of your shot in the Player. If you have not rendered a proxy, an X appears in the Player.
MATTE	Toggles between secondary grading view and result view.
O/P	Toggles between a rendered version of your shot (P) and the pre-rendered version with grading applied (O). If you have not rendered the shot, an X appears in the Player when in P mode. Press the ALT and O/P buttons simultaneously to toggle to I mode (this displays the image with colour corrections made in the Grading and Curves menus only).
STILL	Displays the stored reference image. Press the ALT and Still buttons simultaneously to store the current frame in the reference buffer.

To edit the sensitivity of the Autodesk Control Surface panels:

1. On the Navigation panel, press the top MORE button.
2. Press the CURVES button to enter the Panel menu.

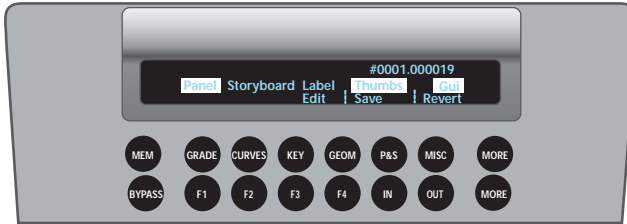

In the Panel menu you can Edit (F4 button), Save (IN button), and Revert (OUT button) your panel sensitivity changes.

3. Press the F4 button to enable the Edit mode.
4. Touch any modifier you want to change its sensitivity on the panel. Turn the modifier clockwise to increase the sensitivity or counter-clockwise to decrease the sensitivity.

NOTE: The Function panel displays the Grade menu by default. To change the sensitivity of the Curves, Geometry, Keyer, or Reposition menu, you must enable the menu you want to modify first before entering the panel sensitivity option.

When a control is selected, its name and sensitivity are displayed on all the LCD panels. The last line of the LCD displays the control you are modifying, its value, and the enabled Edit mode.

NOTE: Some control names are long and therefore are truncated on the Navigation panel LCD. The Function and Grading panels display the full name and value.

5. Press the F4 button again to disable the Edit mode. You can now test out the new sensitivity value.

NOTE: Pressing F4 does not exit you from the Panel menu.

NOTE: You need to save the rules file in order to commit your modification. If you do not save the modification, you will lose the modified value(s) when you quit Lustre.

Saving the Sensitivity Modifications

When you have completed making modifications to the sensitivity of your Autodesk Control Surface panel and tested the sensitivity, you must save your changes.

To save the modifications to your Autodesk Control Surface panel:

1. Press the IN button. The Save option is selected and the LCD displays “Confirm Save”.

NOTE: If you do not want to confirm the save, press the F1 button to exit the Save menu. The display returns to the Panel menu.

2. Press the IN button again. The LCD displays “Saving Panel File”.
The changes are saved and the display returns to the top level menu.

Reverting the Panel Modifications

If you have made modifications to the panel control values and have not saved the changes, you can revert back to the previous saved values.

To revert the saved panel modifications:

1. Press the OUT button to select the Revert option.

The LCD displays “Confirm Revert”.

NOTE: If you do not want to confirm the revert, press the F1 button to cancel the revert. The display returns to the Panel menu.

2. Press the OUT button again to confirm the revert. The LCD displays “Reverting Panel File” and then returns to the top level menu.

Selective Backlighting of Active and Available Buttons

In order to make it easier to determine which functions are currently available on the Autodesk Control Surface panels, you can select Mid from amongst the options accessible from the Navigation panel.


The Mid option highlights active buttons and available buttons.

An active button is one that has been enabled by the user. For example, if you enable secondary two for Inside grading, the 2 button on the numeric keypad and the Inside button are backlit on the Navigation panel.

An available button is one that has been enabled by the system based on a feature that you selected. For example, if you switch from the Geom menu to the Reposition menu, the backlighting on the Function panel changes to show which buttons are available for performing repositioning tasks.

To enable backlighting for active and available buttons:

1. Press the bottom More button on the Navigation panel.
The Low, Mid, High, and Screen options appear in the digital display.

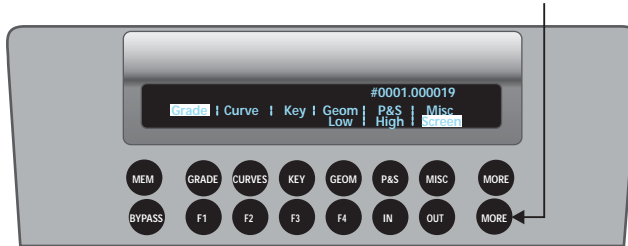

2. Press the F4 button.
Active and available buttons are now backlit.


NOTE: The Low option is now accessible by pressing the F3 button.

Toggle Playheads

You can toggle between the images assigned to Playhead A and B.


To toggle playheads:

- Press the A/B button on the Navigation panel.

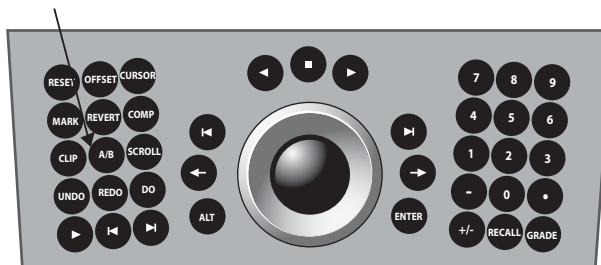

Using the Undo List

You can access the undo list from the Navigation panel. The undo list works differently than it does in the user interface. When you use the panel, you must save your changes to the undo list using the Do button. Undo lists are saved on a shot-by-shot basis.

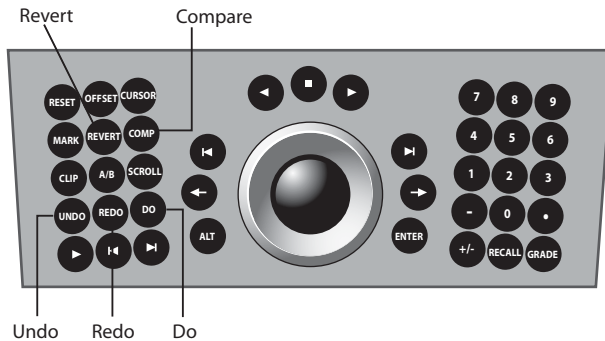

To save a change to the undo list:

- Press the Do button.

To go through the undo list:

- Press the Undo or Redo button.

Reverting to Previous Grades

You can use the Navigation panel to toggle between the grade that was applied to a shot when you first selected it in the Storyboard and the current grade.

To revert to previous grades:

- Press the Revert button on the Navigation panel.

To save the reverted stage to the undo list:

- Press the Do button on the Navigation panel.

Comparing Grades


You can compare the current image with the grade you last committed to the undo list.

To toggle between the current image and the grade you last committed to the undo list:

- Press the Comp button on the Navigation panel.

Working with the Grade Bin

You can use the Navigation panel to access Grade bin functionality.

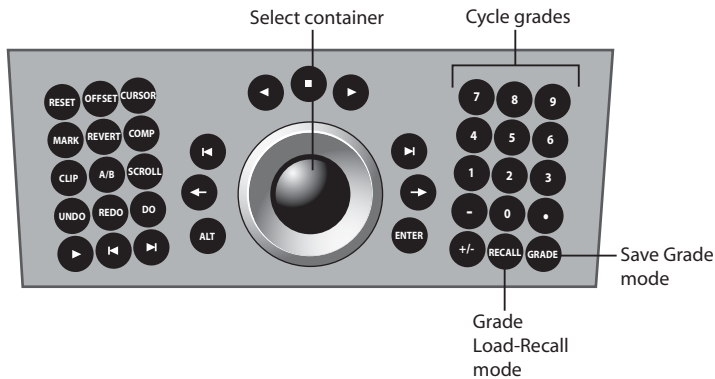

Saving a Grade to the Grade Bin

Use Grade Save mode to save one or more grades to the Grade bin.

To save a grade to the Grade bin:

1. On the Storyboard, use the ring to navigate to the shot with the grade you want to save.

HINT: This step can also be performed after you enter Grade Save mode.
2. Press the Grade button on the Navigation panel.

This activates Grade Save mode.
3. To select a storage container in the Grade bin, do one of the following:
 - Use the jog ball on the trackball.
 - Press the keypad number button that corresponds to the desired Grade bin container position.
4. To save the shot's grade to the storage container, double-press the keypad number button that corresponds to the desired Grade bin container.

After the grade is saved, you are still in Grade Save mode and can save other grades. Use the trackball ring to navigate to other shots.
5. To exit Grade Save mode, press Grade.

Loading a Grade From the Grade Bin

Use Grade Load-Recall mode to load grades from the Grade bin to one or more shots on the Storyboard.

To load a grade from the Grade bin:

1. On the Storyboard, navigate to the shot to which you want to load one or more grades.

HINT: This step can also be performed after you enter Grade Load-Recall mode.

2. Press the Recall button on the Navigation panel.

This activates Grade Load-Recall mode.

3. To select a grade in the Grade bin, do one of the following:

- Use the jog ball on the trackball to navigate the Grade bin.
- Press the keypad number button corresponding to the desired Grade bin container position once to jump to it.

4. To load the grade to the current selected shot on the Storyboard, double-press the appropriate number button twice.

After the grade is loaded to the shot, you are still in Grade Load-Recall mode and can load other grades from the Grade bin to the shot. Use the trackball ring to navigate to other shots.

5. To exit Grade Load-Recall mode, press Recall.

Saving the Current Grade

You can use the Navigation panel to save the current grade file and cut.

NOTE: If a grade file has not been created, a default grade file is saved.

To save the current grade file and cut:

- Press ALT and DO on the Navigation panel.

Adjusting Printer Lights


You can adjust printer lights on the Navigation panel. Printer light values are displayed in the Colour Grading panel's digital display.

NOTE: You can also adjust printer lights on the Function panel when the Grade menu is enabled.

See ["Grading in Logarithmic Mode Using the Function Panel"](#) on page 30.

To adjust printer lights:

1. On the Navigation panel, double-press the ALT button.
The words “Shift ON” appear in the digital display.

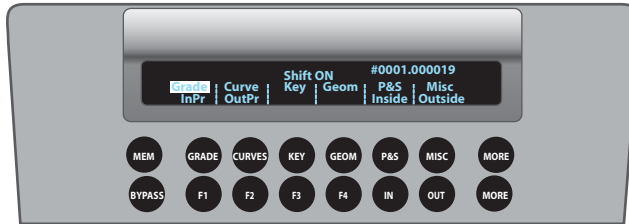

2. Use the following buttons on the keypad to make printer light adjustments to the image.


Press:	To:
7	Increase red brightness by one step.
4	Decrease red brightness by one step.
8	Increase green brightness by one step.
5	Decrease green brightness by one step.
9	Increase blue brightness by one step.
6	Decrease blue brightness by one step.
1	Increase cyan brightness by one step.
- (minus sign)	Decrease cyan brightness by one step.
2	Increase magenta brightness by one step.
0	Decrease magenta brightness by one step.
3	Increase yellow brightness by one step.
. (period)	Decrease yellow brightness by one step.

Copying Grades

You can temporarily or permanently copy a grade to the current shot from another shot in the Storyboard.

To copy a grade to the current shot from another shot in the Storyboard:

1. Scroll to the shot you would like to copy grades to by performing one of the following two actions:
 - Hold down the ALT button on the Navigation panel and then press the Frame Forward or Frame Back button to temporarily apply the grade from the previous or next shot to the current shot.
- NOTE:** Each time you press ALT and Frame Forward or Frame Back, you move one shot at a time through possible sources to copy back to the current Storyboard position. For example, if you hold down ALT and press Frame Forward three times, you see a preview of the current Storyboard position with the grade from three shots ahead applied.
- Press Offset on the Navigation panel and then scroll through the shots by pressing the Scroll button and using the ring portion of the trackball.

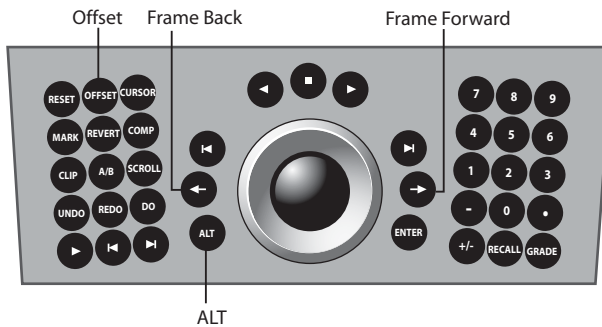

2. Press Do to permanently copy the grade from the shot outlined in blue to the current shot.
3. Press the ALT button to cancel the operation.

Adding Keyframes

When you animate parameters, you can set keyframes using the Mark button.

To add keyframes:

1. Go to the frame where you want to add the keyframe.
2. Press Mark.
3. Modify the parameters.
4. Repeat the above steps as required.

Copying and Pasting Keyframes

You can copy and paste keyframes using the Navigation panel of the Autodesk Control Surface panel.


To copy and paste keyframes:

1. On the Navigation panel, press the bottom MORE button. The Permanent Copy / Paste (P. C & P) menu is displayed.
2. Press the F1 button to enable the P. C & P menu.
3. On the Function panel, press the appropriate button (F1-F8) to perform your choice of copy and paste operation.

Copy / Paste Keyframe option	Function
F1	Add keyframe
F2	Copy
F3	Remove keyframe
F4	One frame
F5	Next keyframe
F6	All frames
F7	Previous keyframe
F8	Paste


Selecting Menus

Selecting a menu from the first row of buttons on the Navigation panel determines which options are available in the second row of buttons. What you select in the Navigation panel also determines the features available on the Function panel.

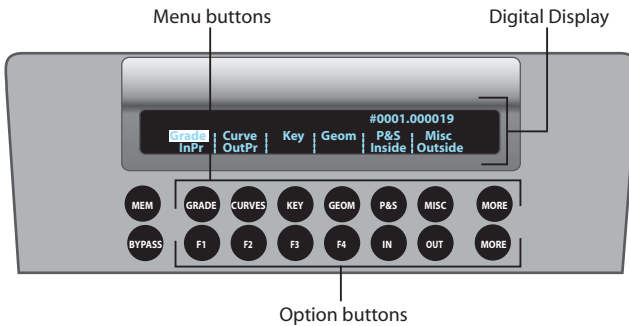

You can see which options are available by checking the digital display. For example, in the following illustration the Grade menu has been selected and the InPr, OutPr, Inside, and

Outside options appear in the digital display. The location of these options in the digital display is the same as their location amongst the option buttons.

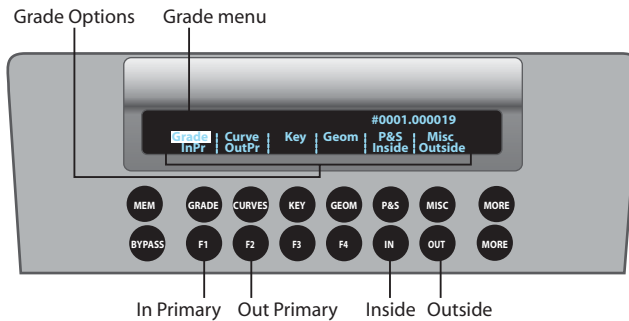

To select a menu:


- Choose one of the following.

Press:	To:
Grade	Enable the In Primary, Out Primary, Inside, and Outside options, and activate Logarithmic or Linear grading in the Function panel. See “Performing Colour Grading” on page 26.
Curves	Enable the In Primary, Out Primary, Hue, and RGB options, and activate curves grading in the Function panel. See “Performing Curves Grading” on page 36.
Key	Enable the Pick and SrcPrim options, and activate keying functionality in the Function panel. See “Generating Keys” on page 39.
Geom	Enable the Rectangle, Circle, Wipe (split screen), Bezier (free-form geometry), Inside, and Outside options, and activate geometry grading in the Function panel. See “Creating and Grading Geometries” on page 43.
P&S	Activate repositioning functionality in the Function panel. When this function is selected, no additional options are activated in the Navigation panel. See “Repositioning Shots” on page 25.
More (upper)	Access the following additional options: Label, Thumbnails, and GUI. These options pertain to elements in the user interface. See “Customizing the View” on page 10.
More (lower)	Access the following additional options: Low, High, and Screen. These options pertain to the control surface appearance. See “Modifying the Appearance of the Autodesk Control Surface” on page 48.

NOTE: There is no functionality assigned to the Misc button for this release.


Caching Memory

When a shot does not play back in real time, you can cache the frames into memory using the Mem button.

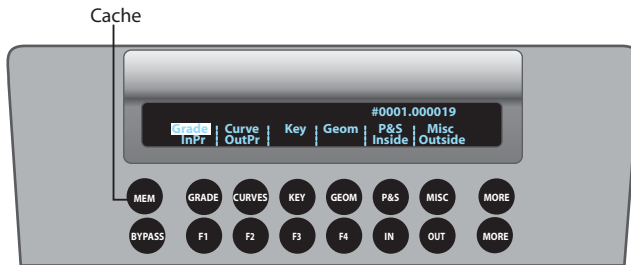

Bypassing Functions

Use the Bypass button on the Navigation panel to bypass the currently selected menu.

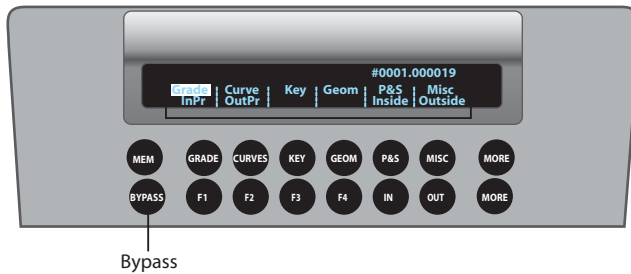

Resetting Functions

Use the Reset button on the Navigation panel to reset parameters for the current menu only, or to reset all parameters on the currently selected shot.



To reset parameters for the current menu only:

- Press the Reset button once.

To reset all parameters on the shot:

- Double-press the Reset button.

HINT: You can reset individual parameters by pressing its assigned Reset button. These buttons are indicated throughout this chapter.


Repositioning Shots

You can reposition a shot by:


- Scaling
- Panning vertically and horizontally
- Rotating
- Changing the aspect ratio
- Flipping and flopping

To reposition a shot:

1. Press the P&S button on the Navigation panel.

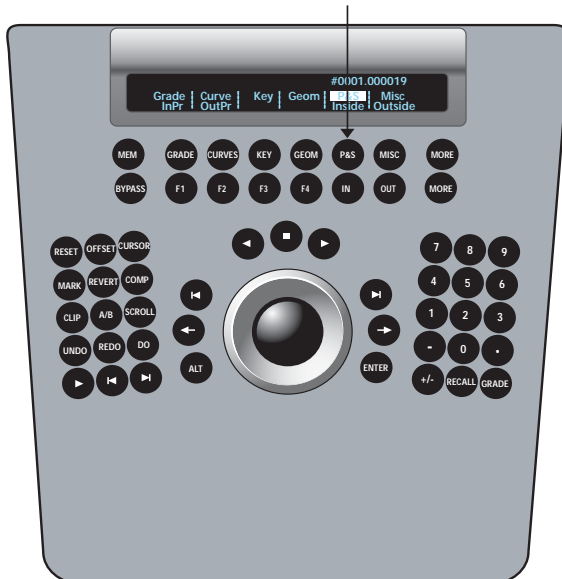

2. On the Function panel, use the following controls.

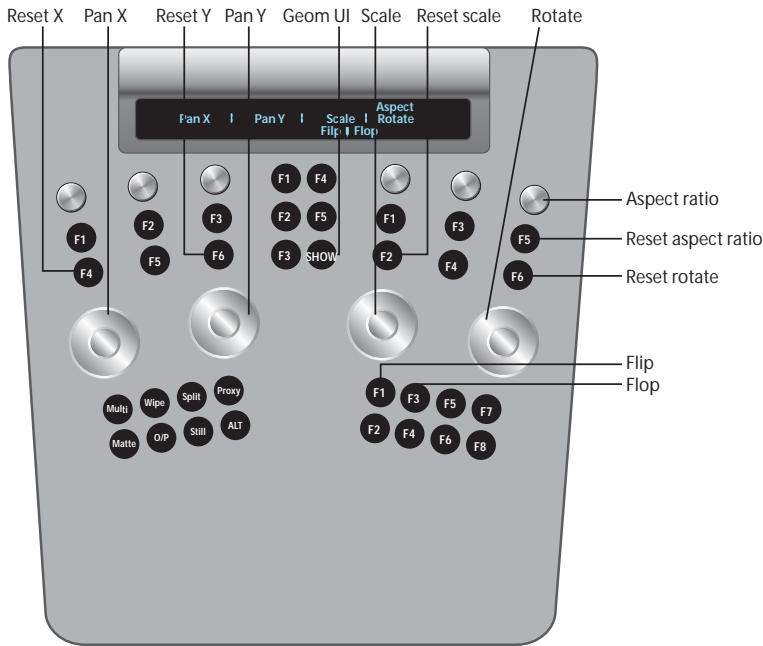

Use:	To:
Wheels	Reposition the image. Wheel 1=Pan X Wheel 2=Pan Y Wheel 3=Scale Wheel 4=Rotate To reset a wheel, press the button above it.
Knob at right	Change the image's aspect ratio. To reset, press the button below it.
First row of buttons at bottom right	Flip or flop the image. F1=Flip F3=Flop
SHOW button	Toggle the geometry wireframe on or off.

Performing Colour Grading

You can use the Autodesk control surface to perform input and output grading in Logarithmic or Linear mode.

As with other menus, you select the Grade menu from the Navigation panel. This activates colour grading functionality on the Function panel. The Colour Grading panel is enabled

regardless of which menu is active in the Function panel. The features available on these panels depend on whether you are in Logarithmic or Linear mode. You specify the colour architecture in the Setup Grade menu in the user interface.

Logarithmic Mode

When Log is enabled in the Setup Grade menu, the Colour Grading panel and the Function panel are activated with logarithmic colour grading functionality.

Grading in Logarithmic Mode Using the Colour Grading Panel

Use the Colour Grading panel to:

- Adjust brightness balance and contrast balance for the entire image or for a range of colours.
- Adjust brightness in the shadows, midtones, and highlights.


There are two available setups for the Colour Grading panel. You can switch between setups by pressing the F9 button.

The default setup allows you to modify contrast, overall brightness, and brightness in the shadows, midtones, and highlights. Adjusting brightness in the shadows, midtones, and highlights requires that you switch the functionality of the first trackball among the three. You use the second and third trackballs to adjust contrast and brightness in the overall image.

The alternate setup distributes brightness controls for the shadows, midtones, and highlights amongst the three trackballs. This allows you to balance the values without having to constantly switch the functionality of a single trackball.

To colour grade using the Colour Grading panel default setup:


- On the Colour Grading panel, use the following controls.

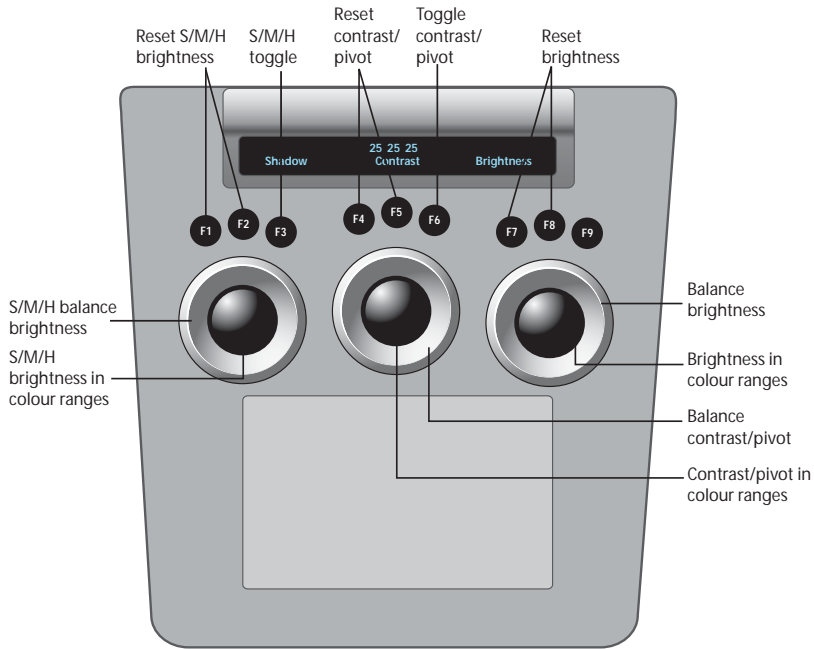

Use:	To:
First ring	Adjust brightness in the shadows, midtones, or highlights for the overall image. To reset, press F1.
First jog ball	Adjust brightness in the shadows, midtones, or highlights for a range of colours. To reset, press F2.
F3 button	Switch functionality for the first trackball between shadows, midtones, or highlights.
Second ring	Adjust contrast/pivot in the overall image. To reset, press F4.
Second jog ball	Adjust contrast/pivot in a range of colours. To reset, press F5.
F6 button	Toggle functionality for the second trackball between contrast and pivot.
Third ring	Adjust brightness in the overall image. To reset, press F7.
Third jog ball	Adjust brightness in a range of colours. To reset, press F8.

To colour grade using the Colour Grading panel alternate setup:

1. Press the F9 button to switch to the alternate setup.
2. On the Colour Grading panel, use the following controls.

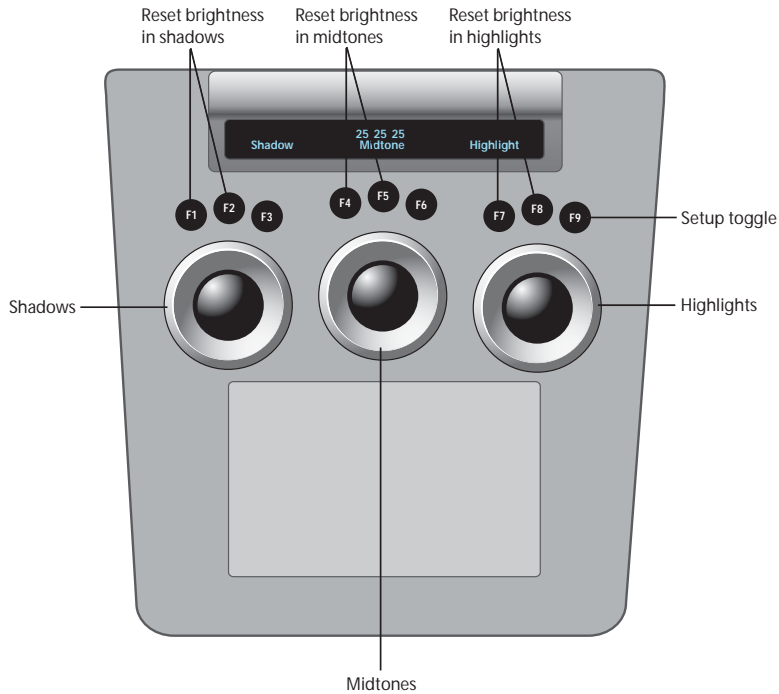

Use:	To:
First ring	Adjust overall brightness in the shadows. To reset, press F1.
First jog ball	Adjust brightness in the shadows for a range of colours. To reset, press F2.
Second ring	Adjust overall brightness in the midtones. To reset, press F4.
Second jog ball	Adjust brightness in the midtones for a range of colours. To reset, press F5.
Third ring	Adjust overall brightness in the highlights. To reset, press F7.
Third jog ball	Adjust brightness in the highlights for a range of colours. To reset, press F8.
F9 button	Toggle between the panel default and alternate setup.

Grading in Logarithmic Mode Using the Function Panel


When the Grade menu is enabled, you can use the Function panel to:

- Adjust overall hue, brightness, and saturation.
- Balance brightness and contrast in the red, green, and blue channels.
- Balance brightness of colours in the shadows, midtones, and highlights.
- Adjust cutoff values.
- Increase or decrease printer light settings.

To colour grade in Logarithmic mode using the Function panel:

1. Press the Grade button on the Navigation panel.

The In Primary, Out Primary, Inside, and Outside options are activated.

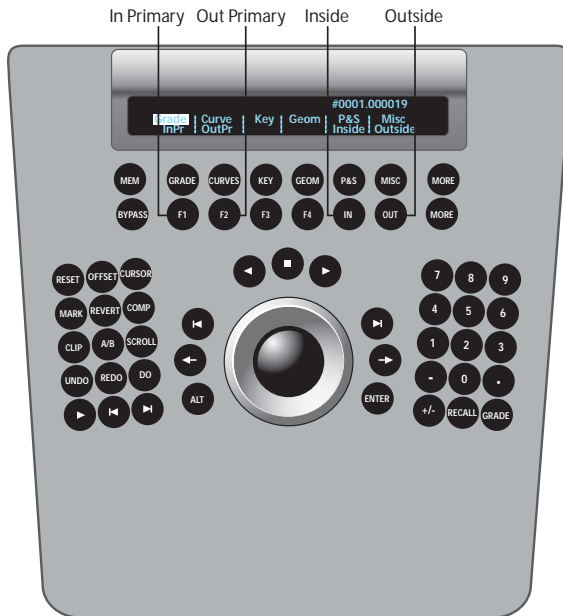


2. Do one of the following:

- Press the F1 option button to work on the initial primary grade.
- Press the F2 option button to work on final curve modifications.
- If you are colour grading a secondary, either a key or a geometry, use the numeric keys on the Navigation panel to select and enable a secondary layer. Press the number key once to select the layer, and then press it a second time to enable it. To enable layer 10, press the

minus button (-). To enable layer 11, press 0. To enable layer 12, press the decimal button (.).

3. If you are accessing the Grade menu after having created a geometry or key, do one of the following:
 - Press the IN option button to grade inside the secondary.
 - Press the OUT option button to grade outside the secondary.
4. On the Function panel, use the following controls.

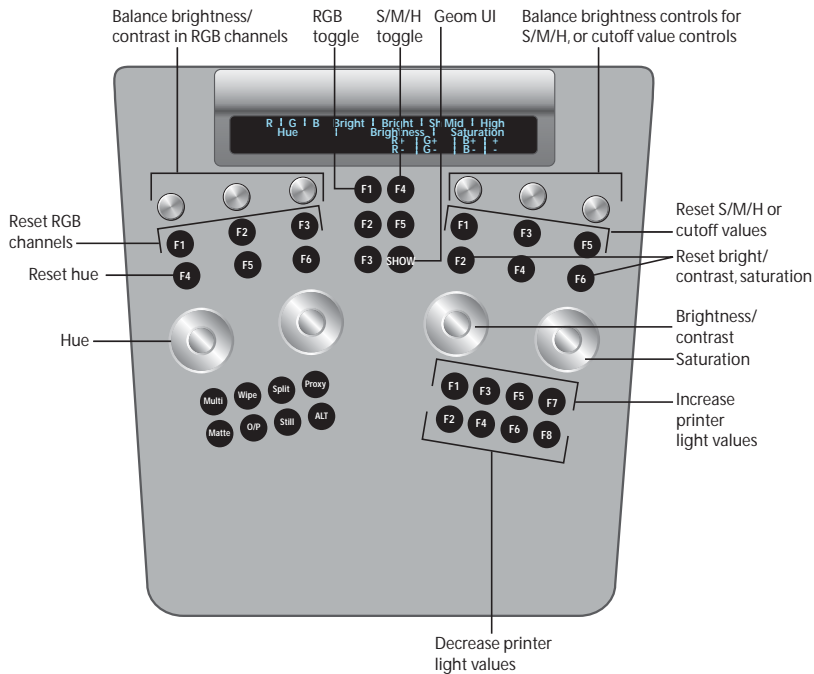

Use:	To:
Wheels	Modify overall hue, brightness/contrast, and saturation. Wheel 1=Hue Wheel 3=Brightness/contrast Wheel 4=Saturation To reset a wheel, press the button above it.
Knobs at top left	Balance brightness or contrast in the RGB channels. Knob 1=Red brightness/contrast Knob 2=Green brightness/contrast Knob 3=Blue brightness/contrast To toggle knob functionality, press the F1 button in the centre column. To reset a channel, press the button below it.

Use:	To:
Knobs at top right	Balance S/M/H brightness of the colours, or adjust cutoff values. Knob 4=Brightness in shadows/cutoff values Knob 5=Brightness in midtones/cutoff values Knob 6=Brightness in highlights To toggle knob functionality, press the F4 button in the centre column. To reset a knob, press the button below it.
First row of buttons at bottom right	Increase printer light values. F1=Red F3=Blue F5=Green F7=Overall
Second row of buttons at bottom right	Decrease printer light values. F2=Red F4=Blue F6=Green F8=Overall Press ALT for half point adjustments.
SHOW button	Toggle the geometry wireframe on or off.

Linear Mode


When Lin is enabled in the Setup Grade menu, the Colour Grading panel and the Function panel are activated with linear colour grading functionality.

Grading in Linear Mode Using the Colour Grading Panel

Use the Colour Grading panel to modify lift, gain, and gamma in the low, mid, and high levels of the image, or across the entire image.

To colour grade in Linear mode using the Colour Grading panel:

- On the Colour Grading panel, use the following controls.

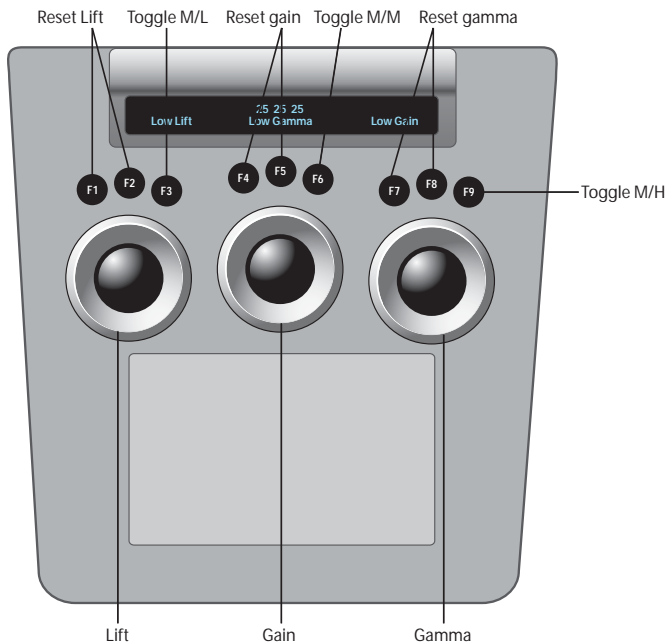

Use:	To:
First ring	Modify lift in the overall image. To reset, press the F1 button.
First jog ball	Modify lift in a range of colours. To reset, press the F2 button.
Second ring	Modify gain in the overall image. To reset, press the F4 button.
Second jog ball	Modify gain in a range of colours. To reset, press the F5 button.
Third ring	Modify gamma in the overall image. To reset, press the F7 button.
Third jog ball	Modify gamma in a range of colours. To reset, press the F8 button.
F3 button	Toggle between Master and Low levels.
F6 button	Toggle between Master and Mid levels.
F9 button	Toggle between Master and High levels.

Grading in Linear Mode Using the Function Panel


When the Grade menu is enabled, you can use the Function panel to:

- Modify hue, contrast, gain, and saturation values.
- Balance lift, gamma, and gain values for the red, green, and blue channels.
- Set black and white clip and reference values.

To colour grade in Linear mode using the Function panel:

1. Press the Grade button on the Navigation panel.

The In Primary, Out Primary, Inside, and Outside options are activated.

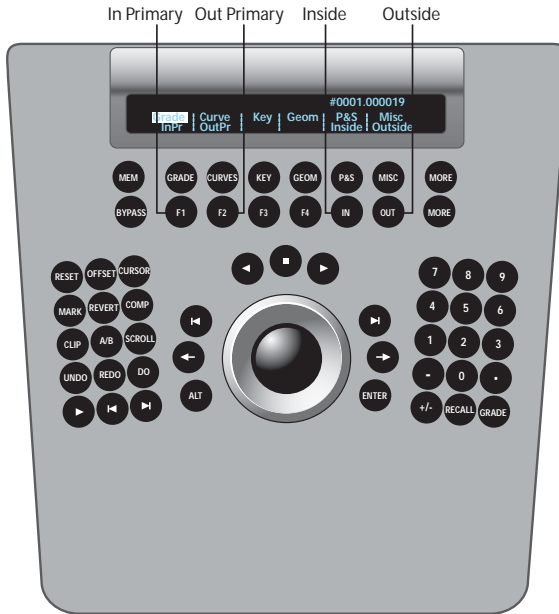


2. Do one of the following:

- Press the F1 option button to work on the initial primary grade.
- Press the F2 option button to work on final curve modifications.
- If you are colour grading a secondary, either a key or a geometry, use the numeric keys on the Navigation panel to select and enable a secondary layer. Press the number key once to select the layer, and then press it a second time to enable it. To enable layer 10, press the minus button (-). To enable layer 11, press 0. To enable layer 12, press the decimal button (.).

3. If you are accessing the Grade menu after having created a geometry or key, do one of the following:

- Press the IN option button to grade inside the secondary.
- Press the OUT option button to grade outside the secondary.

4. On the Function panel, use the following controls.

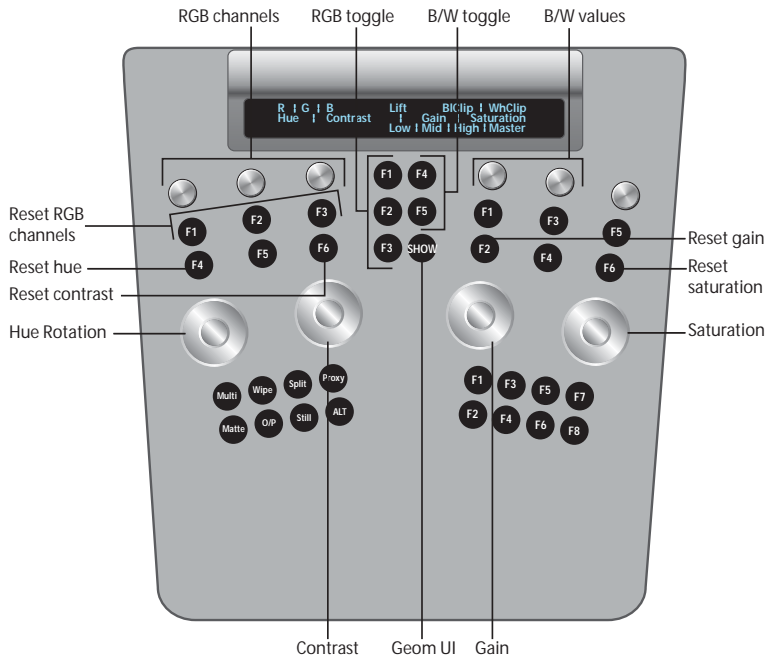

Use:	To:
Wheels	Modify overall hue, contrast, gain, and saturation. Wheel 1=Hue Wheel 2=Contrast Wheel 3=Gain Wheel 4=Saturation To reset a wheel, press the button above it.
Knobs at top left	Balance the RGB channels. Knob 1=Red Knob 2=Green Knob 3=Blue To reset a knob, press the button below it.
Buttons in left centre column	Toggle the type of value to be adjusted in the RGB channels (Knobs 1-3). F1=Lift F2=Gamma F3=Gain
Knobs at top right	Define values to clamp minimum and maximum luminance. Knob 4=Black Knob 5=White

Use:	To:
Buttons in right centre column	Toggle the type of black and white values to be adjusted (Knobs 4-5). F4=Clip F5=Reference
SHOW button	Toggle the geometry wireframe on or off.

Performing Curves Grading


When the Curves menu is enabled, you can use the Function panel to:

- Modify Hue and RGB curves either after the initial primary colour grade, or after the addition of any Lustre Sparks® effects.
- Adjust the Hue, Lightness, Saturation, and Luminance curves separately.
- Modify the entire curve uniformly or modify individual vertices for RGBCMY channels (red, green, blue, cyan, magenta, and yellow).

To modify Hue and RGB curves:


1. Press Curves on the Navigation panel.

The In Primary, Out Primary, Hue, and RGB options are activated.

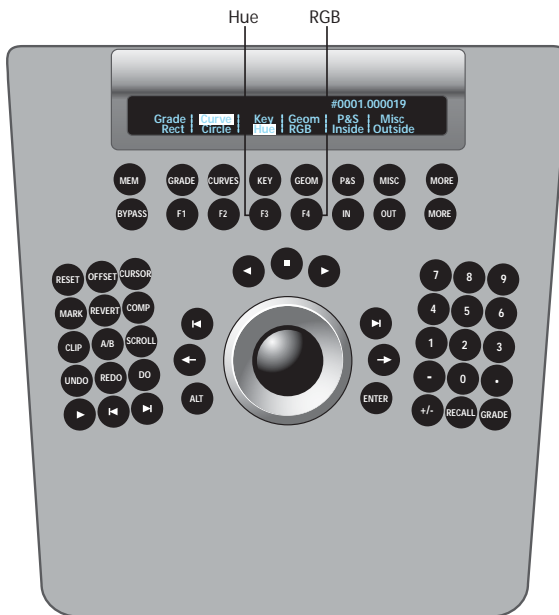

2. Do one of the following:
 - Press the F1 option button to indicate that you are working on the initial primary grade.
 - Press the F2 option button to indicate that you are working on final curve modifications.
3. Do one of the following:
 - Press the F3 option button to work on Hue curves.
 - Press the F4 option button to work on RGB curves.

4. On the Function panel, use the following controls.

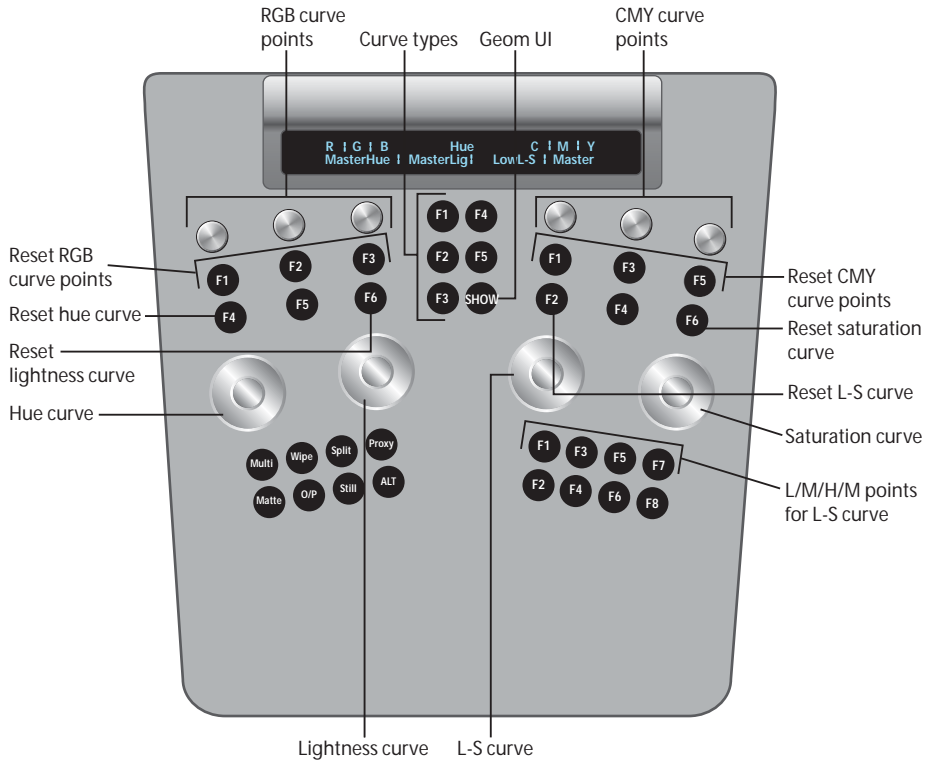

Use:	To:
Wheels	Make overall changes to curves. Wheel 1=Hue curves Wheel 2=Lightness curves Wheel 3=L-S curves Wheel 4=Saturation curves To reset a wheel, press the button above it.
Knobs at top left and top right	Individually modify RGBCMY curve points. Knob 1=Red Knob 2=Green Knob 3=Blue Knob 4=Cyan Knob 5=Magenta Knob 6=Yellow To reset a knob, press the button below it.

Use:	To:
Buttons in centre column	Select the type of curve to be modified using the RGBCMY curve points. F1=Hue F2=Light F3=Saturation If you press the F1 button when working with RGB curves, you are toggled to Hue curves.
First row of buttons at bottom right	Select the low point, mid point, high point, or all for the L-S curve. F1=Low F3=Mid F5=High F7=Master
SHOW button	Toggle the geometry wireframe on or off.

Generating Keys


When the Key menu is enabled, you can use the Function panel to:

- Generate a key from the original scan, or from the primary-graded result.
- Sample the image.
- Set one or more channels as the basis for the key.
- Adjust the key by setting softness and tolerance levels, modifying key edges, inverting the key, and linking layers.

To generate a key:


1. Press the Key button on the Navigation panel once to activate the Keyer menu, and a second time to enable the Keyer channel.

The Pick and SrcPrim options are activated.

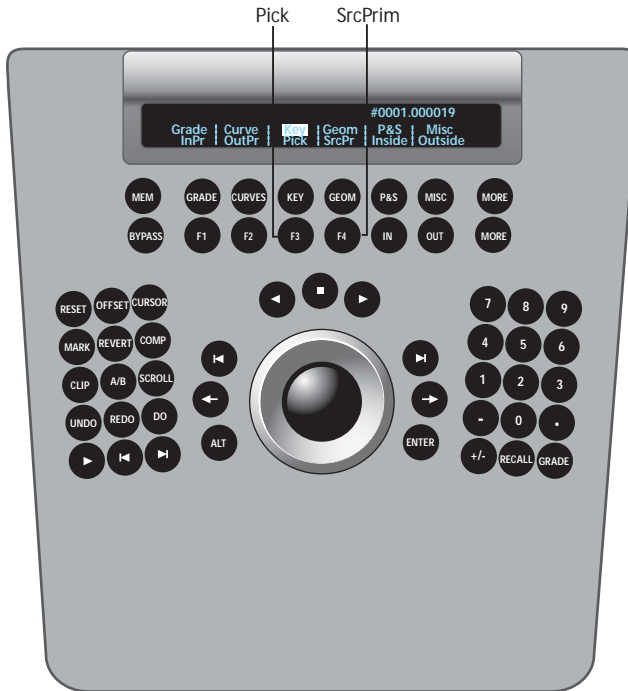

2. Use the numeric keys on the Navigation panel to select and enable a secondary layer. Press the number key once to select the layer, and then press it a second time to enable it. To enable layer 10, press the minus button (-). To enable layer 11, press 0. To enable layer 12, press the decimal button (.).
3. To sample the image, press the F3 option button. The trackball on the Navigation panel is activated as a picker, allowing you to move through the image. Press Pick again to pick the current pixel for the sample. To sample an area of the image, hold down the ALT button while in picker mode and draw a rectangular area of the image, and then release the ALT button.
4. To key after input primary grading has been performed and the input LUT has been applied, press the F4 option button. To switch back to the primary-graded result, press the button again.

5. On the Function panel, use the following controls to adjust the key for the sampled colour.

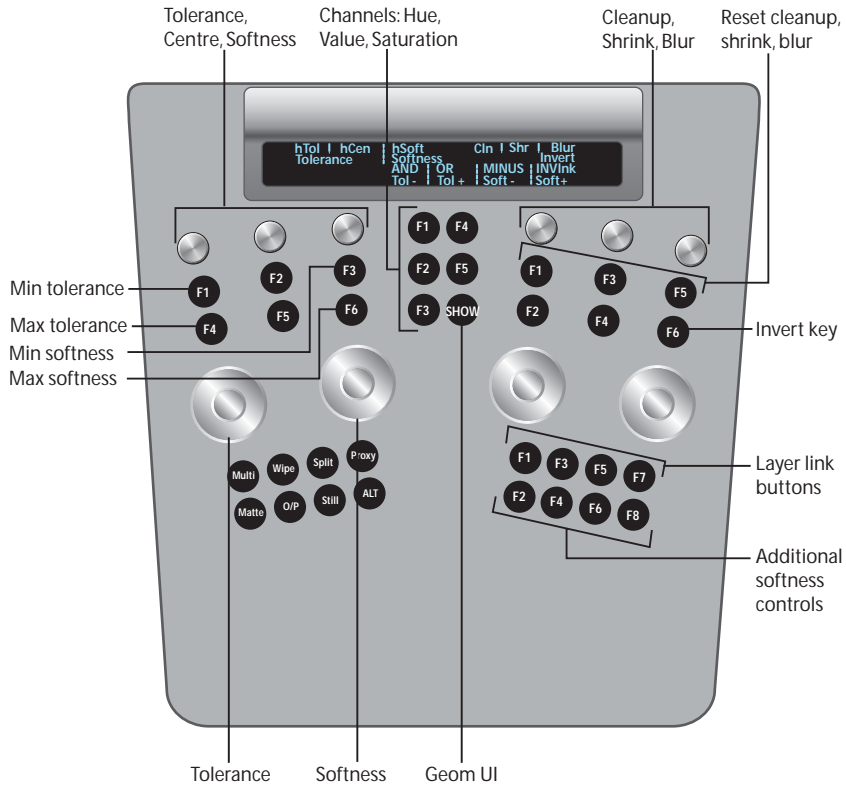

Use:	To:
Wheels	Set initial tolerance and softness around the picked colour. Wheel 1=Tolerance Wheel 2=Softness
Knobs at top left	Adjust min/max tolerance, centre tolerance, and min/max softness. Knob 1=Min/max tolerance Knob 2=Centre Knob 3=Min/max softness
Upper left F1 and F4 buttons	Enable either minimum or maximum tolerance (Knob 1) adjustments. F1=Minimum F4=Maximum

Use:	To:
Upper left F3 and F6 buttons	Enable either minimum or maximum softness (Knob 3) adjustments. F3=Minimum F6=Maximum
Buttons in centre column	Adjust tolerance, centre, and softness values separately for each of the channels forming the basis of the key. F1=Hue F2=Value F3=Saturation
Knobs at top right	Modify key edges and remove stray pixels from a key. Knob 4=Cleanup Knob 5=Shrink Knob 6=Blur To reset a knob, press the button below it.
Upper right F6 button	Invert the key.
First row of buttons at bottom right	Link secondary layers. F1=Add F3=Intersect F5=Subtract F7=Invert link
Second row of buttons at bottom right	Add or subtract tolerance and softness from the key. F2=Add tolerance F4=Subtract tolerance F6=Add softness F8=Subtract softness Press F3 to change the cursor into a picker prior to using any of the above buttons. When done adjusting tolerance and softness, press F3 again.
SHOW button	Toggle the geometry wireframe on or off.

Toggling the Keyer Button and Keyer Channels On and Off


Users can toggle the on or off status of the Keyer button visible on the control surface. Users also can enable or disable any or all of the Hue, Value, or Saturation channels.

To make the Keyer status visible on the control surface:

1. Press the Key button on the Navigation panel once to activate the Keyer menu, and then double-press to enable the Keyer channel and activate backlighting to show its enabled status.
2. Double-press the Key button again to disable the Keyer channel and de-activate backlighting.

To enable or disable the Hue, Value, or Saturation channels:

- On the Function panel, double-press F1, F2, or F3 to enable or disable Hue, Value, or Saturation.

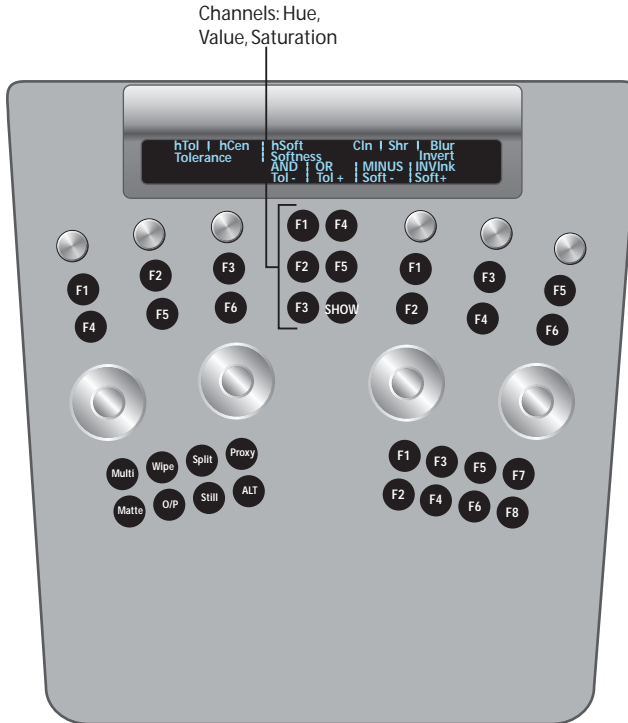

Creating and Grading Geometries

When the Geom menu is enabled, you can create and colour grade up to 12 secondaries by using the Function panel to:


- Select a geometry type.
- Modify geometries.
- Link secondary layers.
- Delete geometries.

After you have created geometries, you can use the Grade menu to colour grade them.

To create geometries:


1. Press the Geom button on the Navigation panel.

The Rectangle, Circle, Wipe (split screen), and Bezier (free-form geometry) options are activated.

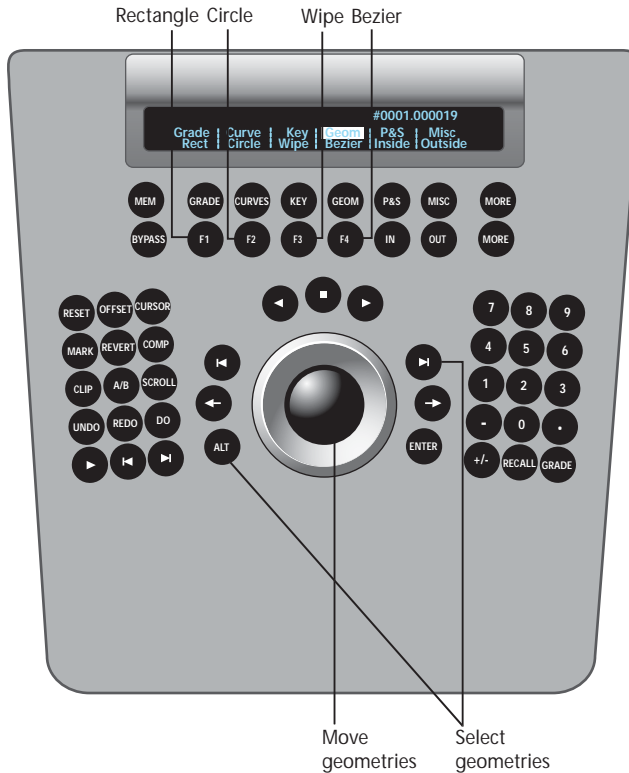

2. Use the numeric keys on the Navigation panel to select and enable a secondary layer. Press the number key once to select the layer, and then press it a second time to enable it. To enable layer 10, press the minus button (-). To enable layer 11, press 0. To enable layer 12, press the decimal button (.).
3. Do one of the following:
 - Press F1 to add a rectangle.
 - Press F2 to add a circle.
 - Press F3 to add a wipe.
 - Press F4 to add a Bezier shape using the pen or mouse.

4. Use the jog ball as a geometry mover and press the ALT and shot forward buttons to select the geometries on the current active secondary layer.
5. On the Function panel, use the following controls to adjust the geometry.

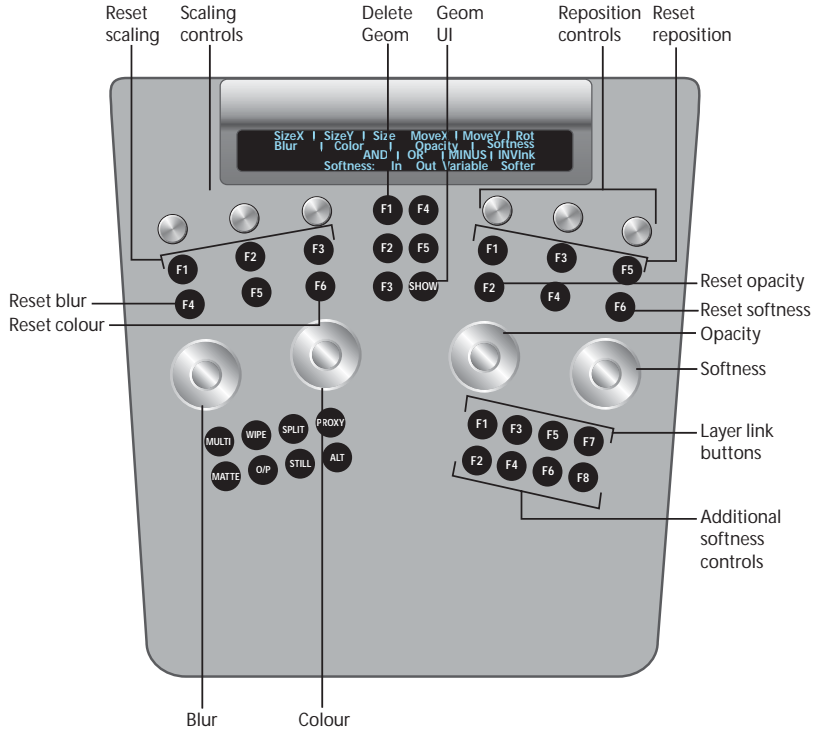

Use:	To:
Wheels	Modify the geometry's blur, colour, opacity, and softness. Wheel 1=Blur Wheel 2=Colour Wheel 3=Opacity Wheel 4=Softness The direction for edge softness is inwards or outwards depending on the direction that you rotate the wheel. To reset a wheel, press the button above it.
Knobs at top left	Scale the geometry. Knob 1=Size X Knob 2=Size Y Knob 3=Master (scales in locked proportions) To reset a knob, press the button below it.

Use:	To:
Knobs at top right	Move the geometry. Knob 1=Move X Knob 2=Move Y Knob 3=Rotate To reset a knob, press the button below it.
First row of buttons at bottom right	Link secondary layers. F1=Add F3=Intersect F5=Subtract F7=Invert link
Second row of buttons at bottom right	Further modify softness. F2=Apply softness inside mask border F4=Apply softness outside mask border F6=Apply variable softness F8=Change softness type
F1 button in centre column	Delete the currently active geometry.
SHOW button	Toggle the geometry wireframe on or off.


- To colour grade the geometry, select either the Inside or Outside option button depending on whether colour grading should occur inside or outside the geometry. See [“Performing Colour Grading”](#) on page 26.

Geometry Invert Functionality

Users can invert geometries on the current secondary layer using the Autodesk control surface.


To invert geometries using the Autodesk control surface:

- On the Function panel, press the F4 button in the centre column.

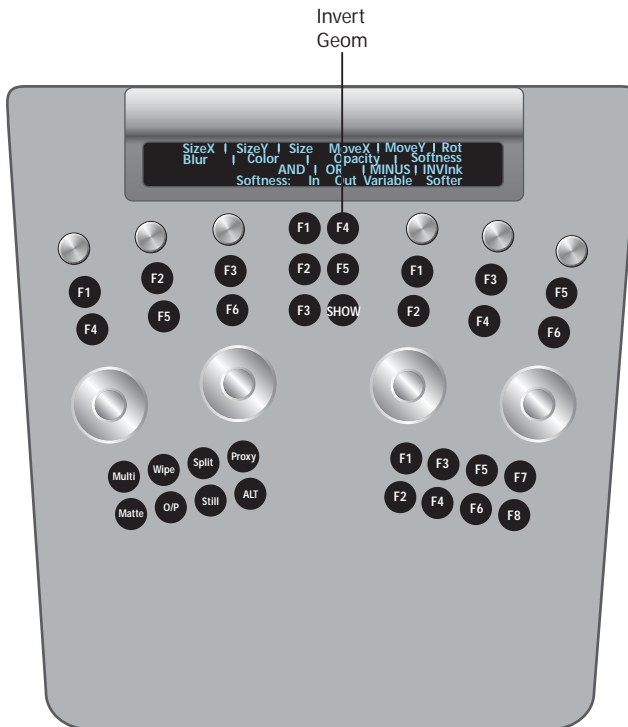

Cycling Among Geometries

You can now move from one geometry to the next in the order of their creation.

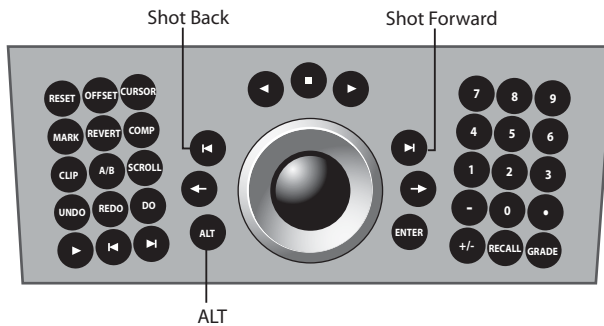

To cycle among geometries:

- With the Geom menu enabled, hold down the ALT button on the Navigation panel and then press the Shot Forward or Shot Back button to cycle forward or backwards.


Modifying the Appearance of the Autodesk Control Surface

You can customize the appearance of the control surface by accessing options from the bottom More button on the Navigation panel. Use these options to determine the brightness of:

- Backlighting for all buttons
- Backlighting for a button being pressed
- Backlighting for active and available buttons
- The digital display

To modify the appearance of the Autodesk control surface:

1. Press the bottom More button on the Navigation panel.

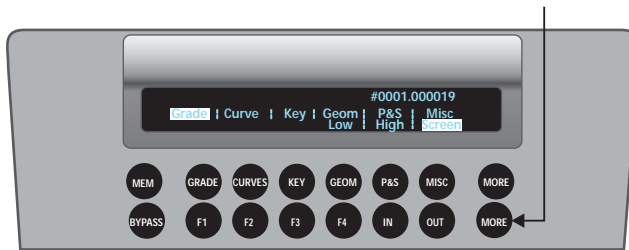

The Low, High, and Screen options appear in the digital display.

2. Press one of the following option buttons and use the ring portion of the trackball to increase or decrease brightness.

Press:	To change the brightness of:
F4	Backlighting for all buttons on the control surface. The change is visible as you modify with the ring.
IN	Backlighting for a button that is being pressed. The change is visible only when you press a button after having used the ring.
OUT	The digital display. The change is visible as you modify with the ring.



The Tangent CP100 Control Surface

Summary


<i>About the Tangent CP100 Control Surface</i>	49
<i>Customizing the View</i>	51
<i>Toggling Play Mode</i>	52
<i>Caching Memory</i>	52
<i>Navigating the Storyboard</i>	53
<i>Undo List</i>	54
<i>Resetting Parameters</i>	56
<i>Copying Grades</i>	57
<i>Adding and Moving Keyframes</i>	58
<i>Repositioning Shots</i>	59
<i>Primary Colour Grading</i>	60
<i>Modifying the Hue, Saturation, and Lightness Curves</i>	63
<i>Secondary Colour Grading</i>	63

About the Tangent CP100 Control Surface

The Tangent CP100 control surface is designed to improve interactivity when colour grading film and video footage. You can accomplish many of the tasks you do in the Lustre user interface using the Tangent CP100 control surface.

The Tangent CP100 control surface is only supported on the Master Station.

2 The Tangent CP100 Control Surface

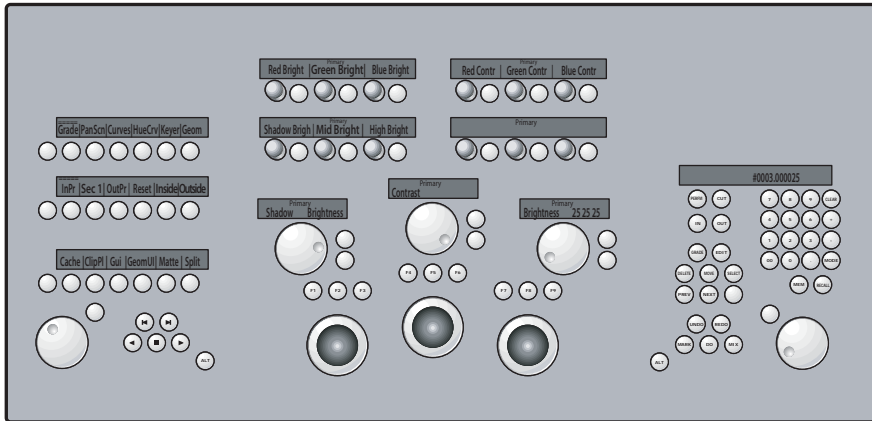

You can do the following tasks with the control surface:

- Customize the view
- Toggle play mode
- Cache memory
- Navigate the Storyboard
- Undo and redo operations
- Copy grades from one shot to another
- Create and modify keyframes
- Reposition shots
- Perform primary colour grading
- Modify Hue curves
- Perform secondary colour grading

HINT: While you learn how to do each of these tasks, show the user interface so that you can view the results in the menus.

Most buttons and dials on the control surface are labelled. For information on connecting the Tangent CP100 control surface, refer to the *Autodesk Lustre Software Installation Guide* for your platform.

To operate the control surface:

- Do any of the following:
 - Press a button to select the displayed option.
 - Turn a dial to increase or decrease the value of the displayed channel or parameter. Turn clockwise to increase the value. Turn counter-clockwise to decrease it.
 - Use the Player controls to navigate the Storyboard.
 - Use the trackballs to modify the displayed parameter.


Customizing the View

Use the controls on the lower right of the control surface to change the view as you work on your grades. For example, enable Half to view a half-resolution version of your shot in the Player.

You can select any of the following options.


Control Surface	Description	Hot Key or UI Option
GUI	Toggles the full-screen Player.	ENTER
Geom UI	Shows or hides a geometry for the current secondary.	Show button in Secondaries menu
Matte	Switches between secondary view and result view.	F11 and F12
Split	Switches on and off split view in the Player. When you enable Split, you can press the PERFM button to enable multi-view and view up to 16 shots, or press the CUE button to switch between horizontal and vertical split view. These buttons are located on the upper right of the control surface.	F5, F3, and F4
Half	Switches between the full-resolution and half-resolution (proxy) version of your shot in the Player. If you have not rendered a proxy, an X appears in the Player.	F9
Zoom/Home	Switches between the 1x and 2x zoom.	F10
Render	Switches between a rendered version of your shot and output view. If you have not rendered the shot, an X appears in the Player.	P
Label	Toggles the shot name text on the image.	W
PRIM	Toggles the display of your shot. Displays your shot as it appears after modifications are made from the Grading or Curves menu, or as it currently appears (with the entire colour grade applied). You can use this option only after you have added secondaries.	I
Result	Displays the shot as it currently appears—with the grade applied.	O

NOTE: Press the MORE button to view all the available options.

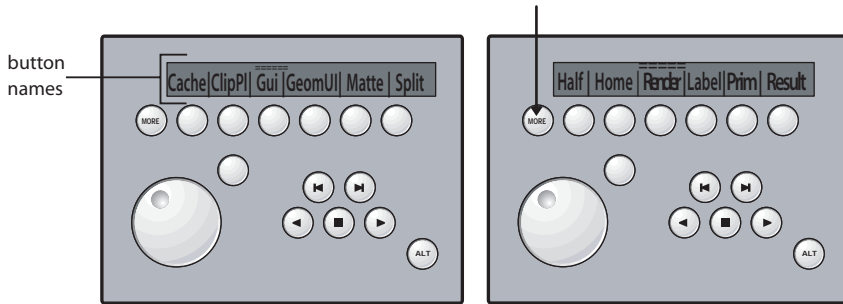


Toggle Play Mode

You can loop play a shot or the entire Storyboard using the ClipPL button. This button corresponds to the Play Mode button in the user interface.

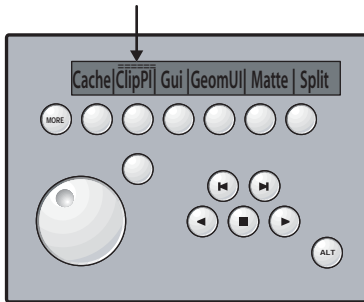

Caching Memory

When a shot does not play back in real time, you can cache the frames into memory using the Cache button or by pressing **M**.

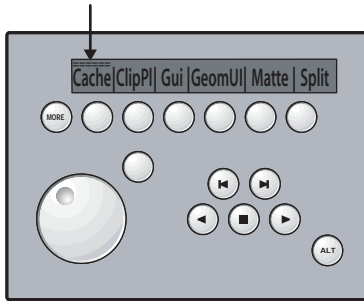


Navigating the Storyboard

Use the Player controls on the lower right and the scrolling controls on the left to navigate the Storyboard.

Use the left dial (jog knob) and transport controls to play and scrub the Storyboard. You can also use the Alt button to switch between shots assigned to Playhead A and Playhead B.


Player Controls

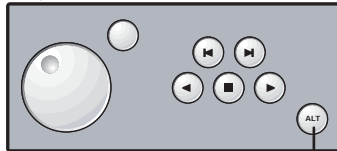

Playhead button

Use the right dial to scroll through the shots in the Storyboard. When you scroll, a yellow arrow in the Storyboard marks your position. You can then select the shot by pressing the button next to the dial.

NOTE: If the shot is outlined in blue, you are in copy mode. See [“Copying Grades”](#) on page 57.

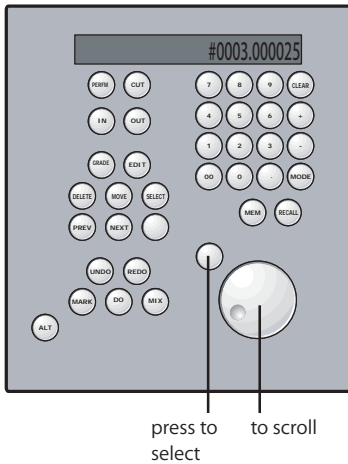


You can show the Storyboard all the time or only when you scroll. To show the Storyboard all the time, press **TAB** on the keyboard. To show the Storyboard only when you scroll, first hide it by pressing **TAB**, and then scroll the Storyboard. In this mode, you hide the Storyboard again by pressing the button next to the scroll dial.

Undo List

The undo list works differently on the control surface than it does in the user interface. Use the buttons on the lower right of the control surface to work with the undo list.

Saving to the Undo List

When you use the control surface, you must save your changes to the undo list. Undo lists are saved on a shot-by-shot basis. To save a change to the undo list, press Do. You can then press Undo and Redo to go through the undo list.

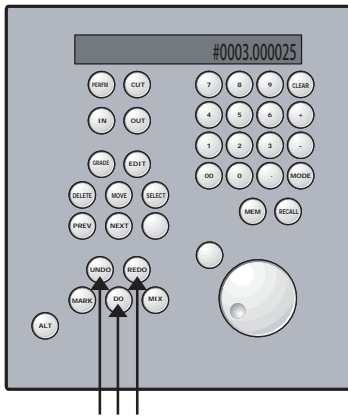


Reverting to Previous Grades

Use the Alt button on the lower right to toggle between the grade that was applied to a shot when you first selected it in the Storyboard and the current grade.

HINT: To save the reverted stage to the undo list, press Do.

Comparing Grades

You can compare the current image with the grade you last committed to the undo list. To toggle between these settings, use the Mix button.

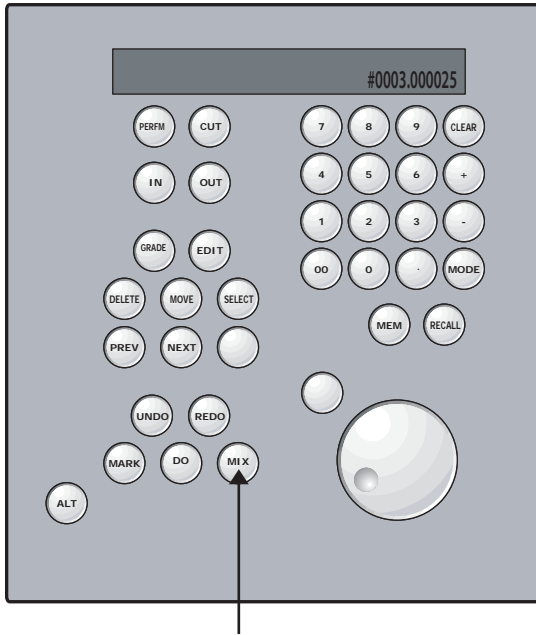


Resetting Parameters

On a shot-by-shot basis, you can reset the parameters set in some menus. You can also reset a single parameter.


To reset a parameter:

- Press the Reset button associated with the dial or trackball.

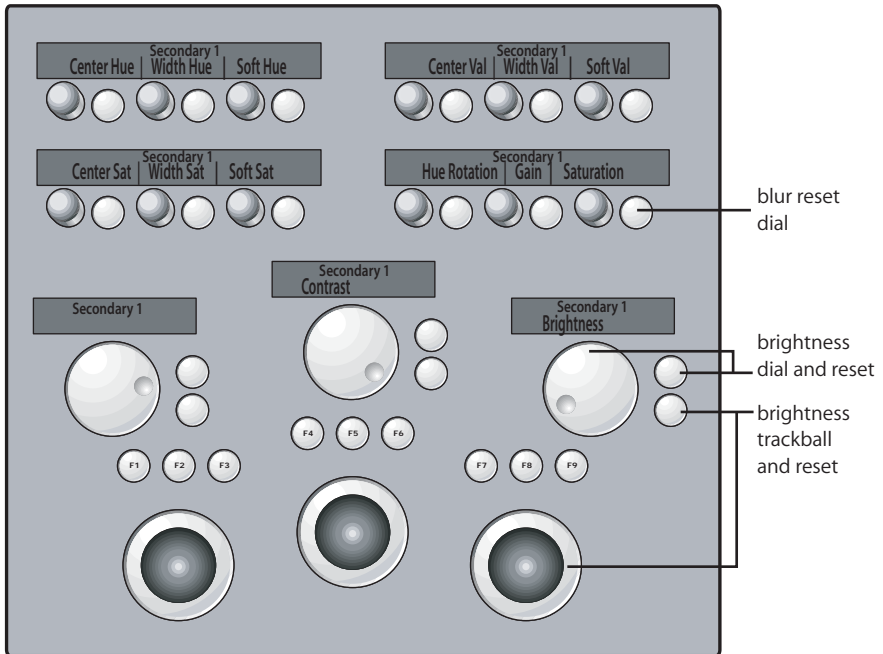

To reset a menu:

- Select the menu and then enable Reset. For example, select Geom, and then press Reset to clear all secondaries.

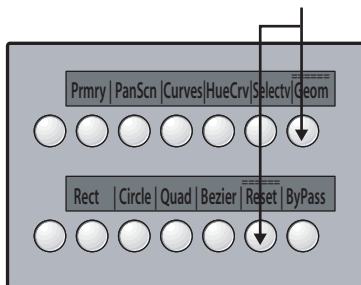

Copying Grades


You can temporarily or permanently copy a grade from another shot in the Storyboard to the current shot.

To copy grades:

1. Do one of the following:

- Press Prev or Next to temporarily apply the grade from the previous or next shot to the current shot (outlined in red or magenta). Press Prev or Next multiple times to move through the shots in the Storyboard. The selected shot is outlined in blue.
- Press Offset and then scroll through the shots. As you scroll, the grades are temporarily applied to the current shot (outlined in red or magenta). The selected shot is outlined in blue.

HINT: Press the Offset button again to switch to scroll mode.

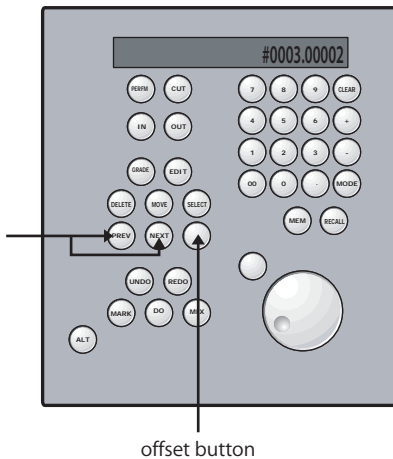


2. Press Do to permanently copy the grade from the shot outlined in blue to the current shot.

Adding and Moving Keyframes

When you animate parameters, you can set keyframes using the Mark button. You can also adjust the timing of the first and last keyframes in the shot.


To add a keyframe:

1. Go to the frame where you want to add the keyframe.
2. Press Mark.

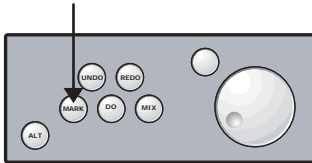

To adjust the timing of an existing keyframe:

- Do any of the following:
 - Press In and then use the right dial to move the first keyframe.
 - Press Out and then use the right dial to move the last keyframe.

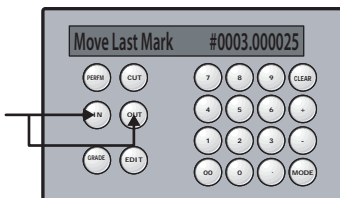


Repositioning Shots


You can reposition a shot by scaling it, or by panning it vertically and horizontally.

To reposition a shot:

1. Enable PanScn.

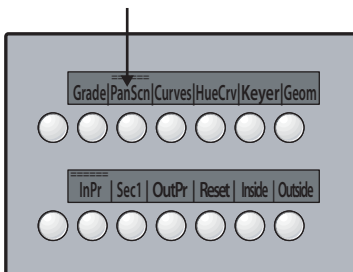

- Use the following controls to reposition the shot.

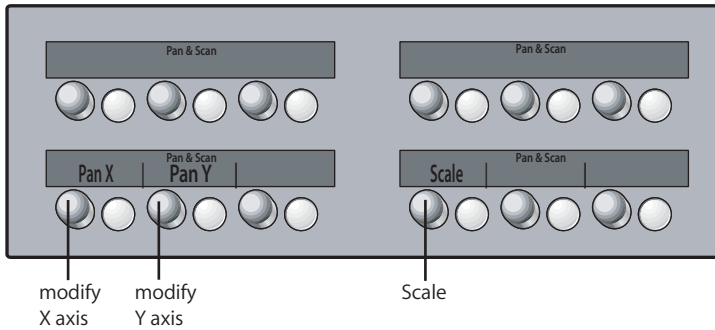

Primary Colour Grading

You can use the dials and trackballs in the centre of the control surface to perform primary colour grading. Primary colour grading can be done from the Grade menu.


Logarithmic Mode: Modifying Brightness and Contrast

You can modify brightness and contrast in several ways from the Grade menu. You can modify:


- Overall brightness and contrast of the red, green, and blue channels together
- Overall brightness and contrast of the red, green, and blue channels separately
- Brightness balance and contrast balance
- Brightness in the shadows, midtones, and highlights

To modify brightness and contrast:

- Enable Grade and then do one of the following:
 - Enable InPr to modify the input primary values.
 - Enable OutPr to modify the output primary values.

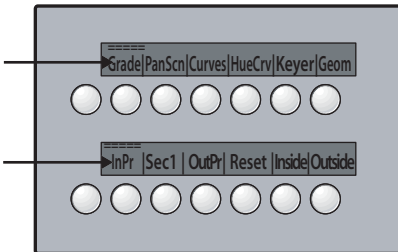

- Use the following controls to perform primary colour grading.

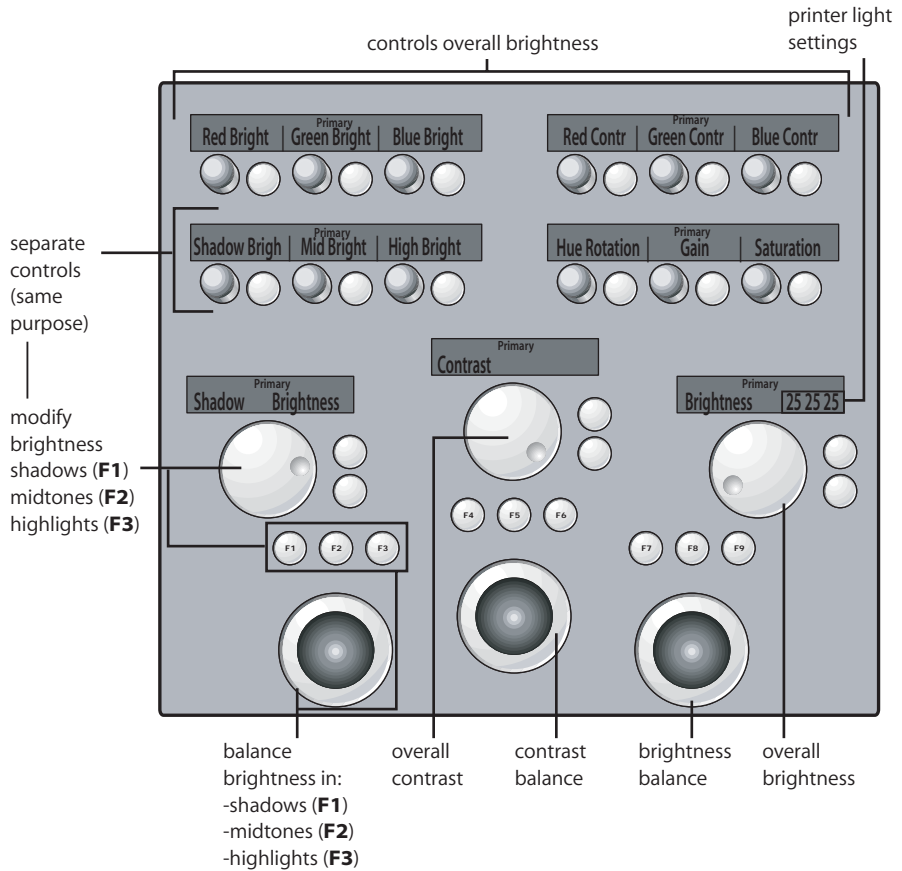


Linear Mode: Modifying Gamma, Gain, and Lift

You can modify gamma, gain, and lift in several ways from the Grading menu. You can modify:


- Overall gamma, gain, and lift settings of the red, green, and blue channels together
- Overall gamma, gain, and lift settings of the red, green, and blue channels separately
- Gamma, gain, and lift balance settings

To modify gamma, gain, and lift:

1. Enable Grade and then do one of the following:
 - Enable InPr to modify the input primary values.
 - Enable OutPr to modify the input primary values.

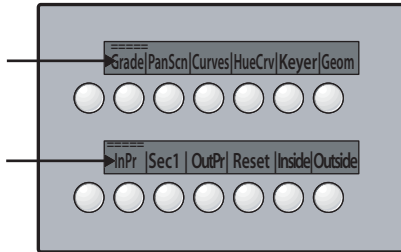

2. Use the following controls to perform primary colour grading.

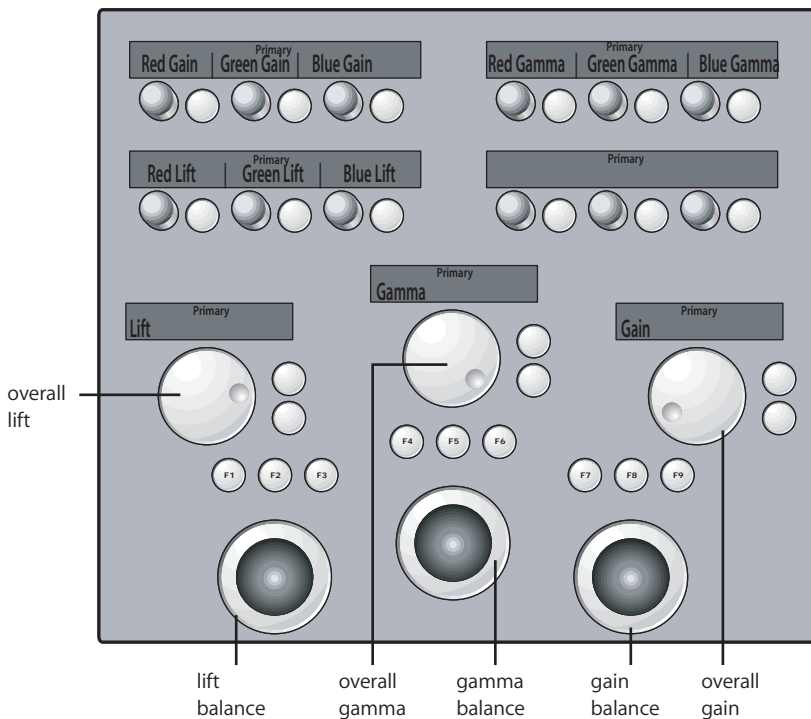


Modifying the Hue, Saturation, and Lightness Curves


You can modify the hue, saturation, and lightness curves that appear in the Curves menu. You can modify the entire curve uniformly or modify individual vertices for RGB/CMY channels (red, green, blue, cyan, magenta, and yellow). You must toggle between controls that modify the position of the red, green, and blue vertices and those that modify the position of the cyan, magenta, and yellow vertices.

To modify hue, saturation, and lightness curves:

1. Enable HueCrv to access controls for the red, green, and blue vertices.

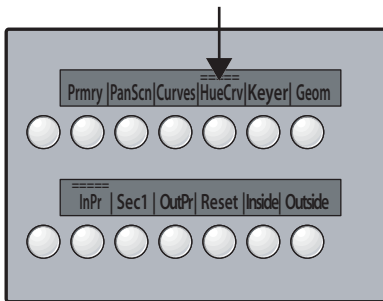

2. Use the following controls to modify the hue, saturation, and lightness curve at each displayed vertex.

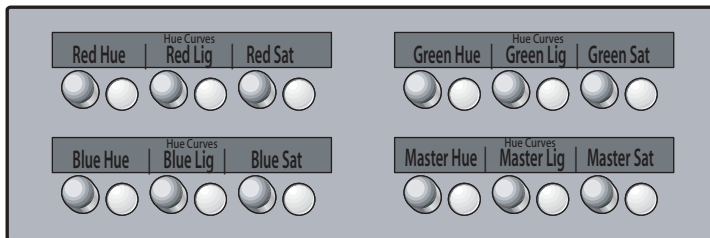


3. Press HueCrv again to access controls for the cyan, magenta, and yellow vertices, and then modify the curves.

Secondary Colour Grading


You can colour grade up to eight secondaries from the control surface.

To access a secondary:


1. Enable Keyer.

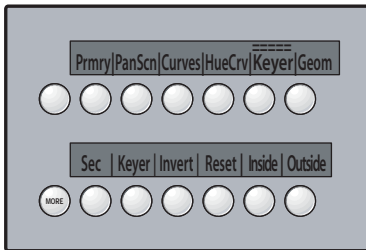

The secondary controls for the first secondary appear. Once you enable and key a secondary, you can modify hue, gain, and saturation. You can also modify the brightness and contrast of the current secondary.

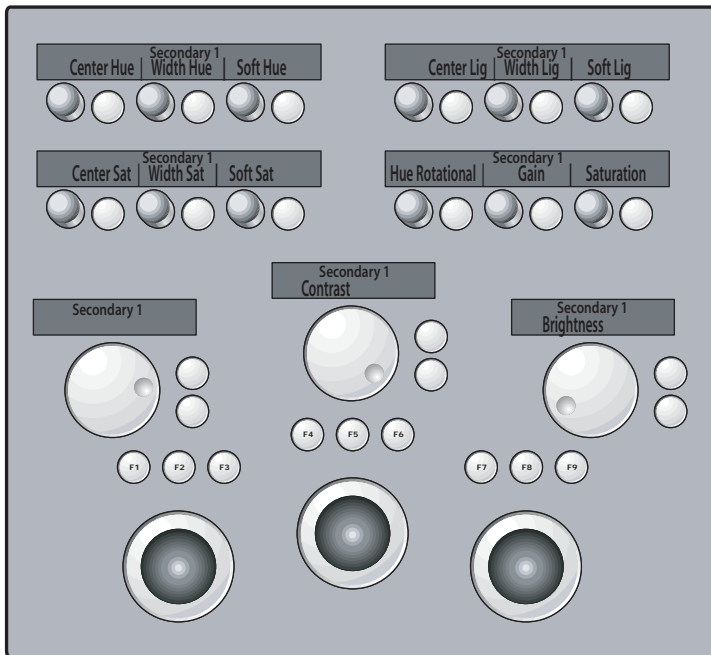

- On the right side of the control surface, press Recall and then press a number between one and eight to go to that secondary. You can also press Selectv to toggle through the eight secondaries.

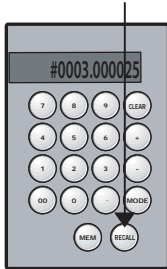


Applying Secondaries to the Shot

Use the second row of buttons on the left side of the control surface to set basic parameters for secondaries.

Press:	To:
Sec	Switch on and off the current secondary.
Keyer	Switch on and off the Keyer for the current secondary.
Invert	Invert the key for the current secondary.
Reset	Reset the key for the current secondary.

Enable the Sec button to apply the displayed secondary to the shot.

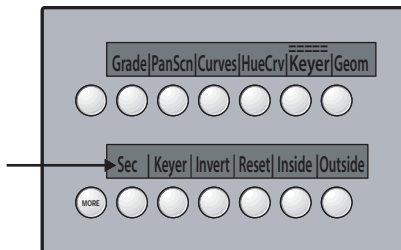

Creating Keys


Enable the Keyer button and then use the controls in the centre of the control surface to create a key.

To create a key:


1. Enable Keyer in the upper control surface menu, and then enable Keyer in the lower menu.
2. To sample initial softness and tolerance, press F1 on the control surface and then use the left trackball to position the colour picker over the image. Press F1 again to sample the image.

NOTE: Sampling from the control surface works slightly differently than sampling from the Lustre user interface. When you sample from the control surface, the value and saturation channels are set to the maximum softness. When you sample from the user interface, the value and saturation channels are not set to maximum values.


3. Set the hue, brightness/gain, and saturation levels for the key. Each value is modified according to the original sample—you can adjust the centre tolerance value, as well as the softness and tolerance ranges.

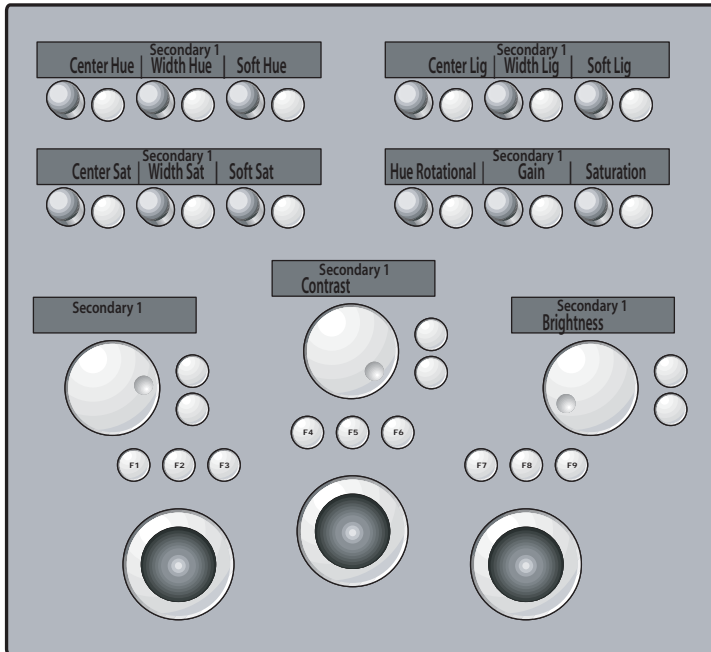

- Press More (upper left) to shrink, blur, or clean up the edges of the key.

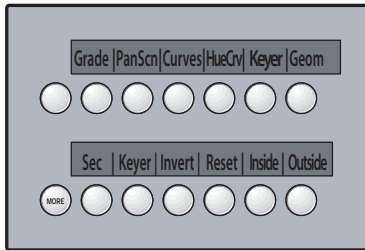

The Cleanup, Shrink, and Blur controls appear.

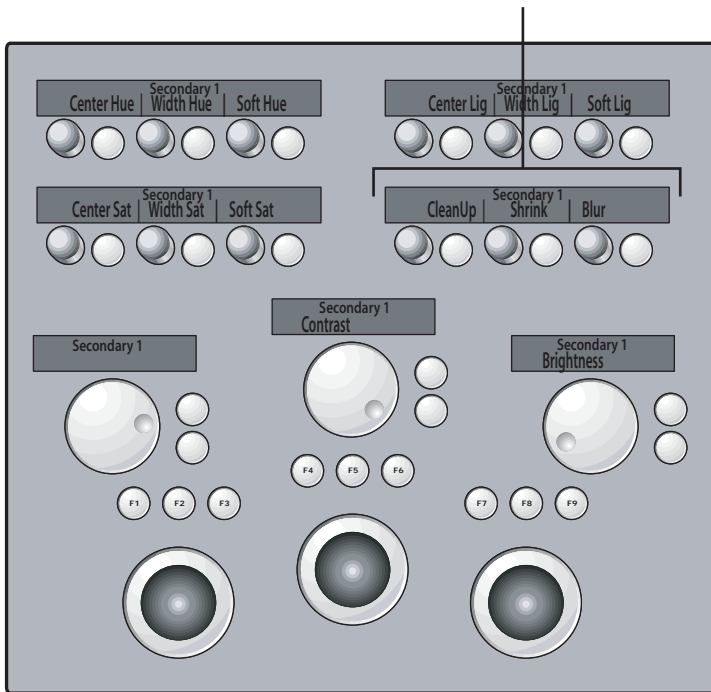


Creating Geometries


You can create and apply basic and free-form geometries to each secondary.

To create a geometry:


1. Enable Geom and then select the shape from the second row.

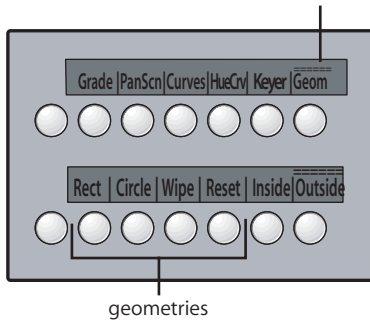


2. Use the controls in the centre of the control surface to modify the shape of the geometry, as well as its colour, opacity, and position on the image. You can also apply a blur.

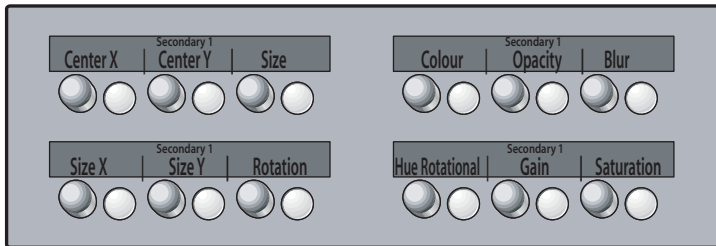

3. To set softness, use the Geometry Softness dial.

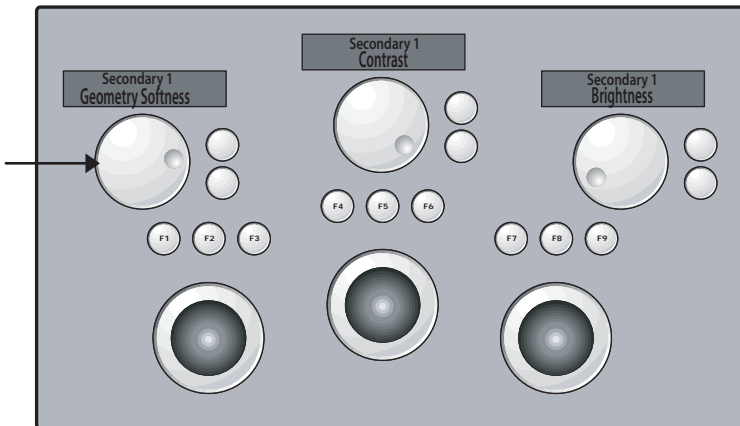

- To apply logical operations to the geometry, or invert the geometry, press the More button associated with the second row on the left.

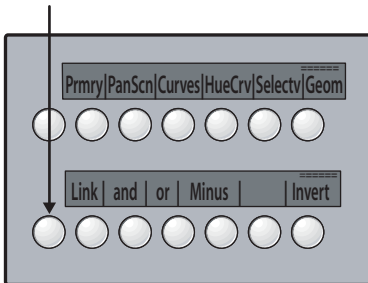


Moving Geometries

You can move geometries from the control surface.

To move a geometry:

- To select a geometry, press F1 on the control surface and then use the left trackball to position the cursor over the geometry. Press F1 again to select it. Alternatively, press F2 and F3 to move back and forth through the geometries (listed in the Axes list).
- Use the left trackball to move the geometry.

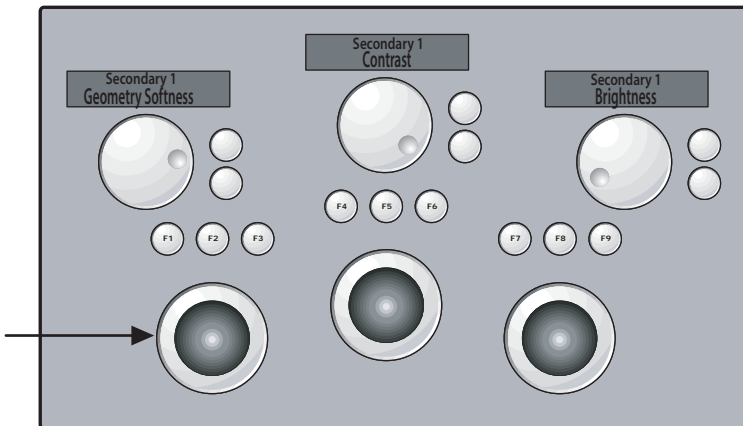

2 The Tangent CP100 Control Surface

index

Index

A

- animating
 - with the Tangent CP100 58
- Autodesk control surface
 - individual surface descriptions 2
 - overview 2

B

- bypassing
 - menus with the Autodesk control surface 24

C

- caching
 - memory with the Tangent CP100 52
- colour grading
 - curves grading 36, 63
 - primaries with the Autodesk control surface 26
 - secondaries with the Autodesk control surface 43
 - secondaries with the Tangent CP100 63
- comparing
 - grades with the Autodesk control surface 17
 - grades with the Tangent CP100 55
- control surfaces
 - Autodesk control surface 2
 - Tangent CP100 49
- copying
 - grades with the Autodesk control surface 20
 - grades with the Tangent CP100 57
- cursor
 - activating on the Autodesk control surface 9
- curves colour grading

- with the Autodesk control surface 36
- with the Tangent CP100 63

- customizing
 - the view with the Autodesk control surface 10
 - the view with the Tangent CP100 51

G

- geometries
 - creating with the Autodesk control surface 43
 - creating with the Tangent CP100 67
- Grade bin
 - accessing with the Autodesk control surface 17
- grades
 - applying from the Grade bin 17
 - comparing with the Autodesk control surface 17
 - comparing with the Tangent CP100 55
 - copying with the Autodesk control surface 20
 - copying with the Tangent CP100 57
 - reverting to previous with the Autodesk control surface 17
 - reverting to previous with the Tangent CP100 55

- grading
 - See colour grading

K

- keyframes
 - adding and moving with the Tangent CP100 58
- keying
 - with the Autodesk control surface 39
 - with the Tangent CP100 65

L

- Linear mode
 - grading with the Autodesk control surface 32
 - grading with the Tangent CP100 61
- Logarithmic mode
 - grading with the Autodesk control surface 27
 - grading with the Tangent CP100 60
- looping
 - using the Autodesk control surface 8
 - using the Tangent CP100 52

M

- memory
 - caching with the Tangent CP100 52
- menus
 - bypassing with the Autodesk control surface 24
 - resetting with the Autodesk control surface 24
 - resetting with the Tangent CP100 56
- mouse functionality
 - activating on the Autodesk control surface 9

N

- navigating
 - with the Autodesk control surface 5
 - with the Tangent CP100 53

P

- panning
 - with the Autodesk control surface 9
- parameters
 - resetting with the Tangent CP100 56
- play modes
 - toggling with the Autodesk control surface 8
 - toggling with the Tangent CP100 52
- playheads
 - toggling with the Autodesk control surface 16
- primary colour grading
 - in Linear mode with the Autodesk control surface 32
 - in Linear mode with the Tangent CP100 61
 - in Logarithmic mode with the Autodesk control surface 27
 - in Logarithmic mode with the Tangent CP100 60

R

- redoing
 - with the Autodesk control surface 16
 - with the Tangent CP100 54
- reference images
 - toggling playheads with the Autodesk control surface 16
- repositioning
 - shots with the Autodesk control surface 25
 - shots with the Tangent CP100 59
- resetting
 - with the Autodesk control surface 24
 - with the Tangent CP100 56
- reverting to previous
 - grades with the Autodesk control surface 17
 - grades with the Tangent CP100 55

S

- secondary colour grading
 - creating geometries with the Autodesk control surface 43
 - creating geometries with the Tangent CP100 67
 - creating keys with the Autodesk control surface 39
 - creating keys with the Tangent CP100 65
 - with the Tangent CP100 63
- shots
 - repositioning with the Autodesk control surface 25
 - repositioning with the Tangent CP100 59
- Storyboard
 - navigating with the Autodesk control surface 5
- storyboard
 - navigating with the Tangent CP100 53

T

- Tangent CP100
 - overview 49

U

- undoing
 - with the Autodesk control surface 16
 - with the Tangent CP100 54

V

view options

 accessing with the Autodesk control surface

 10

 accessing with the Tangent CP100 51

Z

zooming

 with the Autodesk control surface 9

